

Fujitsu Storage
ETERNUS AX series All-Flash Arrays,
ETERNUS HX series Hybrid Arrays

SnapMirror Configuration and Best Practices Guide
for ONTAP 9.11.1

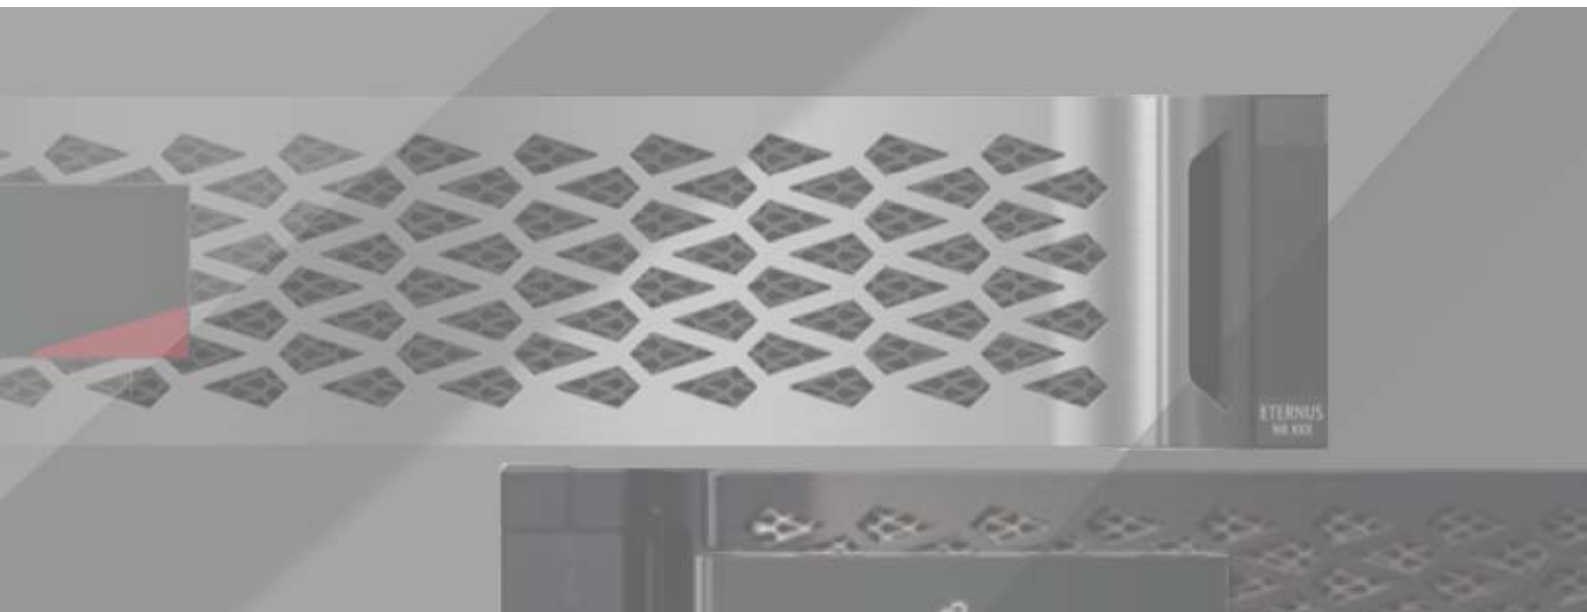


Table of Contents

1. Solution Overview.....	8
Purpose and Intended Audience	9
What's New for SnapMirror?	9
SnapMirror Overview	10
Use Case Summary	11
Near-Line Backup	11
DR	11
DR Testing and Application Testing and Development	11
Data Distribution and Remote Data Access	11
Backup Offloading and Remote Tape Archiving	11
Unified Architecture Flexibility	12
Data Center Deployments	12
Private Cloud Deployments	12
Hybrid Cloud Deployments	12
Public Cloud Deployments	12
2. Networking Basics	13
Common ONTAP Networking Terms	13
ONTAP Networking Roles Overview	14
Intercluster Networking	15
Intercluster Multipathing and Network Redundancy	15
Failover Mode	16
Multiplexing mode	17
Switch-Based Link Aggregation for Multipathing	18
Network Connections for Intercluster SnapMirror	19
Share or Dedicate Ports?	20
Firewall Requirements	21
3. Replication Basics	22
Licensing	22
SnapMirror Asynchronous Technology	22
Unified Data Protection	23
Load-Sharing Mirror	25
SnapMirror Synchronous (SM-S)	26
SnapVault Technology	26

SnapMirror for Cloud Volume Platforms	27
Cloud Volumes ONTAP	27
Amazon FSx for ONTAP	27
4. SnapMirror Configuration.....	28
Cluster Peering	28
SVM Peering	29
SnapMirror Relationship	29
Fan In and Fan Out	31
Cascade Relationship	32
Dual-Hop Volume SnapMirror	33
Protection Policies	33
Policy Types	34
Standard Asynchronous Protection Policies	35
SnapMirror Schedules	40
Create a SnapMirror Relationship	41
Baseline Transfer During Initialization of SnapMirror Relationship	42
Manual Update to the SnapMirror Relationship	43
5. Converting Between Different Data Protection Modes	44
Convert a Legacy DP SnapMirror Relationship to an XDP SnapMirror Relationship	44
Convert SnapMirror to Unified Replication	47
6. SnapMirror and ONTAP Feature Interaction	51
SnapMirror and Snapshot Copies	51
SnapMirror and Qtrees	51
SnapMirror and FlexGroup Volumes	52
SnapMirror for SVM Protection	52
SVM DR Support for FlexGroup Volumes	53
SVM Data Mobility	53
SnapMirror and FlexClone Technologies	54
SnapMirror and Storage Efficiency	55
SnapMirror and Volume Move	55
SnapMirror for Drive Shelf Failure Protection	55
SnapMirror and Volume Autosize	56
SnapMirror and NDMP	56
SnapMirror and FabricPool	56

7. Performance.....	57
Calculate SnapMirror and SnapVault Throughput for Performance	58
SnapMirror and Network Compression	59
Maintaining the Same RPO Level	59
Improve Your RPO Without Increasing the Bandwidth	59
Use the Network Bandwidth for Other Purposes	59
Speeding Up the Initial Transfers	59
What Is SnapMirror Network Compression?	60
Enable and Disable Network Compression	60
Reporting the Compression Ratio	61
SnapMirror Throttling	61
How to Change TCP Receive Buffer Size	63
Concurrent Replication Operations	63
Recommended Replication Intervals	63
Network Sizing Requirements	64
Network Sizing Requirements for Intercluster Replication	64
Network Sizing Requirements for Intracluster Replication	64
8. S3 SnapMirror	65
9. Interoperability	66
10. Troubleshooting Tips	67
Troubleshooting Cluster Peer Relationships	67
Troubleshooting SVM Peer Relationships	68
Understanding SnapMirror Relationship Status	68
Troubleshooting SnapMirror Relationships	69
11. Best Practices for DR Configurations.....	71
12. Configuration and Failover for DR.....	72
Environment Failover Requirements and Assumptions	72
Preparing the Destination for Failover	73
NAS and SAN Environments	73
NAS Environments	74
SAN Environments	75
Performing a Failover	75
NAS Environment	75
SAN Environment	76
Post failover Volume Configuration	76

List of Figures

Figure 1	SnapMirror replication overview	10
Figure 2	Unified architecture flexibility	12
Figure 3	Cluster interconnect, data, and management networks	14
Figure 4	Failover multipathing	16
Figure 5	Failover multipathing during LIF failover	16
Figure 6	Multiplexing mode	17
Figure 7	LIF failover in multiplexing mode	17
Figure 8	TCP connections with one intercluster LIF	19
Figure 9	TCP connections with two intercluster LIFs	19
Figure 10	SnapMirror custom protection policy create	24
Figure 11	Add custom SnapMirror protection policy	25
Figure 12	SnapMirror fan-out and fan-in	31
Figure 13	SnapMirror cascade	32
Figure 14	SnapMirror asynchronous policy definition	35
Figure 15	DailyBackup asynchronous SnapMirror policy definition	36
Figure 16	DPDefault asynchronous SnapMirror policy definition	36
Figure 17	MirrorAllSnapshots asynchronous SnapMirror policy definition	37
Figure 18	MirrorLatest asynchronous SnapMirror policy definition	38
Figure 19	MirrorAndVault asynchronous SnapMirror policy definition	38
Figure 20	Unified7year asynchronous SnapMirror policy definition	39
Figure 21	XDPDefault SnapVault policy definition	39
Figure 22	SnapMirror schedules can be listed and created in ONTAP System Manager	40
Figure 23	SnapMirror schedules can be listed and created using CLI	40
Figure 24	Start a SnapMirror relationship update	43
Figure 25	Relationship update dialog	43
Figure 26	FlexGroup volumes used in SnapMirror cascade and fan-out configurations	52
Figure 27	SVM DR with MetroCluster	53
Figure 28	Creating a FlexClone volume at a SnapMirror destination	54
Figure 29	SnapMirror network compression functional diagram	60
Figure 30	ONTAP S3 SnapMirror overview	65
Figure 31	Volume layout for DR	73

List of Tables

Table 1	New features in SnapMirror	9
Table 2	ONTAP terminology	13
Table 3	SnapMirror relationships	32
Table 4	SnapMirror policy types	34
Table 5	Differences between SVM DR and SnapMirror.....	52
Table 6	SVM DR scalability	52
Table 7	SVM migration limitation summary.....	53
Table 8	TCP receive buffer windows	63

Preface

This document describes information and best practices related to configuring SnapMirror replication in ONTAP 9.11.1.

Copyright 2022 Fujitsu Limited

Third Edition
December 2022

Trademarks

Third-party trademark information related to this product is available at:

<https://www.fujitsu.com/global/products/computing/storage/eternus/trademarks.html>

Trademark symbols such as ™ and ® are omitted in this document.

About This Manual

Intended Audience

This manual is intended for system administrators who configure and manage operations of the ETERNUS AX/HX, or field engineers who perform maintenance. Refer to this manual as required.

Related Information and Documents

The latest information for the ETERNUS AX/HX is available at:

<https://www.fujitsu.com/global/support/products/computing/storage/manuals-list.html>

Document Conventions

■ Notice Symbols

The following notice symbols are used in this manual:

Caution

Indicates information that you need to observe when using the ETERNUS AX/HX. Make sure to read the information.

Note

Indicates information and suggestions that supplement the descriptions included in this manual.

1. Solution Overview

Businesses can use several approaches to increase data availability in the face of hardware, software, or site failures. Data protection (DP) is one of the most critical aspects because any loss of data translates directly into lost money and time. Data protection is the process of taking data located in one location and making a copy of it in a different location to serve two use cases:

- **Backup.** The objective is to restore from the secondary to the primary with no intention of failing over to the secondary. This implies that the primary purpose of the secondary is archival storage. Therefore, you might have more data in the secondary than in the primary.
- **Disaster recovery (DR).** An exact replica or copy is maintained in the secondary and used for failover from the primary to the secondary if there is failure at the primary site.

Although backups allow you to recover lost data from an archival medium (tape, drive, or the cloud), mirroring is the most popular data availability mechanism for business continuity and DR, especially if you would like to minimize downtime. SnapMirror technology offers a fast and flexible enterprise solution for mirroring or replicating data over LANs and WANs. The main advantages to using SnapMirror are as follows:

- **Robust enterprise technology.** SnapMirror is a mature feature of ONTAP storage systems that has been enhanced and improved over time. SnapMirror can recover from update failures, use concurrent processes for replication processing, throttle the network bandwidth used for transfer operations, and much more.
- **Speed and efficiency.** Block-level logical incremental data transfer makes sure that only the data that has changed is sent to the destination replica. SnapMirror can reduce data volume further with various storage efficiencies such as network compression to compress data as it leaves the source and decompress it at the destination, thereby improving transfer performance.
- **Flexibility.** SnapMirror allows you to define different synchronization schedules to better meet your system's needs. Using SnapMirror, you also can change the direction of the synchronization if there is a problem with the primary repository. SnapMirror can also be used to create a variety of replication topologies. Options include fan-out, in which a single volume replicates to many secondary systems, and cascade, in which the destination volume is itself synchronized to a tertiary system.
- **Testability.** SnapMirror destination volumes can be instantly cloned as writable volumes using FlexClone technology, irrespective of their size, and in a space-efficient manner, without needing to stop data being replicated from the source, and is invaluable for performing DR tests, for example.
- **Failover and failback.** If the mirror destination system must take over the operation, the SnapMirror relationship is temporarily broken, which makes the destination volumes read/write and ready to use. SnapMirror allows you to resynchronize the original source with the changes made at the destination and then re-establish the original SnapMirror relationship.
- **Ease of use.** With ONTAP System Manager, you can perform operations with simplified workflows and wizard-guided walkthroughs. You can also monitor and manage all SnapMirror replication relationships in one place.
- **Secure.** From ONTAP 9.x onwards, SnapMirror relationships can be encrypted natively end-to-end.
- **Cloud enabled.** SnapMirror supports volume and storage virtual machine (SVM) replication to Fujitsu solutions in the cloud such as Amazon FSx for ONTAP and Cloud Volumes ONTAP offered by major cloud providers.

Purpose and Intended Audience

This document is intended for individuals who administer, install, or support ONTAP systems and who intend to configure and use SnapMirror technology for data replication.

This document assumes that the reader understands the following processes and technologies:

- A working knowledge of ONTAP operations
- A working knowledge of features such as Snapshot technology, FlexVol or FlexGroup volumes, and FlexClone technology
- General knowledge of DR and data replication solutions
- Familiarity with the FUJITSU Storage ETERNUS AX/HX series Data Protection Power Guide in the [Fujitsu manual site](#)

What's New for SnapMirror?

[Table 1](#) lists the major changes introduced since the previous edition of this document.

Table 1 New features in SnapMirror


Functional area	Changes
SVM disaster recovery (SVM DR) and data mobility	<ul style="list-style-type: none">• Starting with ONTAP 9.10.1, SnapMirror provides a data mobility feature called SVM migration. SVM migration uses both SnapMirror Asynchronous and SnapMirror Synchronous (SM-S) to migrate volume data and SVM configuration information.• Starting with ONTAP 9.11.1, support for migration of SVMs hosted by clusters containing up to six nodes.• The number of SVM DR relationships per cluster has increased as follows:<ul style="list-style-type: none">- 9.10.1 from 32 to 64 relationships per cluster for SVMs hosting only FlexVol volumes.- 9.11.1 from 64 to 128 relationships per cluster for SVMs hosting only FlexVol volumes.- SVMs hosting FlexGroup volumes are limited to 32 relationships per cluster.
Architecture/fabric	As of ONTAP 9.9.1, SnapMirror supports cascade and fan-out configurations for FlexGroup volumes. This includes destinations on-premises or Cloud Volumes ONTAP.
Protocols	Starting with ONTAP 9.10.1, SnapMirror protects ONTAP S3 buckets. S3 SnapMirror can have non-ONTAP destinations.

SnapMirror Overview

SnapMirror is a replication solution built into ONTAP for business continuity and DR purposes. SnapMirror is configured through a data protection relationship between data volumes (FlexVol or FlexGroup) on primary and secondary storage systems. SnapMirror periodically updates the replica to keep it up to date with changes that have been written to the primary.

This replica or mirror of enterprise data is created in a secondary storage system at a geographically remote site or in the cloud. You can fail over and serve data from the secondary in the event of a catastrophe at the primary site. After the error condition at the primary site is rectified, you can replicate any changes back to primary and start serving clients from the primary site again. With SnapMirror, you can reduce the total cost of ownership (TCO), making it easier to justify the DR investment by putting your DR site to active business use. For an overview of SnapMirror replication, see [Figure 1](#).

Figure 1 SnapMirror replication overview

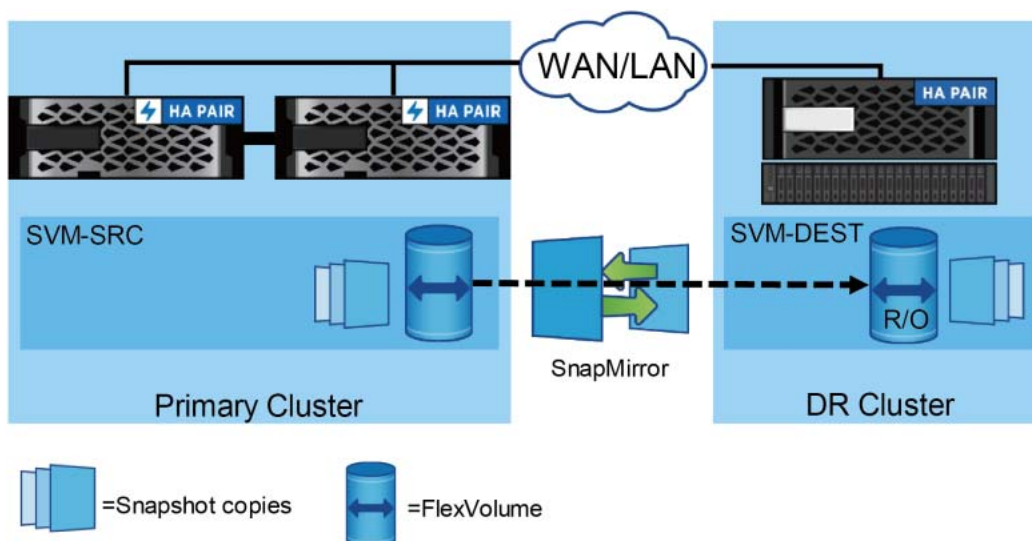

Data protection capabilities are an integral part of ONTAP. SnapMirror integrates tightly with Snapshot technology to quickly and efficiently create on-drive replicas or point-in-time, space-efficient copies of data.

Fujitsu integrated data protection can be used to create a quickly accessible on-drive history of application-consistent Snapshot copies that eliminates the concept of a traditional backup window. SnapMirror then replicates the history of Snapshot copies to the destination, which can be used for backup, DR, or test and development.

SnapMirror replication is efficient because it only replicates native 4K blocks that have changed or added since the previous update. Additional efficiency is gained when SnapMirror is combined with Fujitsu storage efficiency technologies. Compression and data deduplication technologies can result in significant telecommunication and storage capacity savings.

Use Case Summary

Near-Line Backup

One of the primary use cases for SnapMirror is data backup. Since the early days of enterprise data storage, data backup has been the purview of tape. Tape backup created some challenges for responsive data recovery, foremost of which is that oftentimes it simply did not work and at the best of times it would take hours to recover from a disaster scenario.

SnapMirror can be used as a primary backup tool by replicating data within the same cluster or to remote targets. Using SnapMirror, storage administrators can restore single files or an entire storage configuration quickly.

DR

SnapMirror technology is also used as a part of DR plans. If critical data is replicated to a different physical location, a serious disaster does not have to cause extended periods of unavailable data for business-critical applications. Clients can access replicated data across the network until the recovery of the production site from corruption, accidental deletion, natural disaster, and so on.

In the case of failback to the primary site, SnapMirror provides an efficient means of resynchronizing the DR site with the primary site, transferring only changed or new data back to the primary site from the DR site by simply reversing the SnapMirror relationship. After the primary production site resumes normal application operations, SnapMirror continues the transfer to the DR site without requiring another baseline transfer.

DR Testing and Application Testing and Development

FlexClone technology can be used to quickly create a read-write copy of a SnapMirror destination FlexVol volume in case you want to have read-write access of the secondary copy to confirm if all the production data is available.

Data Distribution and Remote Data Access

SnapMirror technology can be used to distribute large amounts of data throughout an enterprise, enabling access to data at remote locations. Remote data access provides faster access by clients in remote locations. It also allows more efficient and predictable use of expensive network and server resources because WAN usage occurs at a predetermined replication time. Storage administrators can replicate production data at a specific time to minimize overall network utilization.

Backup Offloading and Remote Tape Archiving

SnapMirror technology can also be used for backup consolidation and for offloading tape backup overhead from production servers. This approach facilitates centralized backup operations and reduces backup administrative requirements at remote locations. Snapshot technology eliminates the traditional backup window on the primary storage system. Therefore, offloading tape backups to a SnapMirror destination dramatically reduces the overhead of backup operations on production storage systems.

Unified Architecture Flexibility

SnapMirror provides data protection across a broad set of platforms to meet a broad set of user requirements. SnapMirror started as a native feature of ONTAP for data center environments but has expanded in recent updates by embracing new cloud-centric platforms for private, hybrid, and public cloud deployments, as shown in [Figure 2](#).

Data Center Deployments

SnapMirror can be used on any ONTAP platform in the data center to meet a broad set of performance and scalability needs from ONTAP arrays. These deployments can be managed by using CLI, REST APIs, or the web-based ONTAP System Manager UI.

Private Cloud Deployments

SnapMirror private cloud deployments are architected similarly to data center deployments, with all of the same platform flexibility, with the management flexibility offered by REST APIs to support cloud-centric management and operational platforms such as Kubernetes and VMware vRealize.


Hybrid Cloud Deployments

SnapMirror provides support for data replication between ONTAP on-premises and ONTAP public-cloud implementations such as Cloud Volumes ONTAP through the Cloud Manager service and Amazon FSx for ONTAP.

Public Cloud Deployments

Like hybrid cloud deployments, ONTAP can be completely hosted in the cloud through solutions such as Cloud Volumes ONTAP and Amazon FSx for ONTAP. Both solutions provide access to SnapMirror functionality to support primary and DR cloud-based deployments and can use ONTAP System Manager, CLI, or REST APIs for management. In addition, through the Cloud Manager, SnapMirror can be configured to replicate data between Cloud Volumes of ONTAP clusters.

Figure 2 Unified architecture flexibility

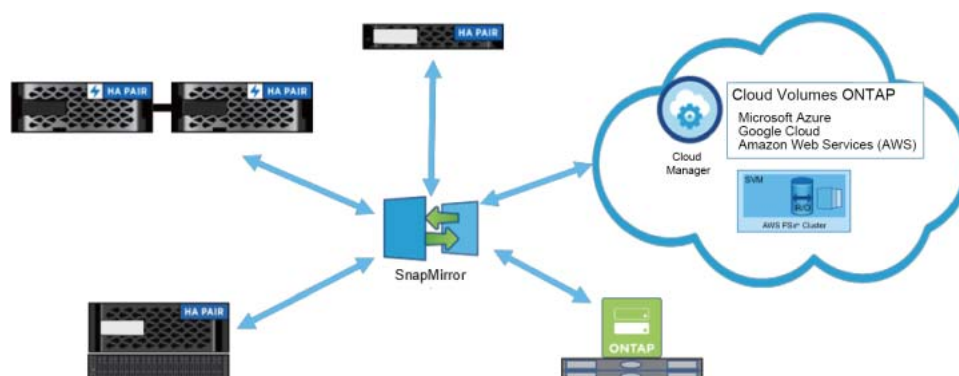

2. Networking Basics

Common ONTAP Networking Terms

[Table 2](#) lists the basic terminology used in ONTAP.

Table 2 ONTAP terminology


Term	Definition
Node	A single device offering ONTAP storage services. A node can be stand-alone (ETERNUS AX/HX and ASA chassis, or Cloud Volumes ONTAP) or integrated into the same physical chassis. Typically, ONTAP storage clusters consist of one or more 2-node HA pairs.
High-availability (HA) pair	Two ONTAP storage nodes configured in a pair for high availability. ONTAP clusters can consist of up to 6 SAN HA pairs or 12 NAS HA pairs.
Cluster	One or more HA pairs that are interconnected and managed as a single storage solution.
IPspace	An IPspace defines a distinct IP address space in which ONTAP arrays can participate. IPspaces offer a distinct routing table.
Broadcast domain	A broadcast domain is a group of physical network ports in the same IPspace that can communicate through a single layer-2 network protocol.
Cluster interconnect	A dedicated high-speed, low-latency, private network used for communication and replication traffic between nodes in the same cluster.
Data network	The network used by clients to access data. A data network is required to connect client servers and applications to storage resources hosted in ONTAP clusters through various storage protocols. There can be multiple data networks to support multitenancy or other privacy or security requirements.
Management network	The network used for the administration of the cluster, SVM, and nodes.
Intercluster network	The network used for communication and replication between different clusters. Inter-cluster networks are used by SnapMirror and other data protection solutions within the ONTAP environment.
HA interconnect	A dedicated network interconnect between two nodes in one HA pair. The HA interconnect could be internal or external depending on node model.
Physical port	A physical network port such as e0e or e0f Ethernet or 0c or 0e FC ports. Physical ports can support Ethernet, FC, or provide unified protocol support. Physical ports host virtual ports and/or logical interfaces (LIFs).
Interface group (ifgrp)	A collection of physical ports combined to create one logical port used for link aggregation. An ifgrp can offer expanded throughput, redundancy or both.
Virtual LAN (VLAN)	A virtual LAN is an IEEE 802.1Q standard protocol that subdivides a physical network into distinct broadcast domains. As a result, traffic is completely isolated between VLANs unless a router (layer 3) is used to connect VLANs. In ONTAP, VLANs subdivide a physical port into several separate virtual ports, allowing for one of the key components of our secure multitenant messaging—isolation of data.
Virtual port	A virtual port is a logical network interface that can come in various forms: <ul style="list-style-type: none">• ifgrp• VLAN• Virtual IP port
Logical interface (LIF)	A LIF is an IP address or a worldwide port name (WWPN) that is associated with a port. LIFs can be attached to physical ports, ifgrps or VLANs. LIFs have associated attributes such as failover rules, role and firewall rules.
Data LIF	A LIF used to connect to a data network.
Intercluster LIF	A LIF used to connect to an intercluster network. An intercluster LIF must be created on each cluster node before a cluster peering relationship can be established. Intercluster LIFs can only fail over to ports in the same node.
Management LIF	A LIF used to connect to the management network. Management LIFs can be used for cluster, node, or SVM management.

Term	Definition
Cluster LIF	A LIF used to connect to the cluster network.
Cluster peer	Cluster peers are participants in an intercluster relationship. An intercluster peer relationship must be created before any data movement through ONTAP data protection services can be performed. The act of creating this intercluster relationship is called cluster peering.
Storage virtual machine (SVM)	An SVM is a logical storage server that provides data access to LUNs and/or a network-attached storage (NAS) namespace from one or more data LIFs.
SVM peer	SVM peers are participants in a SnapMirror relationship. An inter-SVM peer relationship must be created before any data movement through ONTAP data protection services can be performed. The act of creating this inter-SVM relationship is called SVM peering.

ONTAP Networking Roles Overview

There are multiple types of networks in ONTAP, as shown in [Figure 3](#). It is important to understand what each network type is used for. The cluster interconnect network is a dedicated, high-speed, low-latency private network used for communication and replication between nodes in the same cluster. This configuration is a redundant back-end network that cannot be used or shared for client access to data or for managing the cluster, nodes, or SVMs. Client access to data occurs on the data network. Management of the cluster, nodes, and SVMs occurs on the management network. The data and management networks might share the same ports or physical network. However, the data and management networks must be a different physical network than the cluster interconnect network.

Figure 3 Cluster interconnect, data, and management networks

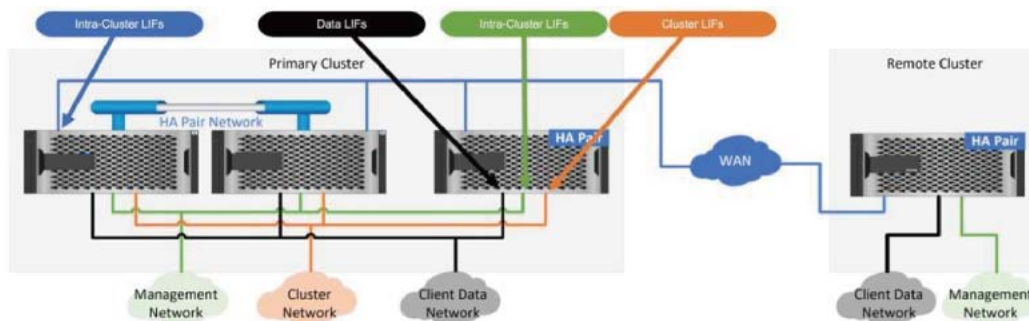

The intercluster network must be configured to enable cluster peering for replication of data from one geographical location to another, as shown in [Figure 3](#). The intercluster network uses LIFs that correspond to IP addresses and represent network access points to a node. Intercluster LIFs are assigned to physical ports or virtual ports (ifgrps, VLANs) as part of the cluster peer configuration process.

Intercluster Networking

The following are requirements for intercluster LIFs:

- At least one intercluster LIF must be configured on every node in the local cluster and every node in the remote cluster. Provisioning intercluster LIFs on only some nodes of the cluster is not supported.
- The IP addresses you assign to intercluster LIFs can reside in the same subnet as data LIFs or in a different subnet. Intercluster LIFs use routes that belong to the IPspace to which they are assigned. ONTAP automatically creates a system SVM for cluster-level communications within an IPspace.
- The cluster peering topology must use full-mesh connectivity. Full-mesh connectivity means that all the intercluster LIFs of one peer cluster can communicate with all the intercluster LIFs of the other peer cluster. All ports that are used to communicate with a given remote cluster must be in the same IPspace. You can use multiple IPspaces to peer with multiple clusters. Pairwise, full-mesh connectivity is required only within an IPspace. Also, consider using custom IPspaces to isolate replication traffic.
- When the port hosting an intercluster LIF fails, the LIF can only fail over to another intercluster-capable port on that node, as defined by the LIF's failover policy. At least one intercluster LIF is required per node for replication between clusters. Maintain consistent settings between the intercluster LIFs (the same maximum transmission units [MTUs], flow control, TCP options, and so on).
- SnapMirror replication over an FC network is not available in ONTAP.
- SnapMirror operations are destination driven and, therefore, during a node failure, SnapMirror recovery will depend on the location of the failing node (source cluster or destination cluster)
 - If the sending node in the source cluster fails, the destination cluster will resume the transfer from the surviving source node in the source HA pair.
 - If the receiving node in the destination cluster fails, the transfer aborts and a new transfer is attempted and may not successfully start until the next scheduled SnapMirror transfer.

For additional information regarding intercluster networking, see the FUJITSU Storage ETERNUS AX/HX series Data Protection Power Guide in the [Fujitsu manual site](#).

Intercluster Multipathing and Network Redundancy

You might want more than one physical path for a SnapMirror relationship. SnapMirror supports up to two paths for a SnapMirror relationship. When using multiple paths, you need to set up the configuration in one of the following ways:

- Set up static routes to ensure different routes are used for different IP connections.
- Use different subnets for the two connections.


The two paths can be used in one of these two modes:

- **Failover mode.** SnapMirror uses the first specified path as the desired path and uses the second specified path only after the first path fails.
- **Multiplexing mode.** SnapMirror uses both paths at the same time, essentially load balancing the transfers. If one path fails, the transfers occur on the remaining path. After the failed path is repaired, the transfers resume using both paths.

Failover Mode


In many ways, an intercluster LIF behaves in the same way as a LIF used for CIFS or NFS in terms of failover, except that an intercluster LIF cannot fail over to a port in a different node. The initial placement of a LIF on a specific port determines which port is used by that LIF. If ports are redundant for failover on the same node, then the active path is the port where the initial LIF was placed. The passive path is any port where the LIF might fail over, as shown in [Figure 4](#).

Figure 4 Failover multipathing

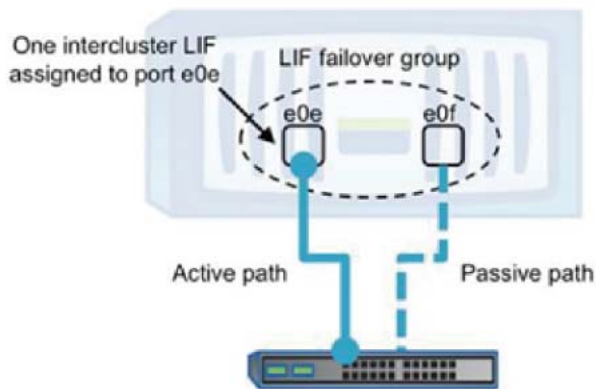

Communication on an intercluster LIF only occurs on the port to which the LIF is assigned unless that port fails, which causes the LIF to move to another surviving port in that LIF's failover group, as shown in [Figure 5](#).

Figure 5 Failover multipathing during LIF failover

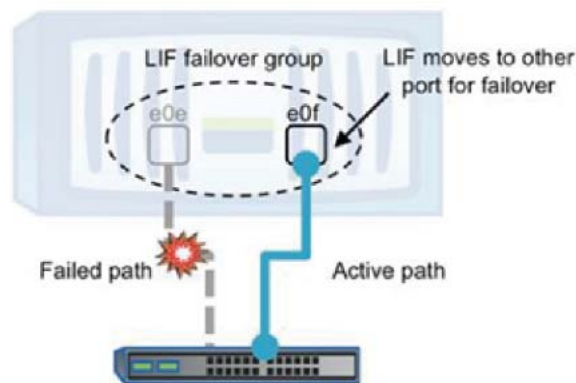


■ Best Practice

Assign an intercluster LIF to an intercluster-capable port and make sure that another intercluster-capable port is configured to support that connection. Make sure that the failover policy for the LIF is configured with the failover group containing the necessary ports to enable successful failover.

Multiplexing mode


Multiplexing mode requires the configuration of additional intercluster LIFs on a node. SnapMirror uses all available intercluster LIFs on the source and destination nodes to send and receive data for all transferring SnapMirror relationships between those two nodes. If two intercluster LIFs are configured and two ports are available for intercluster communication, then one LIF can be assigned to each port, and SnapMirror simultaneously uses both ports, as shown in [Figure 6](#).

Figure 6 Multiplexing mode

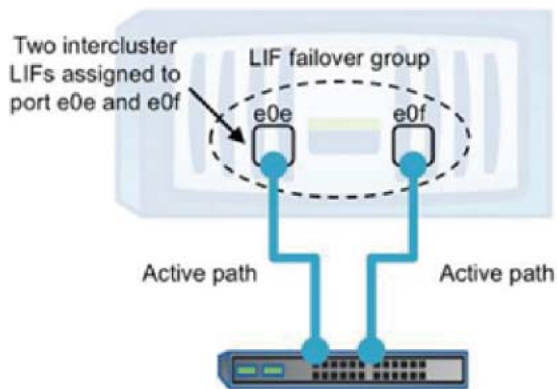

SnapMirror multipathing with different types and speeds of networks is supported without adversely affecting replication performance on the faster ports. Communication occurs on both ports because an intercluster LIF is assigned to each port. If a port fails, the LIF that was on the failed port moves to another surviving port in that LIF's failover group. Depending on the number of ports in the failover group, multiple LIFs can now share a port, as shown in [Figure 7](#).

Figure 7 LIF failover in multiplexing mode

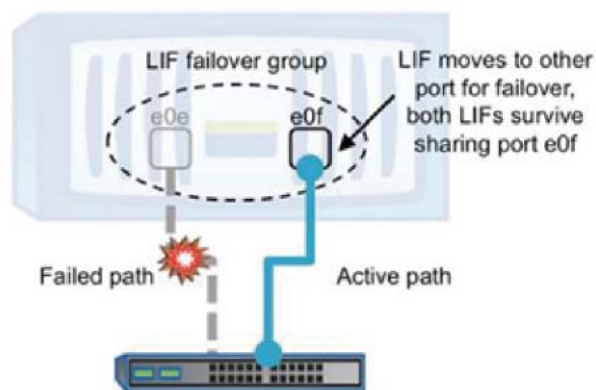

■ Best Practice

Create two intercluster LIFs and assign one LIF to each port. Make sure that each LIF failover policy is configured to use the LIFs failover group, which contains the necessary ports to allow failover.

Switch-Based Link Aggregation for Multipathing

The intercluster LIF can be assigned to any kind of port in the system, including a logical port such as an ifgrp. An ifgrp supports switch-based link aggregation. Multiple physical ports can be configured into an ifgrp, and then the intercluster LIF can be assigned to that ifgrp port. The switch ports can then be combined using link-aggregation technology as a method of providing multipathing and/or redundancy.

Switch-based link aggregation does not guarantee that multiple physical paths in the ifgrp are used simultaneously. For example, assume that a single intercluster LIF is configured on both the source and destination nodes. Therefore, each node has one IP address to use for intercluster communication and a two-port ifgrp. If the ifgrp is using an IP hash-based method of load balancing, then there is only one pair of source and destination IP addresses on which to perform the load balancing hash. The link might place all connections between these two nodes on the same path within that port group.

Keep in mind that replication can take place between multiple nodes. For example, one node might replicate different volumes to different nodes in the remote cluster. Each node has different intercluster LIFs, which have different pairs of source and destination IP addresses that enable multiple paths within the link to be used for that source node.

If switch-based link aggregation is used to allow multiple physical paths in the ifgrp to be used when replicating between two nodes, additional intercluster LIFs can be configured on either of the two nodes. A maximum of eight intercluster LIFs per node can be configured. ONTAP automatically establishes a connection between every LIF on the source and destination node for SnapMirror. This approach provides additional combinations of source and destination IP addresses for the load-balancing hash, which could be placed on different paths within the link. However, in this example the purpose of configuring multiple LIFs on one node is to enable multiple paths to be used for replication between any two nodes. This precaution is likely not necessary in many WAN replication scenarios because WAN bandwidth might be significantly less than the bandwidth of the combined links in the ifgrp. Enabling multiple paths between two nodes might not be beneficial, because many nodes must share the WAN bandwidth anyway.

■ Best Practice


When using switch-based link aggregation, create the ifgrp with `multimode_lacp` mode and set the distribution function of the ifgrp to `port`. Using the `port` value for the distribution function configures the ifgrp to distribute connections across paths by hashing the source/destination IP address, as well as the port used. This practice does not guarantee that connections are evenly distributed across all paths in the ifgrp, but it does allow use of multiple physical links in the ifgrp.

Network Connections for Intercluster SnapMirror

In ONTAP, the number of intercluster LIFs determines the number of TCP connections established between the source and destination nodes for SnapMirror. TCP connections are not created per volume or per relationship.

ONTAP establishes at least 12 intercluster TCP connections for sending data, as shown in [Figure 8](#). This is true even if both the source and destination nodes have only one intercluster LIF and enough connections are created so that all intercluster LIFs on both the source and destination nodes are used.

Figure 8 TCP connections with one intercluster LIF

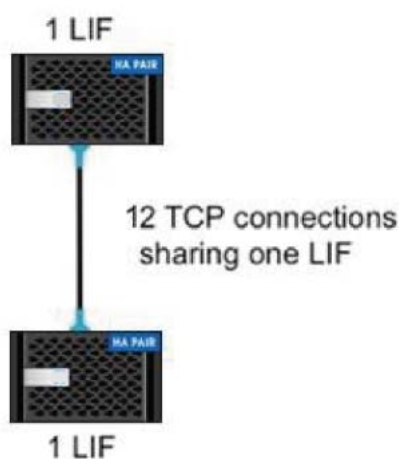


If the source node, destination node, or both nodes are configured with two intercluster LIFs, then ONTAP establishes 12 TCP connections for sending data. However, instead of both connections using the same LIFs, one connection uses one LIF pair, and the other connection uses the other LIF pair, as shown in [Figure 9](#). This example shows different combinations of intercluster LIFs that produce 12 intercluster TCP connections.

Caution

It is not possible to select a specific LIF pair to use for a certain TCP connection. They are managed automatically by ONTAP.

Figure 9 TCP connections with two intercluster LIFs

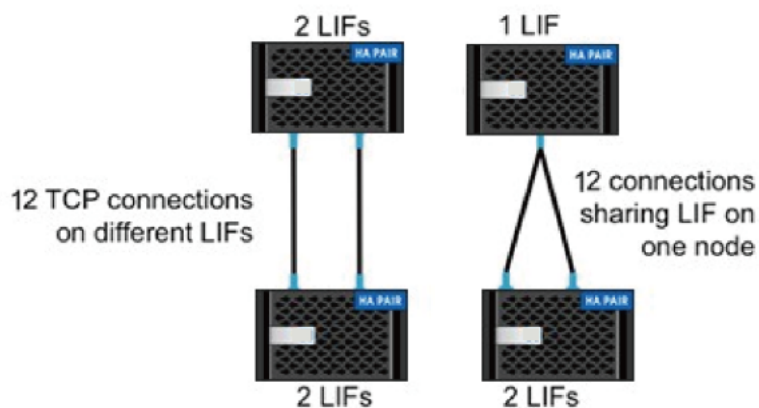

■ Best Practice

Although it is not required, the same number of intercluster LIFs can be configured on both the source and destination nodes for operational consistency. Multiple intercluster LIFs can be created to enable active-active multipathing across multiple physical paths.

For example, if a node is configured with four 1 Gigabit Ethernet (GbE) ports for intercluster replication, then four intercluster LIFs are required, one assigned to each port to make sure all paths are used to provide bandwidth beyond just one GbE link.

Share or Dedicate Ports?

You can use dedicated ports for intercluster communication, or share ports used by the data network. Configuring intercluster LIFs to use dedicated data ports allows greater bandwidth than using shared data ports. Although configuring intercluster LIFs to share data ports enables you to use existing data ports, it does not physically isolate this network from the clients. If configured this way, the administrator should take care that routing rules or data center firewalls (external to the cluster) are set up such that general clients cannot reach the IP addresses used on the intercluster LIFs or view the intercluster traffic.

There are several configurations and requirements to consider when determining whether to share or dedicate ports for replication. They include the following:

- **LAN type.** If you have a high-speed network, such as 10GbE, 25GbE, 40GbE, and 100GbE, you might have enough local LAN bandwidth to perform replication using the same 10GbE ports used for data access. You should compare your available WAN bandwidth to your LAN bandwidth. If the available WAN bandwidth is significantly less than 10GbE, you might be limited to the network utilization that the WAN can support.
- **Available WAN bandwidth (compared to LAN bandwidth).** The WAN can act as a throttle if there is significantly less available WAN bandwidth than LAN bandwidth. If the available WAN bandwidth is significantly less than 10GbE, you might need to use dedicated ports.

Caution

The one exception to this rule might be when all or many nodes in the cluster replicate data, in which case bandwidth utilization is typically spread across nodes.

- **Replication interval.** Consider how your available bandwidth will handle the level of client activity during the replication interval. Replication during nonproduction hours might have an irrelevant effect on the data network. If replication takes place in off-peak hours, you should be able to use data ports for replication, even without a 10GbE LAN connection. However, if replication takes place during normal business hours, you need to consider the amount of data to be replicated and whether it requires so much bandwidth that it could cause contention with data protocols. If network utilization by data protocols (SMB, NFS, or iSCSI) is above 50%, then you should use dedicated ports for intercluster communication to allow for nondegraded performance if node failover occurs.
- **Change rate.** Consider the amount of data to be replicated in each interval and whether it requires so much bandwidth that it could cause contention with data protocols for shared data ports. If you use the peer relationship for replication and replication is set to occur only when minimal to no client activity occurs, you might be able to use data ports for intercluster replication successfully, even without a 10GbE LAN connection.

- **Number of ports.** If you determine that replication traffic is interfering with data traffic, you can migrate intercluster LIFs to any other intercluster-capable shared port on the same node. You can also dedicate VLAN ports for replication. The bandwidth of the port is shared between all VLANs and the base port. However dedicating ports for replication require additional switch ports and cable runs.

Caution

- If you decide to dedicate ports for intercluster communication, it is a best practice to configure at least two intercluster ports per node. An intercluster LIF cannot fail over to a port on a different node; its failover group contains only intercluster-capable ports on the same node. If you use intercluster ports, ONTAP uses only intercluster ports in the failover group for an intercluster LIF. Therefore, if you use intercluster ports, you should configure at least two intercluster ports per node so that there is a port to which the intercluster LIF can fail over.
- If you are not using dedicated ports, the maximum transmission unit (MTU) size of the replication network should typically be the same as the MTU size of the data network.

■ Best Practice

- If the network utilization generated by the data protocols (CIFS, NFS, or iSCSI) is above 50%, then you should dedicate ports for intercluster communication to allow for nondegraded performance if a node failover occurs.
- Intercluster LIFs are node scoped (they only fail over to other ports on the same node). Therefore, use a naming convention for intercluster LIFs that includes the node name followed by `ic` or `icl` for the intercluster LIF: for example, `node_name_icl#` or `node-name-ic#`, depending on your preference.
- Verify that all relevant ports have access to the necessary networks or VLANs to allow communication after port failover.
- As intercluster LIFs become available or unavailable, the list of active IP addresses can change. The discovery of active IP addresses is automatic in certain events, such as when a node reboots. The `-peer-addr` option requires the provision of only one remote cluster address. However, if the node hosting that address is down and becomes unavailable, then the cluster peer relationship might not be rediscovered. Therefore use at least one intercluster IP address from each node in the remote cluster, so that the peer relationship remains stable in the event of a node failure.

Firewall Requirements

SnapMirror uses the typical socket, bind, listen, and accept sequence on a TCP socket. The firewall and the intercluster firewall policy must allow the following protocols:

- TCP to the IP addresses of all the intercluster LIFs over the ports 10000, 11104, and 11105. ONTAP uses port 11104 to manage intercluster communication sessions and port 11105 to transfer data.
- Bidirectional HTTPS between the intercluster LIFs.
- Although HTTPS is not required when you set up cluster peering using the CLI, HTTPS is required later if you use ONTAP System Manager to configure DP.

3. Replication Basics

Licensing

You must purchase and enable a SnapMirror license. This license is included in the Data Protection Bundle. If the SnapMirror source and destination are on different clusters, you must enable a SnapMirror license on each cluster. All nodes in each cluster must have a license.

SnapMirror Asynchronous Technology

SnapMirror replicates data from a source FlexVol or FlexGroup volume in a cluster to a volume in a destination cluster by using Snapshot copies. SnapMirror performs the following operations:

Procedure ►►►

- 1 A Snapshot copy of the data on the source is created.
- 2 The Snapshot copy is copied to the destination during baseline synchronization. This process creates a destination that is online, read-only, and contains the same data as the source at the time of the most recent common Snapshot copy.
- 3 The destination is updated to reflect incremental changes on the source according to the schedule you specify.



When a SnapMirror relationship is established, the destination volume is an identical replica of the source, including snapshots, volume settings, and ONTAP space efficiency features. SnapMirror vault relationships replicate only targeted source Snapshot copies to the volume on the destination cluster. Breaking the SnapMirror relationship makes the destination volume writable and is typically used to perform a failover when SnapMirror is used to synchronize data to a DR environment. SnapMirror is sophisticated enough to allow the data changed at the failover site to be efficiently resynchronized back to the primary system when it comes back online. The original SnapMirror relationship can then be reestablished.

SnapMirror can use either of the replication engines to create replicas. While both engines operate at the volume level, they have different characteristics.

- **Block Replication Engine (BRE).** BRE replicates the on-disk layout from a source volume to a destination volume either as a whole or as an incremental update with 4K blocks. In other words, BRE uses knowledge of the file system to determine differences between snapshots at the block-allocation level and replicates only those changed blocks. Therefore, the copy of data created on the destination has an identical structure of physical block pointers to the original data set on the source. BRE replicates volumes using volume block (VBN) read and write operations. The SnapMirror relationship is created with `-type DP` using the SnapMirror policy type `async-mirror`.

Caution

As of 9.11.1, BRE SnapMirror relationships are used for legacy data protection policies only as part of a longer-term deprecation program for BRE relationships. At some point in the future, BRE will not be supported and ONTAP systems that still host BRE SnapMirror relationships will not be able to upgrade to future versions of ONTAP until those BRE relationships are converted to LRSE (XDP).

- **Logical replication with storage efficiency (LRSE).** LRSE uses block-level metadata and knowledge of the file system to determine differences between Snapshot copies at the indirect pointer level. LRSE organizes the transfer of data from the source to the destination in two streams.
 - The data stream consists of data blocks that are transferred with specific volume block number (vvbn#) within the FlexVol. This number helps identify the block number at which the data is stored on the source FlexVol volume, but without specifying a file context. On the destination, the data is written to the data warehouse (DW) file with a file block number (fbn#) which corresponds to the vvbn#.
 - The user files are transferred by reference using the user file inodes, which share blocks with the data warehouse file and do not use buffer trees that require you to parse down to reach a specific object. LRSE makes explicit requests to the block-sharing infrastructure of the DW blocks (the donors) with user files (recipients) while replication transfer is in progress.

The mirror has a structure of logical block pointers to the original data set that has a completely different on-drive physical layout relative to the source. The SnapMirror relationship is created with `-type XDP` using the SnapMirror policy type `async-mirror`, `vault` or `mirror-vault`.

LRSE preserves space efficiency over the wire and on the destination when replicating data in storage-efficient source volumes. Storage efficiency is an important part of LRSE because features such as block sharing and compression allow a volume to effectively hold far more data than the space used. This efficiency must be preserved during replication to avoid the replica growing to an intolerably large size, not to mention the time needed to transfer it. LRSE also allows you to apply storage efficiencies on the secondary, independent of the primary storage settings.

In addition to asymmetric storage efficiency on primary and secondary storage, LRSE enables version flexibility where the destination version can be different than the source. It also supports asymmetric Snapshot copies where the destination can support a greater number of Snapshot copies than the source. All the files and directories in the source file system are created in the destination file system. Therefore, you can replicate data between a storage system running an older version of ONTAP and a storage system running a newer version. This approach allows for reduced downtime because the controllers on either side can be nondisruptively upgraded at any time while reducing overhead and managing complex topologies (fan-in, fan-out, and cascade).

The performance characteristics are also like those of the original block replication engine because the replication engine only transfers the difference between two Snapshot copies from the primary to the secondary. This incremental-only transfer leads to savings in terms of storage and network bandwidth. SnapMirror extended data protection (XDP) mode replaces SnapMirror data protection (DP) mode as the SnapMirror default.

SnapMirror can also be integrated with SnapCenter to replicate application consistent snapshots, such as those used for enterprise database applications. Snapshot copies are created in coordination with the application to guarantee that no in-flight I/O operations cause inconsistencies in the snapshot. After creating an application consistent Snapshot copy, SnapCenter can then trigger a SnapMirror replication of these application consistent Snapshot copies to the secondary storage system.

Unified Data Protection

SnapMirror unified replication allows you to protect mission-critical business data with simple, efficient replication by bringing together the powerful capabilities of SnapMirror with the same (unified) logical replication engine as SnapVault technology for the purpose of DR and archiving to the same destination. A unified relationship type is designated as XDP and provides single-baseline functionality, drastically reducing storage and network bandwidth, which translates immediately into cost savings. The major benefits for SnapMirror unified replication are as follows:

- Only one baseline copy of a volume is needed to the secondary storage. Without unified replication, SnapMirror and SnapVault each need their own baseline copy.
- Less network traffic is required between the primary and secondary (a single baseline plus fewer Snapshot copies over time).

- The flexibility to replicate between storage systems running different ONTAP releases. With DP SnapMirror, the destination must be the same or a later release than the source. With unified replication, you can replicate from an earlier release to a later one and a later release to an earlier one if both sides are ONTAP 9.7 or later.
- To avoid corrupting replication from primary to secondary, unified replication makes it possible to recover the primary volume from available Snapshot copies.

Overall, unified replication with SnapMirror provides powerful data management capabilities for virtualization, protecting critical data while providing the flexibility to move data between locations and storage tiers, including cloud service providers. The relationship is created with type XDP, policy type `mirror-vault`, and the pre-defined policy `Asynchronous`. The policy can always be modified to include custom rules for backing up specific Snapshot copies. XDP removes the limitation of the destination controller requiring an ONTAP major version number equal to or later than the major version of the source controller, which enables nondisruptive upgrades. In addition, this functionality reduces the number of secondary Snapshot copies needed on the destination.

The following example shows how unified replication can be configured with the `MirrorAndVault` policy from the CLI:

```
cluster02::> snapmirror create -source-path snap_src1:Source -destination-path
svm_dst1:Source_dest -type XDP -policy Asynchronous
```

In ONTAP System Manager for ONTAP 9.8 and later, when you configure SnapMirror Asynchronous, the `Asynchronous` protection policy is selected by default. You must create a custom policy to modify any policy parameters. To create a custom policy, navigate to Protection > Overview > Local Policy Settings > Protection Policies > Add ([Figure 10](#) and [Figure 11](#)).

■ Best Practice

Weigh the benefit of maintaining a full mirror against the advantages that unified replication offers by reducing the amount of secondary storage, limiting the number of baseline transfers, and decreasing network traffic. The key factor in determining the appropriateness of unified replication is the rate of change in the active file system. A traditional mirror might be better suited to a volume holding hourly Snapshot copies of database transaction logs, for example.

Figure 10 SnapMirror custom protection policy create

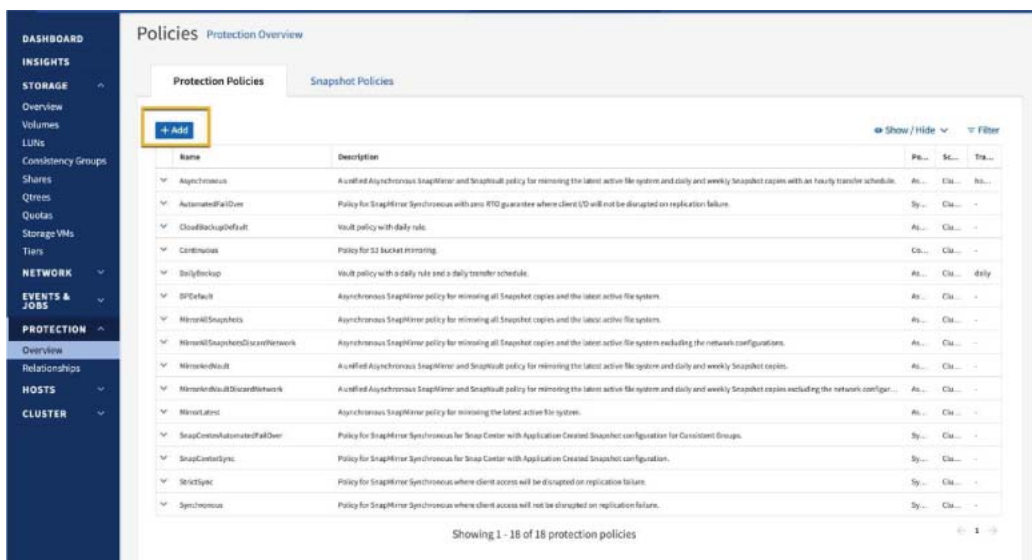


Figure 11 Add custom SnapMirror protection policy

Add Protection Policy

POLICY NAME:

POLICY DESCRIPTION:

POLICY SCOPE: ☒ Cluster ☐ Storage VM

Policy Type

☒ Asynchronous
The copy can be used for backup and disaster protection.

☐ Synchronous
The copy matches the source.

☐ Continuous
Continuously back up to on-premise or cloud object store.

☐ Back up to Cloud
Back up data to cloud object storage.

☒ Advance policy options

Transfer Snapshot Copies from Source ⓘ

TRANSFER SCHEDULE:

All 5 minutes past the hour, every hour

Rules [Rule considerations](#)

Matching SnapMirror Label	Retention Count
No data	

Load-Sharing Mirror

Every SVM in a NAS environment has a unique namespace. The SVM root volume is the entry point to this namespace hierarchy. For clusters consisting of two or more HA pairs, load-sharing mirrors of SVM root volume should be considered to ensure the namespace remains accessible to clients in the event of both nodes of an HA pair failing. Load-sharing mirrors are not suitable for clusters consisting of a single HA pair and is not suitable for a MetroCluster environment.

Caution

- Load-sharing mirrors have been deprecated for data volumes and are only supported for SVM root volumes.
- SnapMirror load-sharing mirrors are only capable of supporting NAS (CIFS/NFSv3). Load-sharing mirrors do not support NFSv4 clients or SAN client protocol connections (such as FC, FCoE, and iSCSI). However, you can use NFSv4 and load-sharing mirrors in the same environment. NFSv4 never uses an load-sharing mirror; instead, it always uses the source volume.

■ Best Practice

Create a load-sharing mirror of an SVM root volume only on a node of a second HA-pair of the cluster.

SnapMirror Synchronous (SM-S)

SM-S is an easy-to-use DR solution that replicates data synchronously between a source volume and a destination volume over a LAN or metropolitan area network (MAN). SM-S provides high data availability and rapid DR for business-critical applications without loss of data due to primary site or cluster failure.

SM-S provides high data availability and rapid DR for business-critical applications without loss of data due to primary site or cluster failure.

SM-S uses a different mechanism than SnapMirror Asynchronous for transferring volume data and is covered in the related manual. Refer to the Fujitsu Storage ETERNUS AX/HX series SnapMirror Synchronous Configuration and Best Practices ONTAP 9.11.1 in the [Fujitsu manual site](#).

SnapVault Technology

SnapVault is a backup technology designed for drive-to-drive Snapshot copy replication for standard compliance and other governance-related purposes. In contrast to SnapMirror, in which the destination usually contains only the Snapshot copies currently in the source volume, SnapVault typically retains point-in-time Snapshot copies created over a much longer period. You might want to keep monthly Snapshot copies of your data over a 20-year span, for example, to comply with government accounting regulations for your business. Since there is no requirement to serve data from vault storage, you can use slower, less expensive drives on the destination system. SnapVault technology also uses LRSE which provides the flexibility of version-independent backup replication referred to as extended data protection (XDP) relationship, combined with a policy type of `vault` and policy `XDPDefault` (predefined). A SnapMirror license must be installed on both source and destination clusters to enable the SnapVault feature on your Fujitsu system.

Backing up volumes to a SnapVault backup requires the following steps:

Procedure ►►►

- 1 Start the baseline transfer.** As with SnapMirror, SnapVault performs a baseline transfer the first time you invoke it. The SnapMirror policy for the relationship defines the contents of the baseline and any updates. Baseline transfer under the default SnapVault policy (`XDPDefault`) makes a Snapshot copy of the source volume, and then transfers that copy and the data blocks it references to the destination volume. Unlike SnapMirror, SnapVault does not include older Snapshot copies in the baseline.
- 2 Perform scheduled incremental transfers.** Updates are asynchronous, following the schedule you configure. The rules you define in the SnapMirror policy identify which new Snapshot copies to include in updates and how many copies to retain. The labels defined in the policy (monthly, for example) must match one or more labels defined in the Snapshot policy on the source. Otherwise, replication fails. At each update under the `XDPDefault` policy, SnapMirror transfers the Snapshot copies that were made since the last update, provided they have labels matching the labels defined in the policy rules.
- 3 Update the SnapVault common Snapshot copy.** At the end of each Snapshot copy transfer session, which can include transferring multiple Snapshot copies, the most recent incremental Snapshot copy in the SnapVault backup is used to establish a new common base between the primary and secondary volumes and is exported as the active file system.

- 4 Restore data upon request.** If data must be restored to the primary volume or to a new volume, the SnapVault secondary transfers the specified data from the SnapVault backup.



SnapMirror for Cloud Volume Platforms

SnapMirror can be used to provide data protection of on-premises or cloud-hosted ONTAP volumes and SVMs. Working in cooperation with Google, Amazon, and Microsoft, Fujitsu offers a broad range of ONTAP cloud offerings that can be used as an overall data management fabric. The following sections describe each offering that is supported for use with SnapMirror.

Cloud Volumes ONTAP

Cloud Volumes ONTAP enables customers to use performance and cost-optimized cloud storage in conjunction with on-premises ONTAP data management. Cloud Volumes ONTAP offers a full array of ONTAP APIs and data management services built upon the native cloud-provider compute, storage, and network products. Cloud Volumes ONTAP offerings are available from Amazon Web Services (AWS), Microsoft Azure, and Google Cloud.

Amazon FSx for ONTAP

Amazon FSx for ONTAP is a native AWS service that offers fully managed ONTAP as a service, offering clusters that can be administered through Cloud Manager or the AWS suite of management tools such as AWS Management Console, AWS CLI, or REST APIs. After an Amazon FSx for ONTAP cluster is configured, it can be used as a source or destination cluster in a SnapMirror relationship for other Amazon FSx for ONTAP, Cloud Volumes ONTAP, or ONTAP on-premises clusters.

4. SnapMirror Configuration

Cluster Peering

The cluster peering feature of ONTAP allows administrators of independent clusters to establish a peer relationship between them. They can use an intercluster network that defines the network connections that enable clusters to securely exchange application data, configuration information and coordinate operations. The intercluster LIF role is the interface to handle intercluster traffic. Administrators must define a range of addresses on their networks for use in cross-cluster communications, arrange routing for these addresses (for example, by routing group), and assign the LIFs in this role to their intercluster or data ports. After the intercluster LIFs have been created and the intercluster network has been configured, cluster peers can be created to enable replication to or from another cluster using SnapMirror. Peer relationships can be configured for a single cluster with up to 255 remote clusters.

Before you set up cluster peering, you should confirm that the connectivity, port, IP address, subnet, firewall, and cluster-naming requirements are met. Cluster peering requirements include the following:

- The time on the clusters must be in sync to within 300 seconds (five minutes) for peering to be successful. Cluster peers can be in different time zones.
- At least one intercluster LIF must be created on every node in the cluster.
- Every intercluster LIF in the local cluster IPspace must be able to communicate with every intercluster LIF in the remote cluster IPspace.
- Every intercluster LIF requires an IP address dedicated to intercluster replication.
- The MTU settings of the ports must be consistent. The default value of 1,500 is correct for most environments.
- All paths on a node used for intercluster replication should have equal performance characteristics.

Caution

- For more information about cluster peering requirements, see the FUJITSU Storage ETERNUS AX/HX series Cluster and SVM Peering Power Guide in the [Fujitsu manual site](#).
- SnapMirror does not support network address translation (NAT).

Establishing cluster peering is a one-time operation that must be performed by the cluster administrators. A cluster peer relationship is really nothing more than two corresponding collections of configuration objects in different clusters. Therefore, the relationship contained within one cluster is only half of the relationship. For a relationship to be considered complete and for it to function correctly, each cluster must share some of its configuration with its peer. A cluster peer relationship exists exactly between two clusters.

A peer relationship can be created in several ways:

- In one method, a peer relationship is created by a cluster administrator who has security credentials (a cluster admin login and password) for the remote cluster.
- Another method allows two administrators who do not want to exchange cluster admin passwords to peer their clusters. In this method, each administrator enters the `cluster peer create` command specifying the intercluster IP addresses of the other cluster.
- You can use the `-generate-passphrase` feature to create a peer relationship with a cluster whose intercluster LIF IP addresses you do not know in advance. This eliminates the need for the initiating cluster to authenticate itself with the remote cluster.

A cluster can be in a peer relationship with up to 255 clusters, allowing multiple clusters to replicate amongst themselves.

You can use the `-generate-passphrase` feature to create a peer relationship with a cluster whose intercluster LIF IP addresses you do not know in advance. This eliminates the need for the initiating cluster to authenticate itself with the remote cluster.

Starting with ONTAP 9.7, cluster peering uses encrypted communication, which means any SnapMirror relationship that is created uses an additional layer of security through TLS encryption.

■ Best Practice

The name and IP address of the source system must be in the `hosts` file of the destination system and vice versa, or they must be resolvable through network-based DNS servers.

SVM Peering

SVM peering connects two SVMs to allow replication to occur between them, which requires cluster peering first. SVM peering enables granularity of access or the delegation of various replication operations to the SVM admin.

■ Best Practice

Name an SVM with a unique fully qualified domain name (FQDN): for example, `dataVserver.HQ` or `mirrorVserver.Offsite`.

SVM peering requires unique SVM names, and using the FQDN naming style makes it much easier establish uniqueness.

For more information about cluster peering requirements, see the FUJITSU Storage ETERNUS AX/HX series Cluster and SVM Peering Power Guide in the [Fujitsu manual site](#).

SnapMirror Relationship

A relationship created between the source volume (for example, a FlexVol or FlexGroup volume) in primary storage and the destination in secondary storage is called a data protection relationship. The creation of a SnapMirror relationship does not depend on SVM host name to IP address resolution. However, the cluster names are resolved through the cluster peer relationship, and the SVM names are internally resolved through the clusters. The host names of the source and destination SVM and cluster are used to create SnapMirror relationships in ONTAP. It is not necessary to use the IP address of an intercluster LIF.

Caution

A peer relationship is not required to mirror data between two SVMs in the same cluster or between two volumes in the same SVM.

SnapMirror relationships have the following characteristics:

- SnapMirror relationships are created and managed on the destination cluster.
- SnapMirror relationship transfers are triggered by the scheduler in the destination cluster.
- A destination volume must be created with the volume type of DP (`-type DP`) for SnapMirror initialization to succeed. You cannot change the volume `-type` property after the volume has been created.
- The destination volumes in a SnapMirror relationship are read-only until failover.
- You can failover to the secondary copy with the SnapMirror break operation, making the destination volume writable. The SnapMirror break must be performed separately for each volume.
- The destination volumes can be mounted into an SVM namespace while still read-only, but only after the initial transfer is complete.

- A destination volume in a SnapMirror relationship configured between two clusters cannot be mounted in the same namespace as the source volume, because intercluster relationships are to a different cluster and therefore to a different SVM, which is a different namespace. However, the destination volume in a SnapMirror relationship configured within a cluster can be mounted in the same namespace as the source volume if both the source and destination volumes exist in the same SVM. However, they cannot be mounted to the same mount point.
- LUNs contained in mirror destination volumes can be mapped to initiator groups (igroups) and connected to clients. However, the client must be able to support connection to a read-only LUN.
- Data protection mirror relationships can be managed using the ONTAP CLI, ONTAP System Manager, and Active IQ Unified Manager.
- If an in-progress transfer is interrupted by a network outage or aborted by an administrator, a subsequent restart of that transfer can automatically continue from a saved restart checkpoint.

Complete the following requirements before creating an intercluster SnapMirror relationship:

- Configure the source and destination nodes for intercluster networking.
- Configure the source and destination clusters in a cluster peer relationship.
- Both the source and destination SVM can have different language types, but the source and destination volumes must have the same language type.
- Configure the source and destination SVM in an SVM peer relationship.
- The destination aggregate must have adequate space to host the replicated volumes and any vault Snapshot copies retained per the configured protection policy.
- Both clusters must be configured and set up appropriately to meet the requirements of your environment for user access, authentication, and client access.
- Create a destination volume of `-type DP`, with adequate space to host the replicated volumes and any vault Snapshot copies retained per the configured protection policy.
- Assign a schedule to the SnapMirror relationship in the destination cluster to perform periodic updates. If any of the existing schedules are not adequate, a new schedule entry can be created.
- Assign a protection policy (default or custom) to the SnapMirror relationship.

SnapMirror relationship can be created in one of two ways:

- **Intercluster.** Replication between volumes in two different SVMs in different clusters operating in ONTAP. They are primarily used for providing DR to another site or location.
- **Intracuster.** Replication between two volumes in different SVMs in the same cluster or between two volumes in the same SVM. They are primarily used for maintaining a local backup copy.

■ Best Practice

- Do not reuse a destination volume from a previously existing SnapMirror relationship. Always use a newly created volume to start a new SnapMirror relationship.
- Do not delete Snapshot copies that SnapMirror creates in the source volume before copying the data to the destination. The most recent SnapMirror Snapshot copy is referred to as the newest common Snapshot copy (NCS). Incremental changes to the destination depend on the NCS. If SnapMirror cannot find the required Snapshot copy on the source, it cannot perform incremental changes to the destination.
- To avoid unnecessary autosize changes for the data protection destination FlexGroup volume, make sure to specify that the total size of the FlexGroup volume at time of volume creation is the same as the primary FlexGroup volume.
- Do not restrict or take the destination volume offline while SnapMirror is configured to transfer. Taking the destination offline prevents SnapMirror from performing updates to the destination.
- The number of constituents on the primary FlexGroup directly relates to the number of aggregate entries that need to be specified in the `-aggr-list` parameter. When choosing which aggregate is specified in the `-aggr-list`, make sure that the aggregates have enough space for the constituents.

- To ensure an efficient SnapMirror operation of FlexGroup volumes, make sure that for each FlexGroup hosted by the same set of aggregates, use a different order in the `-aggr-list` parameter. One recommendation is to rotate the aggregates in a round-robin fashion.
- Make sure that the size of each destination constituent is such that it can ingest data from the primary constituent. Otherwise, SnapMirror operations fail when they run out of space.


Fan In and Fan Out

It is possible for a volume in the source cluster to be replicated to multiple different destinations (fan-out) or volumes from different sources can be replicated to a single destination (fan-in), as shown in [Figure 12](#).

Caution

As of ONTAP 9.11.1, you can fan out a maximum of eight destination volumes from a single source volume.


Figure 12 SnapMirror fan-out and fan-in

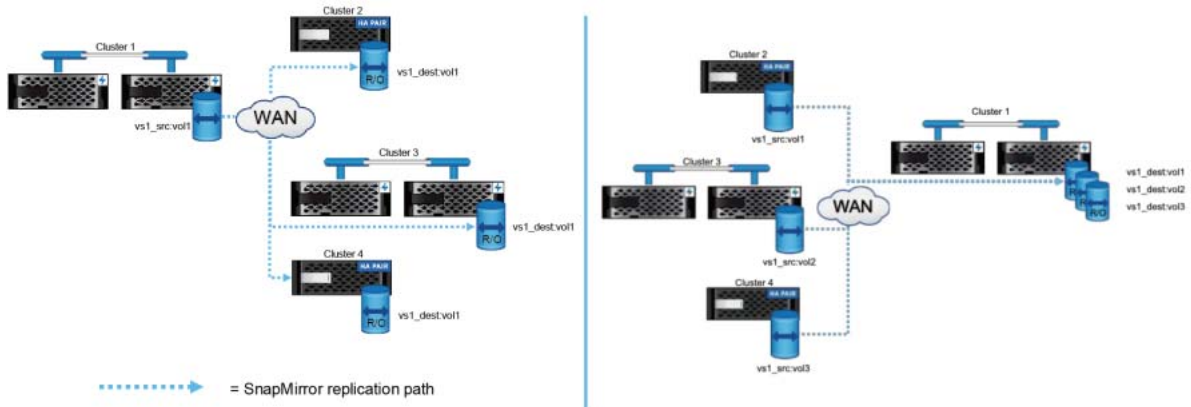

Cascade Relationship

You can replicate data from a SnapMirror destination to another system using SnapMirror. Therefore, a system that is a destination for one SnapMirror relationship can act as the source for another SnapMirror relationship. This is useful when you need to copy data from one site to many sites. Instead of replicating data from a single source to each of the destinations, you can replicate data from one destination to another destination in a series. This is referred to as cascading. In a cascade topology, you need only create intercluster networks between the primary and secondary clusters and between the secondary and tertiary clusters. You need not create an intercluster network between the primary and the tertiary cluster. An example cascade configuration with two hops is shown in [Figure 13](#).

Figure 13 SnapMirror cascade

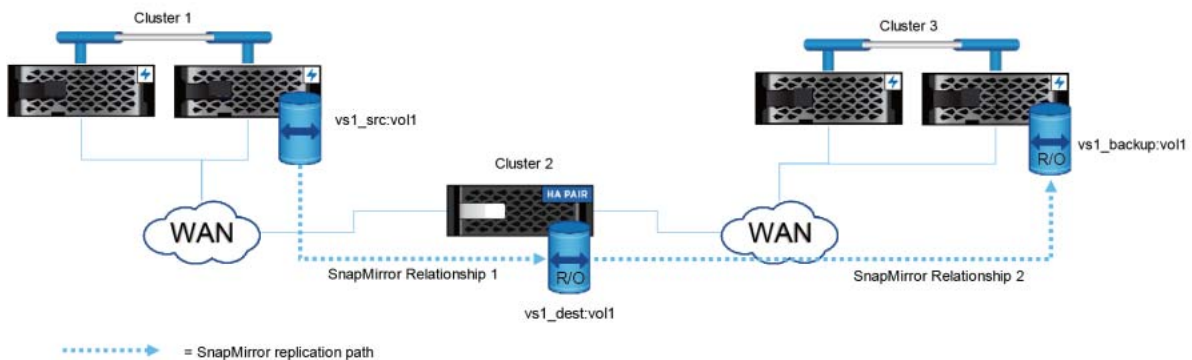

The function of this deployment is to make a uniform set of data available on a read-only basis to users from various locations throughout a network and to enable the updating of that data uniformly at regular intervals.

Snapshot copies behave in the following ways:

- SnapMirror creates a soft lock on the Snapshot copy of the source volume (tag).
- The destination system carries an extra Snapshot copy.

SnapMirror supports a different relationship for each connection to the cascade. For any relationship in the cascade chain, that relationship can be a mirror or vault. Therefore, in long-chain cascades, the following combinations of data protection relationships can be used between any three clusters in the chain:

Table 3 SnapMirror relationships

First cluster - second cluster	Second cluster - third cluster	Description
Mirror	Mirror	One cluster has a mirror relationship with a second cluster and that second cluster has a mirror relationship with a third cluster.
Mirror	Vault	One cluster has a mirror relationship with a second cluster and that second cluster has a vault relationship with a third cluster.
Vault	Vault	One cluster has a vault relationship with a second cluster and that second cluster has a vault relationship with a third cluster.

Caution

For any cascade configuration, only the initial data protection relationship can be synchronous SnapMirror (`sync` or `strictsync`). All subsequent mirror relationships in the cascade must be asynchronous.

■ Best Practice

Make sure that all the transfers to the relationship complete successfully so that your SnapMirror update does not fail with a `snapmirror busy` error.

If you use a combination mirror-vault, fan-out, or cascade deployment, you should keep in mind that updates fail if a common Snapshot copy does not exist on the source and destination volumes. You can use the `snapmirror snapshot-owner create` command to preserve a labeled Snapshot copy on the secondary in a mirror-vault deployment. Doing so provides a common Snapshot copy for the update of the vault relationship.

Some sample use cases for cascade SnapMirror relationships include:

- A backup admin can offload certain Snapshot copies to tertiary storage and thus retain more than the actual number of Snapshot copies supported by a single volume (currently 1023).
- A backup admin can tier multiple backup copies. More frequent Snapshot copies (say, daily and weekly) can be retained on secondary storage (B), whereas monthly and yearly Snapshot copies can be retained on tertiary storage (C).
- Data can be moved from SSDs to SATA drives.
- Data can be distributed globally across locations without any hindrance to ongoing operations. It can be further moved to the cloud as archival storage.

Dual-Hop Volume SnapMirror

This configuration involves volume SnapMirror replication among three clusters, which consists of a chain of relationships in which a source volume is mirrored to a secondary volume, and the secondary volume is mirrored to a tertiary volume. If the secondary volume becomes unavailable, you can synchronize the relationship between the primary and tertiary volumes without performing a new baseline transfer.

```
vs1_src:vol1 > vs1_dest:vol1 > vs1_backup:vol1
```

In the preceding configuration, `vs1_src:vol1` to `vs1_dest:vol1` and `vs1_dest:vol1` to `vs1_backup:vol1` transfers can occur at the same time.

Protection Policies

ONTAP relies on policies to dictate when to create Snapshot copies and how many copies are retained and/or replicated as a part of the relationship. Additionally, the policy helps determine the type of relationship that exists between the source and destination. SnapMirror replication limits the contents of the baseline transfer to the Snapshot copy created by SnapMirror at initialization. At each update, SnapMirror creates another Snapshot copy of the source. It then transfers the changes from this Snapshot copy and the previously transferred Snapshot copy (mirror) along with any new Snapshot copies that have labels matching the labels defined in the Snapshot policy rules based on the SnapMirror policy if the policy is a vault policy. ONTAP comes with several predefined protection policies.

Policy Types

Each SnapMirror protection policy (standard or custom) is one of several different policy types. The policy types are described in [Table 4](#).

Table 4 SnapMirror policy types

Policy type	Definition
Async-mirror	<p>The async-mirror policy type is used by SnapMirror to transfer Snapshot copies of two types:</p> <ul style="list-style-type: none"> Those source Snapshot copies created by the SnapMirror engine. (rule label = <code>sm_created</code>) All source Snapshot copies created on the volume from other Snapshot copy policies or manually created on the source volume. (rule label = <code>all_source_snapshots</code>) <div> Caution No other rules can be applied to a protection policy of type async-mirror. </div>
Vault	<p>The vault policy type is used by SnapMirror to copy only source volume Snapshot copies that match the labels provided with each rule. This replication is independent of the SnapMirror default (<code>sm_created</code>) replication process used for data protection. The Vault policy type is the default for SnapVault functionality. This policy does not replicate Snapshot copies created by the SnapMirror relationship (label = <code>sm_created</code>).</p>
Mirror-vault	<p>The mirror-vault policy type is used by SnapMirror to transfer Snapshot copies created by the SnapMirror replication engine (snapshot label = <code>sm_created</code>) and any desired source Snapshot copies that match the Snapshot copy label defined in each rule. The mirror-vault protection policy can have multiple rules defined to match the desired data protection requirements.</p>
Sync-mirror	<p>The sync-mirror policy is the default policy for SM-S. This policy supports the source and destination volumes being out of sync for short periods of time. In such conditions, if the write acknowledgement is not received from the destination data protection cluster, a write acknowledgement is still forwarded to the application. Detailed information about SM-S can be found in the related manual. Refer to the Fujitsu Storage ETERNUS AX/HX series SnapMirror Synchronous Configuration and Best Practices ONTAP 9.11.1 in the Fujitsu manual site.</p>
Strict-sync-mirror	<p>The strict-sync-mirror policy type is a policy for SM-S. This policy requires all write operations to be acknowledged by both clusters in the SnapMirror relationship before a write acknowledgement is sent to the application. If the write acknowledgement is not received from the data protection cluster, a write-fail is sent to the application and the volume is considered in a failed mode.</p>
Continuous	<p>The continuous policy type is used for S3 SnapMirror relationships. S3 SnapMirror is used to protect ONTAP S3 buckets to another cluster running ONTAP S3 or cloud-based S3 buckets.</p>
Automated-failover	<p>The automated-failover policy type is used by SnapMirror-Business Continuity and is not designed for use in custom data protection policies for asynchronous data protection.</p>

Standard Asynchronous Protection Policies

The following protection policy variants are available for the SnapMirror Asynchronous relationship creation:

- **Asynchronous**

This is an asynchronous SnapMirror policy of the mirror-vault policy type. As such, the asynchronous protection policy is for mirroring the latest file system on an hourly schedule and retaining seven Snapshot copies with the daily label and retaining 52 Snapshot copies with the weekly label from the source volume. This is the default policy for the SnapMirror relationship creation and replaces DPDefault used as the default protection policy in previous versions of ONTAP ([Figure 14](#)).

This policy consists of the following settings:

- Policy type is `mirror-vault`.
- Create snapshot is set to `true`.
- There are three rules:
 - `sm_created` replicates the changes on the source volume since the last SnapMirror generated Snapshot copy.
 - `daily` keeps seven daily Snapshot copies.
 - `weekly` keeps 52 weekly Snapshot copies.

Figure 14 SnapMirror asynchronous policy definition

```
EcoSystems-A200-A::> snapmirror policy show -policy Asynchronous -instance

Vserver: EcoSystems-A200-A
SnapMirror Policy Name: Asynchronous
SnapMirror Policy Type: mirror-vault
Policy Owner: cluster-admin
Tries Limit: 8
Transfer Priority: normal
Ignore accesstime Enabled: false
Transfer Restartability: always
Network Compression Enabled: false
Create Snapshot: true
Comment: A unified Asynchronous SnapMirror and SnapVault policy for mirroring the latest active file system and daily and weekly Snapshot copies with an hourly transfer schedule.
Total Number of Rules: 3
Total Keep: 60
Transfer Schedule Name: hourly
Throttle: unlimited

Rules:
SnapMirror Label      Keep Preserve Warn Schedule Prefix
-----
sm_created            1 false      0 -      -
daily                 7 false      0 -      -
weekly               52 false      0 -      -
```

- **DailyBackup**

This policy is an asynchronous SnapMirror policy of the vault policy type. It can be used to create a SnapVault archive of the source volume Snapshot copies that have a label = `daily`, and will retain the last seven Snapshot copies on the data protection volume. The Create Snapshot field is set to `False`, which indicates that this policy does not create any SnapMirror-related Snapshot copies on the source volume.

The included protection policies listed here are considered legacy policies but can be very useful in supporting additional data protection strategies. In ONTAP System Manager, these policies are only shown if the Show Legacy Policies option is selected when creating or editing a protection relationship ([Figure 15](#)).

This policy consists of the following settings:

- The policy type is set to `vault`.
- The Create Snapshot value is set to `false`, which means the policy does not create a Snapshot copy when an update is triggered.
- There is one rule:
 - Keep seven daily Snapshot copies.

Figure 15 DailyBackup asynchronous SnapMirror policy definition

```
EcoSystems-A200-B:> snapmirror policy show -policy DailyBackup -instance

      Vserver: EcoSystems-A200-B
SnapMirror Policy Name: DailyBackup
SnapMirror Policy Type: vault
      Policy Owner: cluster-admin
      Tries Limit: 8
      Transfer Priority: normal
Ignore accesstime Enabled: false
      Transfer Restartability: always
Network Compression Enabled: false
      Create Snapshot: false
      Comment: Vault policy with a daily rule and a daily transfer schedule.
      Total Number of Rules: 1
      Total Keep: 7
      Transfer Schedule Name: daily
      Throttle: unlimited

Rules:
SnapMirror Label      Keep Preserve Warn Schedule Prefix
-----
daily                 7 false      0 -      -
```

- **DPDefault**

This is an asynchronous SnapMirror policy for mirroring all Snapshot copies and the latest active file system from the source to the destination. This policy is available for legacy SnapMirror relationships. Administrators should use the newer MirrorAllSnapshots policy for new SnapMirror relationships.

With this configuration, the SnapMirror engine creates a Snapshot copy and then replicates the difference between the new SnapMirror Snapshot copy and the previous one and all the other Snapshot copies. If the relationship is being initialized, then a Snapshot copy is taken and everything before it is replicated. After the update is complete, the older Snapshot copy is deleted, leaving just one common SnapMirror Snapshot copy in place ([Figure 16](#)).

This policy consists of the following settings:

- Policy type is `async-mirror`.
- Create snapshot is set to `true`.
- There are two rules:
 - `sm_created` replicates the changes on the source volume since the last SnapMirror-generated Snapshot copy.
 - `all_source_snapshots` keep one copy of each unique Snapshot copy from the source volume.

Figure 16 DPDefault asynchronous SnapMirror policy definition

```
cluster_dst:> snapmirror policy show -policy DPDefault -instance

      Vserver: vs0
SnapMirror Policy Name: DPDefault
SnapMirror Policy Type: async-mirror
      Policy Owner: cluster-admin
      Tries Limit: 8
      Transfer Priority: normal
Ignore accesstime Enabled: false
      Transfer Restartability: always
Network Compression Enabled: false
      Create Snapshot: true
      Comment: Asynchronous SnapMirror policy for mirroring all
Snapshot copies and the latest active file system.
      Total Number of Rules: 2
      Total Keep: 2

Rules:
SnapMirror Label      Keep Preserve Warn Schedule Prefix
-----
sm_created             1 false      0 -      -
all_source_snapshots  1 false      0 -      -
```

- **MirrorAllSnapshots**

This also is an asynchronous policy for mirroring all Snapshot copies and the latest active file system from the primary to the secondary. This policy is similar to DPDefault ([Figure 17](#)).

This policy consists of the following settings:

- Policy type is `async-mirror`.
- Create snapshot is set to `true`.
- There are two rules:
 - `sm_created` replicates the changes on the source volume since the last SnapMirror-generated Snapshot copy.
 - `all_source_snapshots` keep one copy of each unique Snapshot copy from the source volume.

Figure 17 MirrorAllSnapshots asynchronous SnapMirror policy definition

```
cluster_dst:> snapmirror policy show -policy MirrorAllSnapshots -instance
```

Vserver: vs0						
SnapMirror Policy Name: MirrorAllSnapshots						
SnapMirror Policy Type: async-mirror						
Policy Owner: cluster-admin						
Tries Limit: 8						
Transfer Priority: normal						
Ignore accesstime Enabled: false						
Transfer Restartability: always						
Network Compression Enabled: false						
Create Snapshot: true						
Comment: Asynchronous SnapMirror policy for mirroring all snapshots and the latest active file system.						
Total Number of Rules: 2						
Total Keep: 2						
Rules:	SnapMirror Label	Keep	Preserve	Warn	Schedule	Prefix
-----	-----	----	-----	----	-----	-----
	sm_created	1	false	0	-	-
	all_source_snapshots	1	false	0	-	-

- **MirrorLatest**

This is an asynchronous policy for mirroring the latest active file system from the primary to the secondary. Using this policy, the SnapMirror engine creates a snapshot and then replicates the difference between the new SnapMirror Snapshot copy and the previous one. If the relationship is being initialized, then a snapshot is taken and everything before it is replicated. After the update is complete, the older snapshot is deleted, leaving just one common SnapMirror Snapshot copy in place ([Figure 18](#)).

This policy consists of the following settings:

- Policy type is `async-mirror`.
- Create snapshot is set to `true`.
- There is one rule:
 - `sm_created` replicates the changes on the source volume since the last SnapMirror-generated Snapshot copy.

Figure 18 MirrorLatest asynchronous SnapMirror policy definition

```
cluster_dst:> snapmirror policy show -policy MirrorLatest -instance

      Vserver: vs0
      SnapMirror Policy Name: MirrorLatest
      SnapMirror Policy Type: async-mirror
      Policy Owner: cluster-admin
      Tries Limit: 8
      Transfer Priority: normal
      Ignore accesstime Enabled: false
      Transfer Restartability: always
      Network Compression Enabled: false
      Create Snapshot: true
      Comment: Asynchronous SnapMirror policy for mirroring the latest active
file system.
      Total Number of Rules: 1
      Total Keep: 1

Rules:
SnapMirror Label      Keep Preserve Warn Schedule Prefix
-----
sm_created            1 false      0 -      -
```

- **MirrorAndVault**

This is a unified SnapMirror and SnapVault policy for mirroring the latest active file system and daily and weekly Snapshot copies. MirrorAndVault is the new default policy when no data protection mode is specified or when XDP mode is specified as the relationship type ([Figure 19](#)).

This policy consists of the following settings:

- Policy type is mirror-vault.
- Create snapshot is set to true.
- There are three rules:
 - sm_created replicates the changes on the source volume since the last SnapMirror-generated Snapshot copy.
 - daily keeps seven daily Snapshot copies.
 - weekly keeps 52 weekly Snapshot copies.

Figure 19 MirrorAndVault asynchronous SnapMirror policy definition

```
cluster_dst:> snapmirror policy show -policy MirrorAndVault -instance

      Vserver: vs0
      SnapMirror Policy Name: MirrorAndVault
      SnapMirror Policy Type: mirror-vault
      Policy Owner: cluster-admin
      Tries Limit: 8
      Transfer Priority: normal
      Ignore accesstime Enabled: false
      Transfer Restartability: always
      Network Compression Enabled: false
      Create Snapshot: true
      Comment: A unified Asynchronous SnapMirror and SnapVault policy for
mirroring the latest active file system and daily and weekly Snapshot copies.
      Total Number of Rules: 3
      Total Keep: 60

Rules:
SnapMirror Label      Keep Preserve Warn Schedule Prefix
-----
sm_created            1 false      0 -      -
daily                 7 false      0 -      -
weekly               52 false      0 -      -
```

- **Unified7year**

In this policy, you have the additional rule of monthly to transfer monthly Snapshot copies and retain them for seven years ([Figure 20](#)).

This policy consists of the following settings:

- Policy type is mirror-vault.
- Create snapshot is set to true.
- There are four rules:

- `sm_created` replicates the changes on the source volume since the last SnapMirror generated Snapshot copy.
- `daily` keeps seven daily Snapshot copies.
- `weekly` keeps 52 weekly Snapshot copies.
- `monthly` keeps 84 monthly (7 years) Snapshot copies.

Figure 20 Unified7year asynchronous SnapMirror policy definition

```
cluster_dst::> snapmirror policy show -policy Unified7year -instance

Vserver: vs0
SnapMirror Policy Name: Unified7year
SnapMirror Policy Type: mirror-vault
Policy Owner: cluster-admin
Tries Limit: 8
Transfer Priority: normal
Ignore accesstime Enabled: false
Transfer Restartability: always
Network Compression Enabled: false
Create Snapshot: true
Comment: Unified SnapMirror policy with 7year retention.
Total Number of Rules: 4
Total Keep: 144

Rules:
SnapMirror Label      Keep Preserve Warn Schedule Prefix
-----
sm_created            1 false      0 -      -
daily                 7 false      0 -      -
weekly               52 false      0 -      -
monthly              84 false      0 monthly -
```

- **XDPDefault**

This is an asynchronous SnapVault policy for mirroring all Snapshot copies with labels of Daily and Weekly. This is a legacy vault-only policy and can be used to create a SnapVault relationship ([Figure 21](#)).

This policy consists of the following settings:

- The policy type is set to vault.
- The Create Snapshot value is set to false, which means the policy does not create a Snapshot copy when an update is triggered.
- There are two rules:
 - `daily` keeps seven daily Snapshot copies.
 - `weekly` keeps 52 weekly Snapshot copies.

Figure 21 XDPDefault SnapVault policy definition

```
cluster_dst::> snapmirror policy show -policy XDPDefault -instance


Vserver: vs0
SnapMirror Policy Name: XDPDefault
SnapMirror Policy Type: vault
Policy Owner: cluster-admin
Tries Limit: 8
Transfer Priority: normal
Ignore accesstime Enabled: false
Transfer Restartability: always
Network Compression Enabled: false
Create Snapshot: false
Comment: Vault policy with daily and weekly rules.
Total Number of Rules: 2
Total Keep: 59

Rules:
SnapMirror Label      Keep Preserve Warn Schedule Prefix
-----
daily                 7 false      0 -      -
weekly              52 false      0 -      -
```

SnapMirror Schedules

A SnapMirror policy requires at least one SnapMirror job schedule that can be created to run periodic asynchronous replication by assigning a schedule to a SnapMirror relationship in the destination cluster. [Figure 22](#) shows the available job schedules in ONTAP System Manager.

Figure 22 SnapMirror schedules can be listed and created in ONTAP System Manager

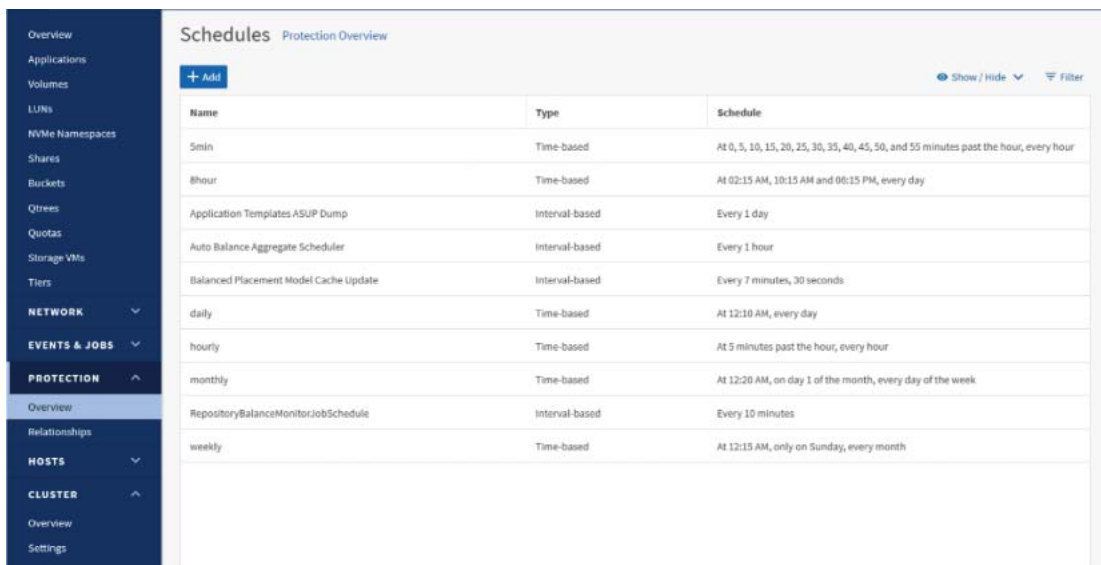

Name	Type	Schedule
5min	Time-based	At 0, 5, 10, 15, 20, 25, 30, 35, 40, 45, 50, and 55 minutes past the hour, every hour
8hour	Time-based	At 02:15 AM, 10:15 AM and 06:15 PM, every day
Application Templates ASUP Dump	Interval-based	Every 1 day
Auto Balance Aggregate Scheduler	Interval-based	Every 1 hour
Balanced Placement Model Cache Update	Interval-based	Every 7 minutes, 30 seconds
daily	Time-based	At 12:10 AM, every day
hourly	Time-based	At 5 minutes past the hour, every hour
monthly	Time-based	At 12:20 AM, on day 1 of the month, every day of the week
RepositoryBalanceMonitorJobSchedule	Interval-based	Every 10 minutes
weekly	Time-based	At 12:15 AM, only on Sunday, every month

You can alternatively create a schedule through CLI using the `job schedule cron create` command. The following example demonstrates the creation of a schedule called `Hourly_SnapMirror` that runs at the top of every hour (on the zero minute of every hour) as shown in [Figure 23](#).

Figure 23 SnapMirror schedules can be listed and created using CLI

```
cluster02::> job schedule cron create Hourly_SnapMirror -minute 0
cluster02::> job schedule cron show
Name          Description
-----
5min          @:00,:05,:10,:15,:20,:25,:30,:35,:40,:45,:50,:55
8hour         @2:15,10:15,18:15
Hourly_SnapMirror @:00
avUpdateSchedule @2:00
daily         @0:10
hourly        @:05
weekly        Sun@0:15
```

The schedule can then be applied to a SnapMirror relationship at the time of creation using the `-schedule` option or to an existing relationship using the `snapmirror modify` command and the `-schedule` option. In this example, the `Hourly_SnapMirror` schedule is applied to an existing relationship.


```
cluster02::> snapmirror modify -destination-path cluster02://vs1/vol1 -schedule Hourly_SnapMirror
```


Create a SnapMirror Relationship


You must create a SnapMirror relationship between the source on one cluster and the destination on the peered cluster to enable data protection for replicating data for DR. From ONTAP System Manager on the destination cluster, complete the following steps:

Procedure ▶▶▶

- 1 Click Relationships.
- 2 Select the volume for which you want to create a mirror relationship, and then click Save.

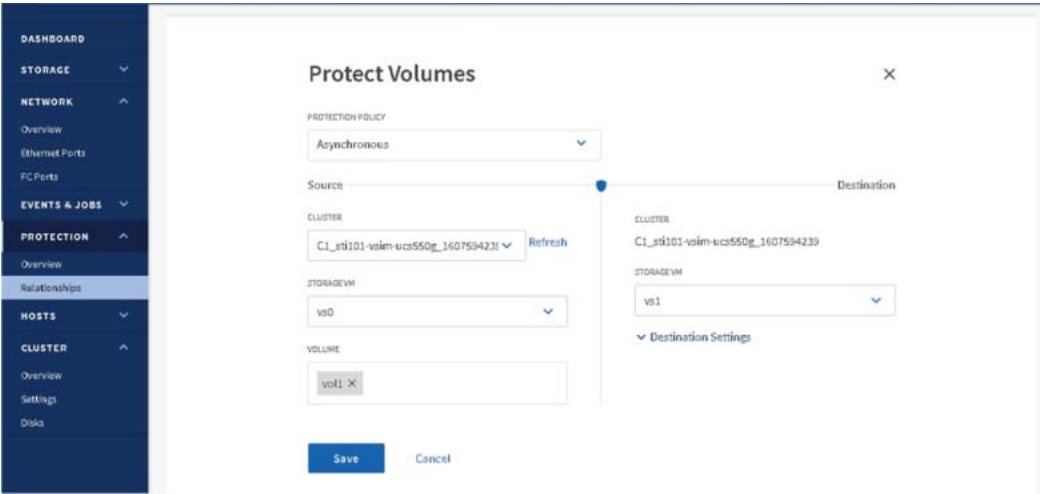


- 3 After the relationship is created and initialized, verify that the relationship status of the SnapMirror relationship is in the Mirrored state.

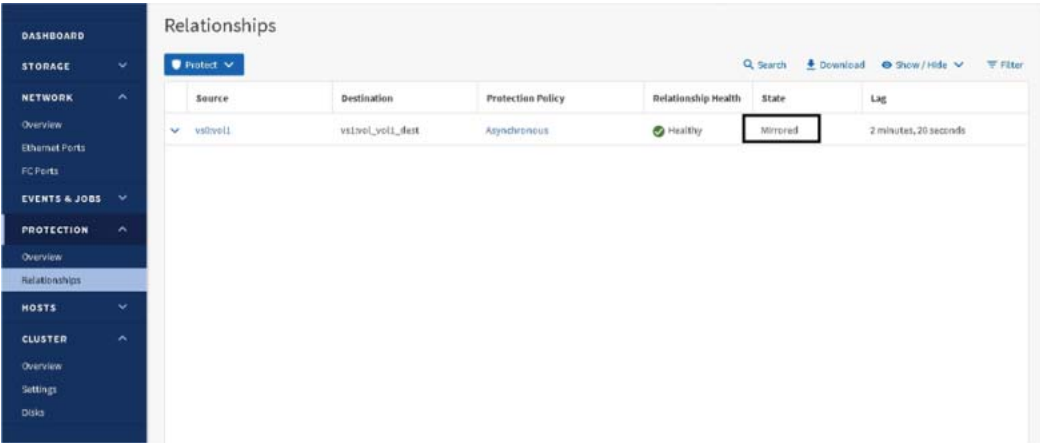

- 4 Select the SnapMirror relationship between the source and the destination volumes, and then verify the status in the Details tab.
- 5 The Details tab displays the health status of the SnapMirror relationship and shows the transfer errors and lag time.
- 6 The Is Healthy field must display Yes.

- 7 For most SnapMirror data transfer failures, the field displays No. In some failure cases, however, the field continues to display Yes. You must check the transfer errors in the Details section to verify that no data transfer failure occurred.
- 8 The State field must display Mirrored.
- 9 The lag time must be no more than the transfer schedule interval. For example, if the transfer schedule is hourly, then the lag time must not be more than an hour.
- 10 Also, navigate to the Volumes window, and then select the volume for which you created the SnapMirror relationship. Double-click the volume to view the volume details and the data protection status.

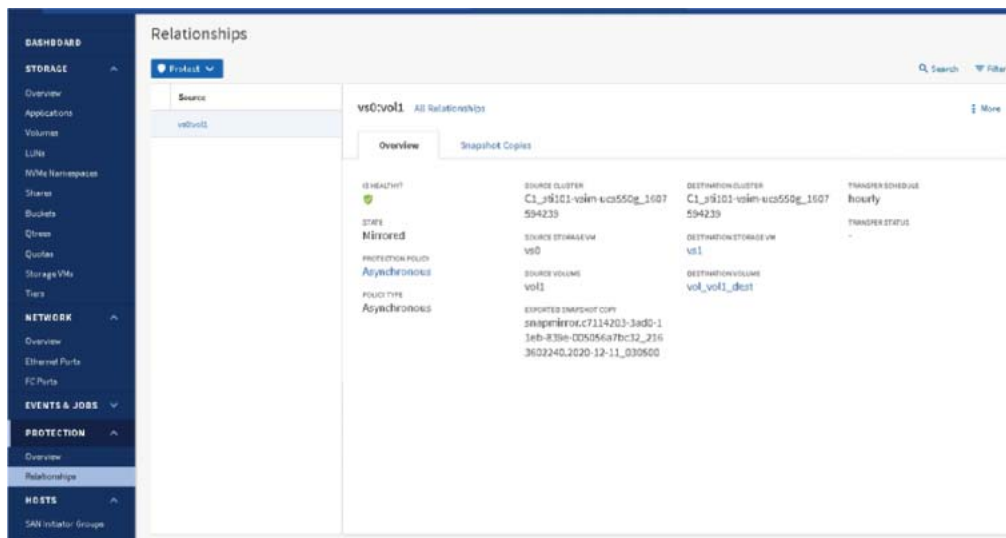

Baseline Transfer During Initialization of SnapMirror Relationship

When a new SnapMirror relationship is created, it establishes the relationship and the metadata that defines it. You can optionally select Initialize the Relationship to perform a baseline transfer from the source to the destination based on the SnapMirror policy that defines the content of the baseline and any updates. The process is as follows:

Procedure

- 1 Make a Snapshot copy of the source.
- 2 Transfer the Snapshot copy to the destination.
- 3 Depending on the SnapMirror policy attached to the relationship, it also transfers other Snapshot copies from the source to the destination.
- 4 After baseline transfer, updates to this relationship occur according to the schedule assigned to the SnapMirror relationship.

4. SnapMirror Configuration

Manual Update to the SnapMirror Relationship

The destination is a volume that you have already created and marked restricted. After SnapMirror finishes transferring the data, it brings the destination online in a read-only state. While the initial data transfer is taking place, the destination is marked invalid in the output of a `vol status` command. The volume becomes valid and goes online after the initial transfer is complete. Now, the files and Snapshot copies in the source volume should be available on the destination.

Manual Update to the SnapMirror Relationship

You might need a manual update the SnapMirror relationship either from the newest Snapshot copy or from a specific Snapshot copy to prevent data loss due to an upcoming power outage, scheduled maintenance, or data migration ([Figure 24](#) and [Figure 25](#)).

Figure 24 Start a SnapMirror relationship update


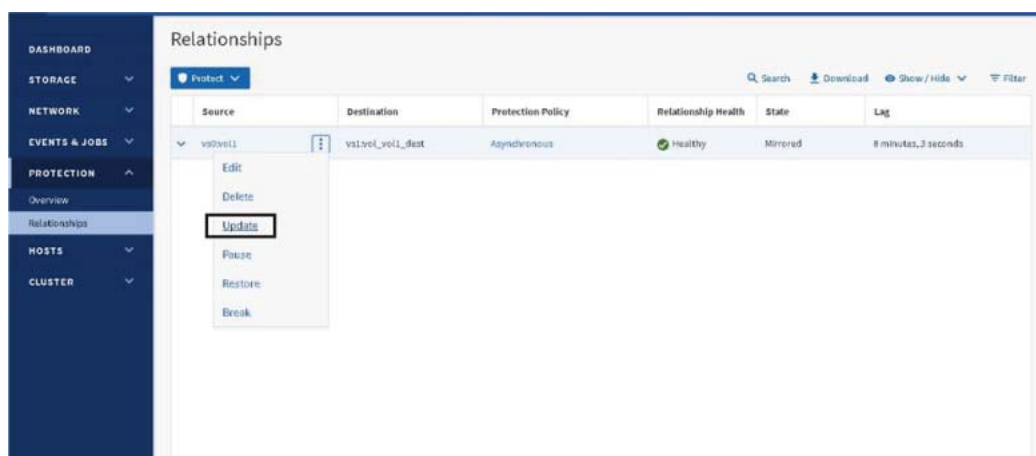


Figure 25 Relationship update dialog

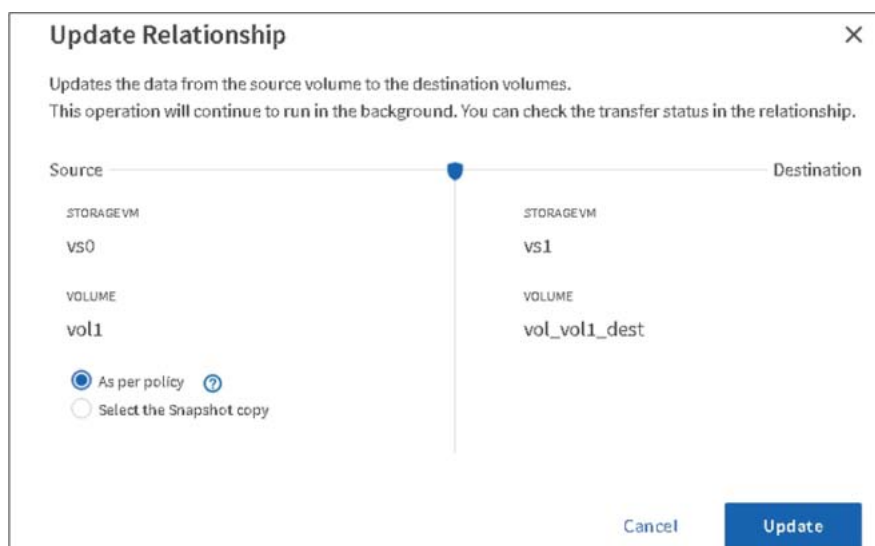

After the update completes, the Transfer State field changes from Transferring to Idle.

5. Converting Between Different Data Protection Modes

Convert a Legacy DP SnapMirror Relationship to an XDP SnapMirror Relationship

As of ONTAP 9.11.1, SnapMirror relationships of type DP are supported only for preexisting SnapMirror relationships within the cluster. This is a phased effort to fully deprecate DP type relationships within a future ONTAP release. In preparation for DP relationships being deprecated, Fujitsu recommends that existing DP relationships be converted to new XDP relationships.

To perform this conversion, complete the following high-level steps:

Procedure ►►►

- 1 Quiesce the SnapMirror relationship on the destination cluster.
- 2 Break the SnapMirror relationship on the destination cluster.
- 3 Delete this SnapMirror relationship.
- 4 Create a SnapVault relationship (MirrorAndVault: default protection policy for XDP) between the same endpoints.
- 5 Perform a resync between the endpoints. This resync converts a DR destination to a vault destination without another baseline. A metadata rebuild takes 10 to 12 minutes per TB of source data.

The following steps present this process in detail:

Procedure ►►►

- 1 Quiesce the SnapMirror relationship.

```
Remote::> snapmirror quiesce -destination-path vs1:vol_voll_dr
Operation succeeded: snapmirror quiesce for destination "vs1:vol_voll_dr".
```

- 2 Perform a SnapMirror break operation.

```
Remote::> snapmirror break -destination-path vs1:vol_voll_dr
[Job 128] Job succeeded: SnapMirror Break Succeeded
```

The status of SnapMirror relationship is displayed as Broken Off.

```
Remote::> snapmirror show -destination-path vs1:vol_voll_dr -fields state
source-path      desitnation-path  state
-----
Vs0:vs0voll      vs1:voll_voll_dr  broken off
```

As a result of the break operation, the destination volume changes from DP to RW:

```
Remote::> volume show -volume voll_voll_dr -fields type
vserver          volume            type
-----
Vs1              voll_voll_dr      RW
```

- 3 Run the snapmirror delete command.


```
Remote::> snapmirror delete -destination-path vs1:vol_voll_dr
Operation succeeded: snapmirror delete the relationship with destination vs1:vol_voll_dr.
```

5. Converting Between Different Data Protection Modes

Convert a Legacy DP SnapMirror Relationship to an XDP SnapMirror Relationship

Caution

ONTAP System Manager includes the release operation by deleting the relationship without releasing the base Snapshot copies. Uncheck the Release the Source Volume Base Snapshot Copies option to ensure that a new baseline is not created. You want these base Snapshot copies so that another baseline is not required when you create the SnapVault relationship.

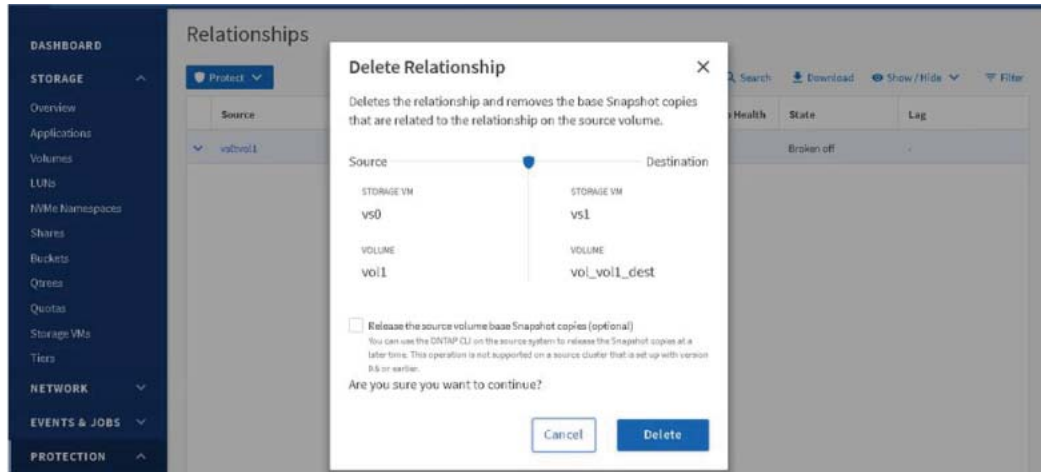

4 Create the SnapVault relationship.

```
Remote::> snapmirror create -source-path vs0:voll -destination-path vs1:vol_voll_dr -type XDP
Operation succeeded: snapmirror create the relationship with destination vs1:vol_voll_dr .
```

5 Verify that the SnapVault relationship has been created and the Mirror State is Broken-off.

```
Remote::> snapmirror show
```

Source Path	Type	Destination Path	Mirror State	Relationship Status	Total Progress	Progress Healthy	Last Updated
vs0:voll	XDP	vs1:vol_voll_dr	Broken-off	Idle	-	true	-

6 Perform a SnapMirror resync operation.

```
Remote::> snapmirror resync -destination-path vs1:vol_voll_dr

Warning: All data newer than Snapshot copy snapmirror.c7114203-3ad0-11eb-839e-
005056a7bc32_2163602240.2020-12-11_032052 on
        volume vs1:vol_voll_dest will be deleted.
Do you want to continue? (y/n): y
Operation is queued: initiate snapmirror resync to destination "vs1:vol_voll_dest".
```


7 Run the snapmirror show command to view the relationship type and status.

```
Remote::> snapmirror show
```

Source Path	Type	Destination Path	Mirror State	Relationship Status	Total Progress	Progress Healthy	Last Updated
vs0:voll	XDP	vs1:vol_voll_dr	Snapmirrored	Idle	-	true	-


You can verify the relationship status is Snapmirrored in ONTAP System Manager.

5. Converting Between Different Data Protection Modes
Convert a Legacy DP SnapMirror Relationship to an XDP SnapMirror Relationship

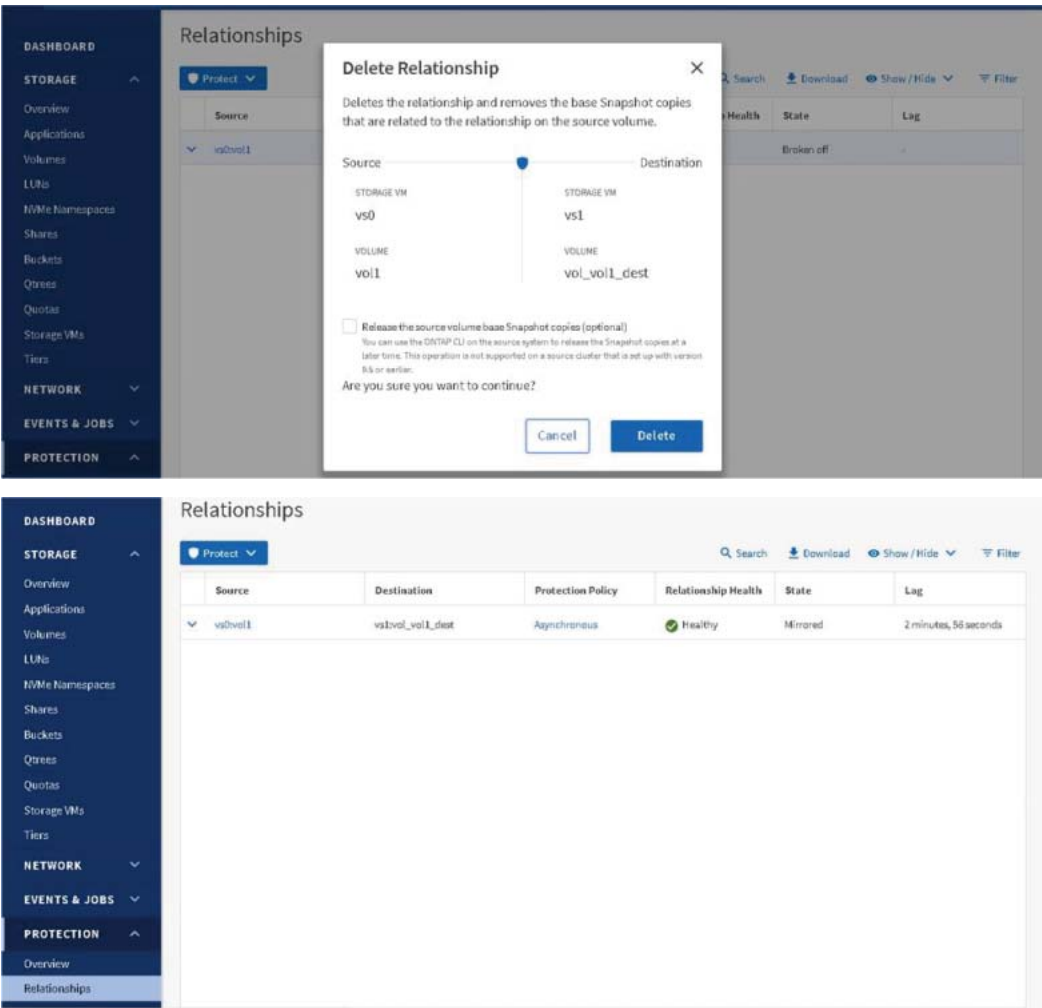

8 The SnapVault destination volume is of type Data Protection for use as a DR volume.

```
Remote::> volume show -volume vol1_vol1_dr -fields type
vserver                                volume                                type
-----
Vs1                                    vol1_vol1_dr                          DP
```

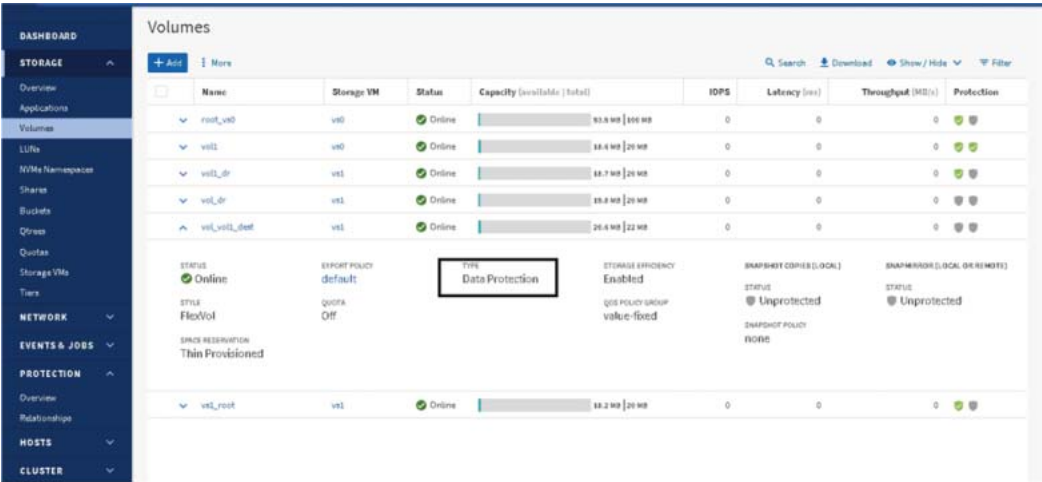

Convert SnapMirror to Unified Replication

Consider the following scenario: an existing customer using SnapMirror wants to use SnapMirror Unified Replication to use a single destination volume for DR and backup. Complete the following steps for the conversion:


Procedure ►►►

- 1 Break the SnapMirror volume relationship from the destination cluster.
- 2 Delete the SnapMirror volume relationship.
- 3 Create a unified relationship (MirrorAndVault) between the same endpoints with one of the default SnapMirror unified replication policies.
- 4 Perform a resync operation between the endpoints. This resync converts the relationship to a SnapMirror unified replication configuration without having to perform a rebaseline.

The following steps present this process in detail:

Procedure ►►►

- 1 View the status of the SnapMirror relationship. The SnapMirror relationship state is shown as Mirrored.

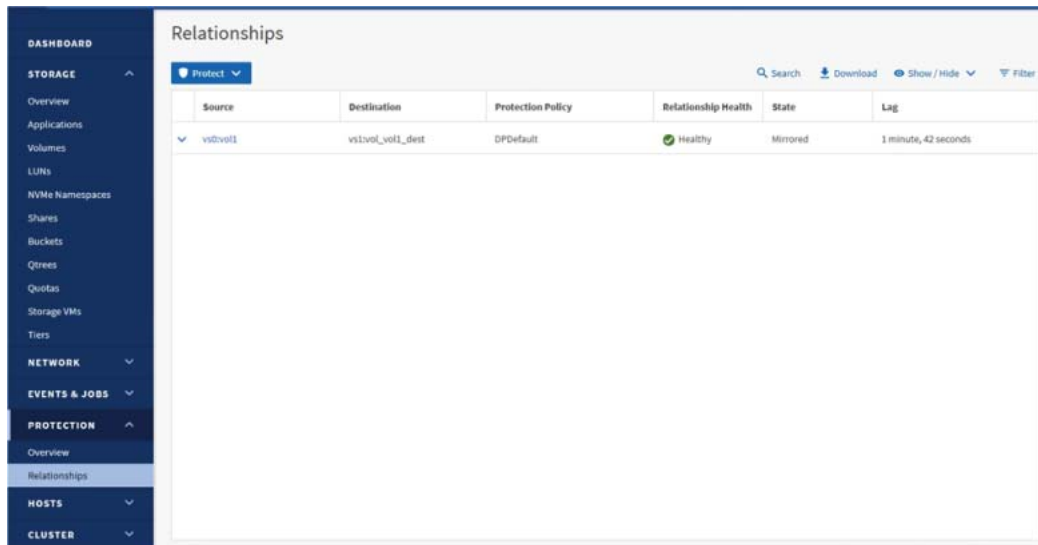

The screenshot shows the 'Relationships' table in the SnapMirror interface. The table has columns for Source, Destination, Protection Policy, Relationship Health, State, and Lag. A single row is visible with the following data: Source is 'vs1vol1', Destination is 'vs1vol_voll_dest', Protection Policy is 'DPDefault', Relationship Health is 'Healthy' (indicated by a green checkmark), State is 'Mirrored', and Lag is '1 minute, 42 seconds'. The left sidebar shows the navigation menu with 'PROTECTION' expanded and 'Relationships' selected.

Source	Destination	Protection Policy	Relationship Health	State	Lag
vs1vol1	vs1vol_voll_dest	DPDefault	Healthy	Mirrored	1 minute, 42 seconds


- 2 To convert to SnapMirror unified replication, perform a SnapMirror Break operation.

```
Remote::> snapmirror break -destination-path vs1:vol_voll_dr  
[Job 128] Job succeeded: SnapMirror Break Succeeded
```

The SnapMirror relationship is shown to be Broken Off.

5. Converting Between Different Data Protection Modes


Convert SnapMirror to Unified Replication

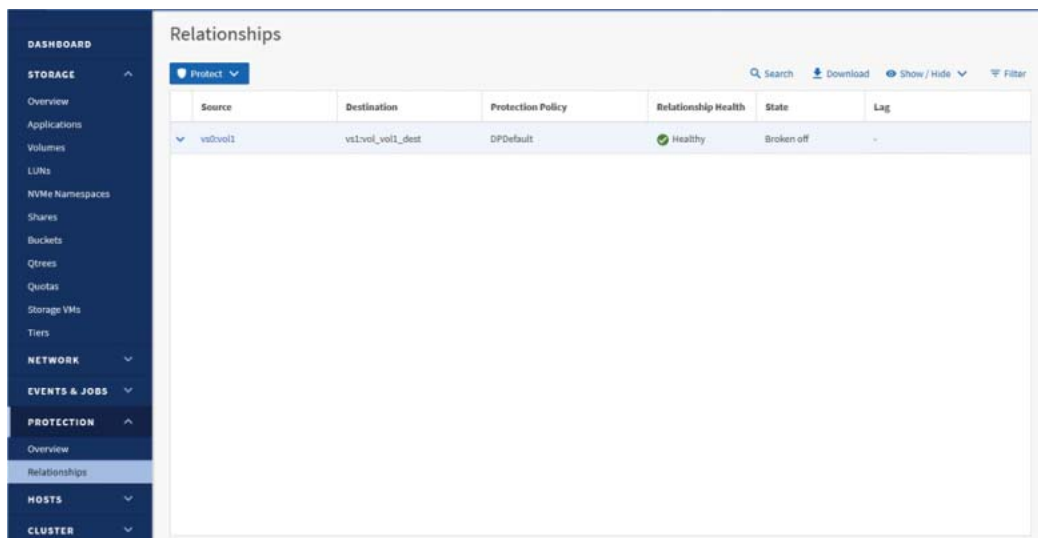

3 Run the `snapmirror delete` command.

```
Remote::> snapmirror delete -destination-path vs1:vol_voll_dr -relationship-info-only true
Operation succeeded: snapmirror delete the relationship with destination vs1:vol_voll_dr.
```

4 Delete the SnapMirror relationship without releasing the base Snapshot copies.

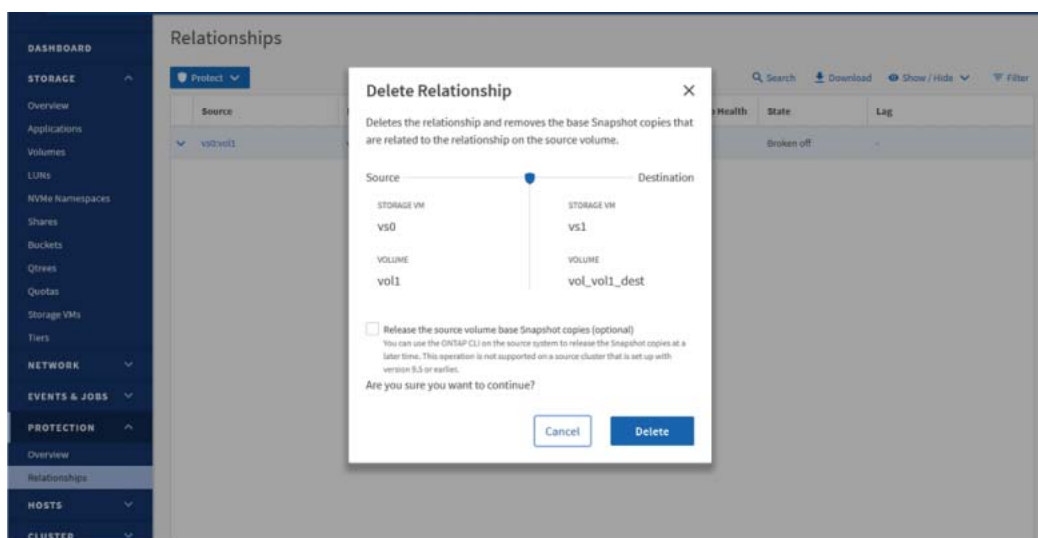

This relationship disappears from the destination cluster under Protection > Relationships.

5 Create the unified replication relationship by running the `snapmirror create` command.

```
Remote::> snapmirror create -source-path vs0:vol1 -destination-path vs1:vol_voll_dr-type XDP -
policy MirrorAllSnapshot
Operation succeeded: snapmirror create the relationship with destination svm_dst1:Source_dest.
```


6 Run the `snapmirror show` command to see the relationships created or view in ONTAP System Manager.

```
Remote::> snapmirror show
```

Source Path	Type	Destination Path	Mirror State	Relationship Status	Total Progress	Progress Healthy	Last Updated
vs0:vol1	XDP	vs1:vol_voll_dr	Broken-off	Idle	-	true	-

5. Converting Between Different Data Protection Modes


Convert SnapMirror to Unified Replication

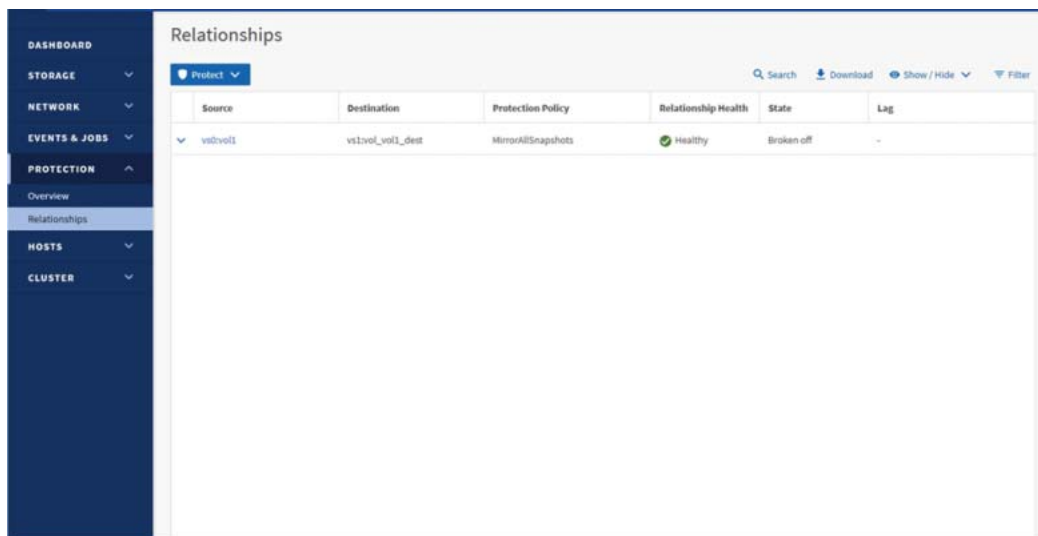

7 Run the `snapmirror resync` command in CLI or through ONTAP System Manager.

```
Remote::> snapmirror resync -destination-path vs1:vol_voll_dr

Warning: All data newer than Snapshot copy snapmirror.12ceb7f0-b078-11e8-baec-
005056b013db_2160175149.2020-01-24_091316 on volume
vs1:vol_voll_dr will be deleted.
Do you want to continue? (y|n): y
Operation is queued: initiate snapmirror resync to destination "vs1:vol_voll_dr".
```

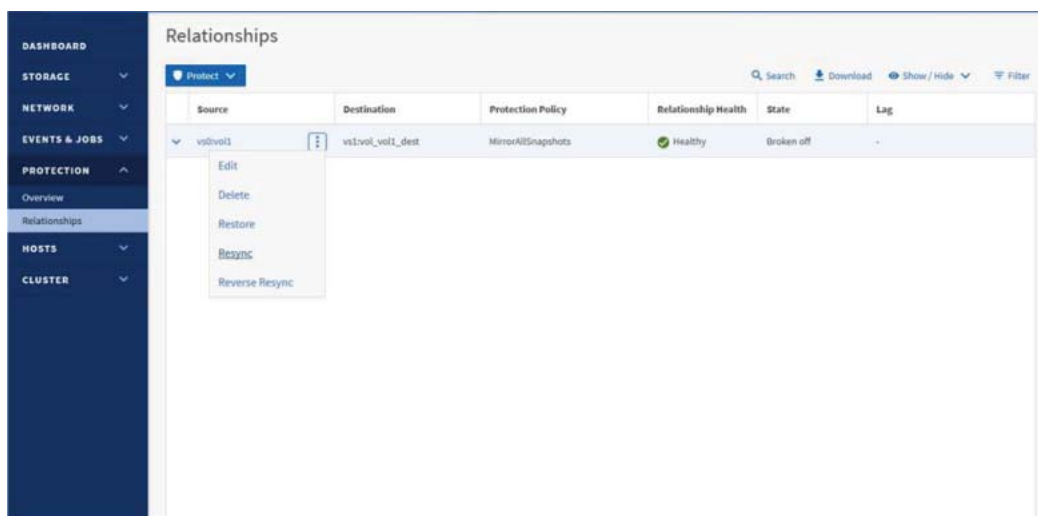


8 Run the `snapmirror show` command to verify the relationship status or view in ONTAP System Manager.

```
Remote::> snapmirror show
```

Source Path	Type	Destination Path	Mirror State	Relationship Status	Total Progress	Healthy	Progress Last Updated
vs0:vol1	XDP	vs1:vol_voll_dr	Snapmirrored Idle	Idle	-	true	-


5. Converting Between Different Data Protection Modes
Convert SnapMirror to Unified Replication

The SnapMirror relationship is now of type MirrorAllSnapshots.

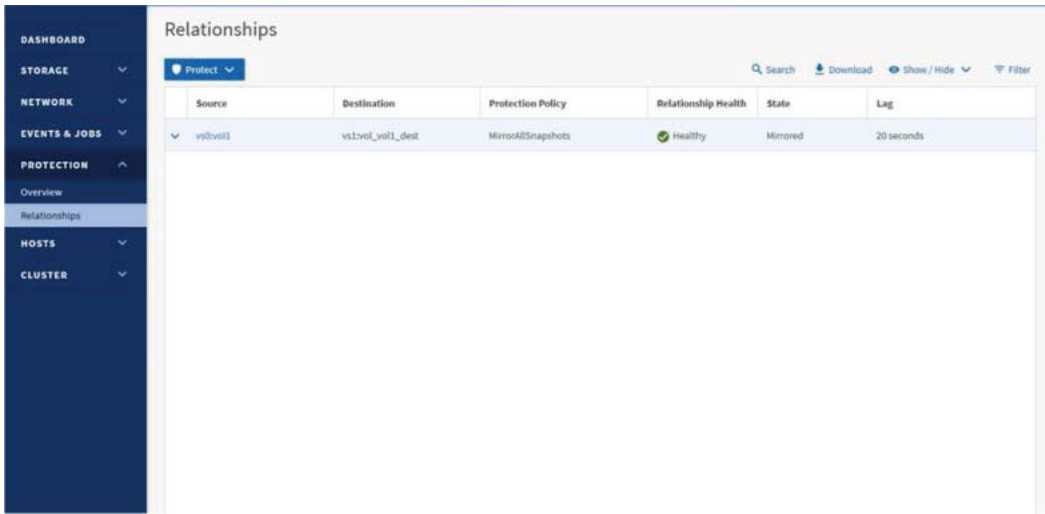

Source	Destination	Protection Policy	Relationship Health	State	Lag
vs0/vol1	vs1/vol1_dest	MirrorAllSnapshots	Healthy	Mirrored	20 seconds

9 The destination volume changes from type `rw` to type `dp`.

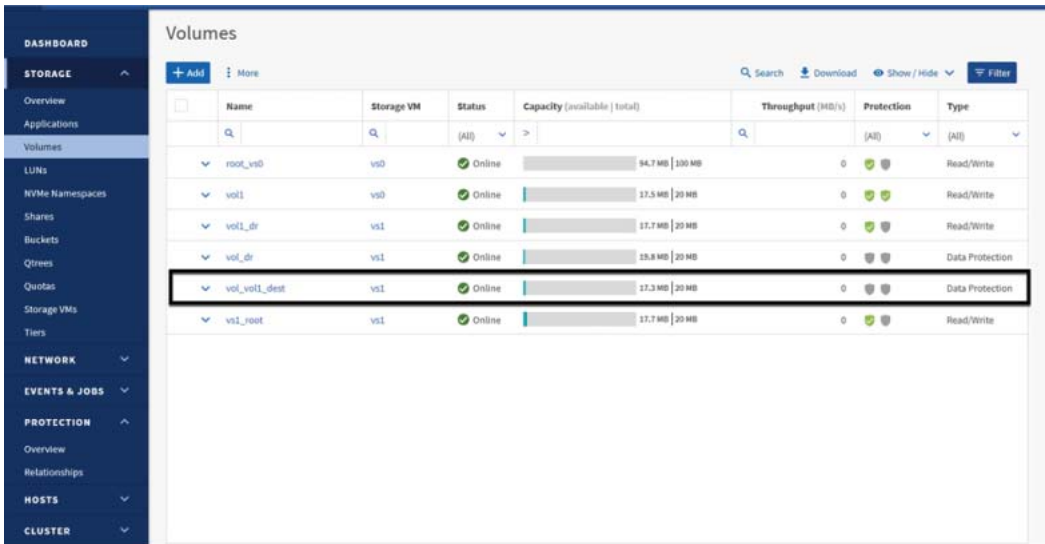

Name	Storage VM	Status	Capacity (available total)	Throughput (MB/s)	Protection	Type
root_vs0	vs0	Online	94.7 MB 100 MB	0	✓	Read/Write
vol1	vs0	Online	17.5 MB 20 MB	0	✓	Read/Write
vol1_dr	vs1	Online	17.7 MB 20 MB	0	✓	Read/Write
vol_dr	vs1	Online	19.8 MB 20 MB	0	✓	Data Protection
vol_vol1_dest	vs1	Online	17.3 MB 20 MB	0	✓	Data Protection
vs1_root	vs1	Online	17.7 MB 20 MB	0	✓	Read/Write

6. SnapMirror and ONTAP Feature Interaction

SnapMirror and Snapshot Copies

SnapMirror creates a Snapshot copy before it performs a replication update. A SnapMirror Snapshot copy is created on the source volume and a Snapshot copy label of `sm_created` is applied. The new Snapshot copy is then compared to the previous SnapMirror Snapshot copy that was replicated to the data protection volume. Any data changes between the new SnapMirror Snapshot copy and the previous one (including all Snapshot copies on the volume between the two SnapMirror Snapshot copies and all data in those Snapshot copies) is replicated to the destination volume. After the SnapMirror update is complete, the new SnapMirror Snapshot copy is exported on the destination system. SnapMirror maintains a history of one SnapMirror Snapshot copy on the source volume and two on the destination volume.

■ Best Practice

Verify that SnapMirror updates are not scheduled to occur on the source volume at the same time as other Snapshot copies.

ONTAP maintains locks on Snapshot copies created by SnapMirror to prevent them from being deleted by mistake because these Snapshot copies are required to perform scheduled updates. If the Snapshot copies created by SnapMirror must be deleted, the volumes can still be resynchronized. You do not have to perform a full baseline if other common Snapshot copies between the two volumes still exist on the volumes.

In the following example, a SnapMirror resync is performed on a volume where all Snapshot copies created by SnapMirror were deleted and uses the hourly Snapshot copy as the base for the resync.

```
cluster02:> snapmirror resync -source-path cluster01://vs1/vol1 -destination-path
cluster02://vs2/vol1
Warning: All data newer than Snapshot copy hourly.2011-12-06_1805 on volume cluster02://vs2/vol1
will be deleted.
Do you want to continue? {y|n}: y
[Job 1364] Job is queued: snapmirror resync to destination cluster02://vs2/vol1.
```


SnapMirror and Qtrees

Qtrees are special directories that allow the application of file system quotas for NAS. ONTAP allows creation of qtrees, and qtrees can exist in volumes that are replicated with SnapMirror. However, SnapMirror does not allow replication of individual qtrees or qtree-level replication because SnapMirror replications operates only at the volume level.

SnapMirror and FlexGroup Volumes

Starting with ONTAP 9.9.1, SnapMirror supports FlexGroup volumes as source and destination in cascade and fan-out configurations ([Figure 26](#)). Destinations can be on-premises or cloud-hosted Cloud Volumes ONTAP clusters.

Figure 26 FlexGroup volumes used in SnapMirror cascade and fan-out configurations

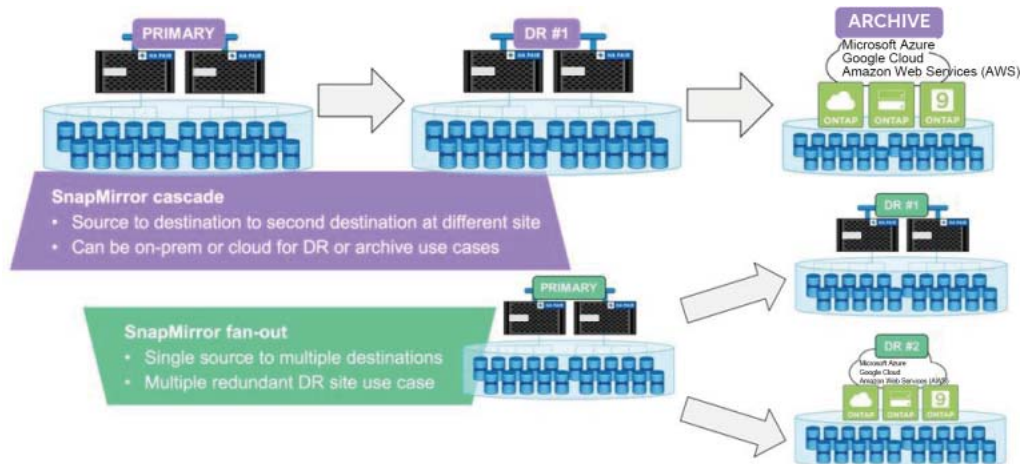

SnapMirror for SVM Protection

SVM DR is a function that protects SVMs by using SnapMirror. SVM DR includes, by default, replication of the FlexVol and FlexGroup volumes owned by the SVM as well as the SVM configuration and identity information to a remote destination. Although SVM DR uses the same SnapMirror replication technology as SnapMirror for volumes, there are some differences:

Table 5 Differences between SVM DR and SnapMirror

SVM DR	SnapMirror
Works at SVM-level granularity	Works at volume-level granularity
Protects FlexVol and FlexGroup data and SVM configuration	Protects only data stored in FlexVol and FlexGroup volumes
Minimum supported recovery point objective (RPO) is 15 minutes	Minimum supported RPO is 5 minutes

Table 6 SVM DR scalability


ONTAP versions	Supported data protection relationships
ONTAP 9.9 and earlier	32 per cluster
ONTAP 9.10.1	64 per cluster
ONTAP 9.11.1	128 per cluster

SVMs in a data protection relationship can host up to 600 FlexVol volumes.

SVM DR can be configured in two modes using the `-identity-preserve` and `-discard-configs` parameter to the `snapmirror create` command.

As of ONTAP 9.11.1, SVMs residing on either end of a MetroCluster relationship can be used as a source SVM for SVM DR. The combination of MetroCluster and SVM DR can be used to build a three-site DR topology that provides continuous availability at local or metropolitan distances and DR capabilities at longer distances with the ability maintaining the SVM identity across all three sites ([Figure 27](#)).

Figure 27 SVM DR with MetroCluster

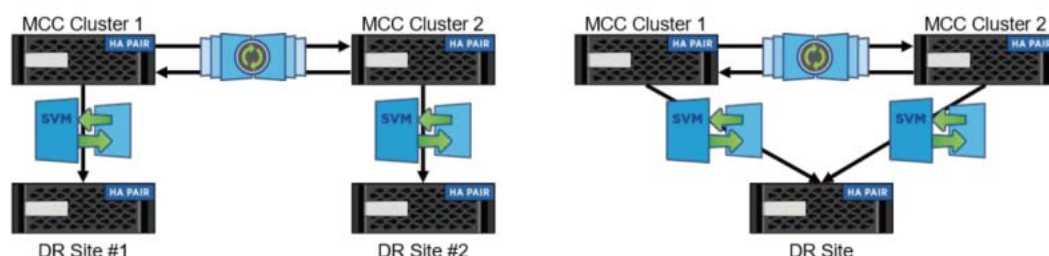

SVM DR Support for FlexGroup Volumes

Starting with ONTAP 9.9.1, SVM DR can be used with FlexGroup volumes. With this support, SnapMirror SVM relationships transferred to the destination cluster will retain full awareness of FlexGroup volumes and properly mount those volumes in a DR scenario.

The following features are not supported for SVM DR using FlexGroup volumes:

- FabricPool
- FlexClone volumes on source or destination clusters
- SnapMirror fan-out configurations
- SnapMirror cascade configurations
- Converting FlexVol volumes to FlexGroup volumes

SVM Data Mobility

SVM data mobility is a feature that allows a cluster administrator to move an SVM (including data and SVM configuration information) from one cluster to another. This feature is not dependent on having a previous SVM DR relationship configured for the SVM being moved.

SVM migration does not support SAN protocols.

SVM migration supports up to 100 FlexVol volumes per SVM.

Nondisruptive (NDO) SVM migration is supported between HA pairs in the ETERNUS AX series for most NFSv3, NFSv4.1, and NFSv4.2 workloads.

Starting with ONTAP 9.11.1, SVM migration supports clusters with up to three HA pairs in the source or destination clusters. Prior to 9.11.1, SVM migration was only supported on clusters with a single HA pair.

SVMs in a data protection relationship can host up to 600 FlexVol volumes.

Table 7 SVM migration limitation summary


Feature	SVM data mobility
Scale	100 FlexVol volumes Six-node clusters
Network	L2 with < 2msec RTT latency

Feature	SVM data mobility
Platform	ETERNUS AX series only ONTAP version 9.10.1 or later
Protocols	NFSv3, NFSv4.1, NFSv4.2
Data management	Snapshot copies Storage efficiency
Data security	VE OKM External Key Management (EKM)

SnapMirror and FlexClone Technologies

FlexClone technology allows you to create a writable volume from a read-only SnapMirror destination volume without interrupting the SnapMirror replication process. Although a SnapMirror relationship can be created using a FlexClone volume as the source, the SnapMirror destination volume cannot be a FlexClone volume. [Figure 28](#) illustrates the creation of a FlexClone volume at the SnapMirror destination.

Figure 28 Creating a FlexClone volume at a SnapMirror destination

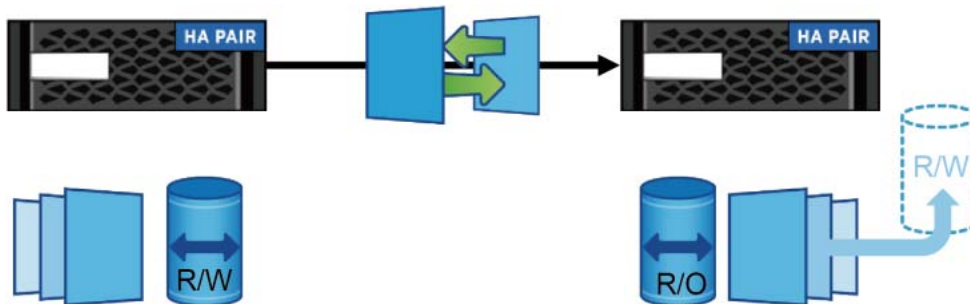

SnapMirror replicates the Snapshot copy history from a source to a destination volume. If a Snapshot copy is removed from the source volume, the next SnapMirror update removes that Snapshot copy from the destination volume. If that Snapshot copy is the basis for a FlexClone volume, then the SnapMirror update will fail. The only way for a SnapMirror update to proceed is to delete the FlexClone volume or split it to remove the Snapshot copy dependency.

To avoid this issue when creating FlexClone volumes on SnapMirror destination, manually create a base Snapshot copy required by the FlexClone volume on the source system, then replicate that Snapshot copy to the destination system and use that Snapshot copy as the base for the FlexClone volume, as shown in [Figure 28](#). Using a Snapshot copy specifically created for the FlexClone volume in this manner prevents the SnapMirror update from failing due to an automatically created Snapshot copy being removed from the source system. The label associated with this Snapshot copy should also not use any labels that are associated with any SnapMirror replication policy rules in effect. This ensures that the retention policies for Snapshot copies using the preexisting labels do not attempt to delete the Snapshot copy associated with the FlexClone volume.

SnapMirror and Storage Efficiency

SnapMirror maintains storage efficiency benefits in replicated volumes. If the source volume is deduplicated, the destination volume is in a deduplicated state as well. SnapMirror does not inflate deduplicated data during a transfer. If the source volume is compressed, the destination volume is in a compressed state as well. Replication of compressed volumes does not decompress the source volume to read data for a transfer. Rather, data is replicated in a compressed state to the destination volume.

If you are using legacy SnapMirror relationships (`type -dp`), you cannot enable different storage efficiency configurations for the source and destination volumes. For example, it is not possible to compress or deduplicate the SnapMirror destination volume alone without enabling compression or deduplication on the SnapMirror source volume.

SnapMirror creates a Snapshot copy before performing an update transfer. Any blocks in the Snapshot copy are locked and cannot be deduplicated. Therefore, if maximum space savings from deduplication are required, run the dedupe process before performing SnapMirror updates.

■ Best Practice

Make sure that deduplication and SnapMirror operations do not run at the same time. You should start SnapMirror transfer of a deduplicated volume after the deduplication operation is complete. This prevents any effects on replication performance while deduplication is in progress and sending of undeduplicated data and additional temporary deduplication metadata files over the network.

SnapMirror and Volume Move

The volume-move capability allows volumes to be moved nondisruptively between nodes in the cluster using the `volume move` command. The SnapMirror relationship does not have to be reconfigured or modified on the source or destination when a volume move is performed. If a volume in an intercluster SnapMirror relationship is moved, the node to which the volume is moved must have an intercluster LIF and be connected to the intercluster network to successfully perform SnapMirror updates.

The effect a volume move has on a SnapMirror relationship depends on whether the source volume or the destination volume is being moved. If a SnapMirror transfer is currently in progress and the SnapMirror source volume is being moved, then both the SnapMirror transfer, and the volume move transfer can run simultaneously. However, when the volume move cutover occurs (the moment ONTAP redirects I/O to the new volume), the active SnapMirror transfer is then momentarily interrupted and automatically continues from the source volume's new location.

SnapMirror for Drive Shelf Failure Protection

You can mirror volumes to nodes in a different HA pair on the same cluster. Mirroring to a different HA pair ensures that the other volume is always placed on a different drive shelf. If mirroring to a different drive shelf on the same node, then the mirror must be on a different aggregate. There is still a risk that an aggregate might have a constituent drive from any drive shelf due to drive failure and having a spare assigned. This configuration avoids having a single point of failure and provides protection against drive shelf failure.

One caveat is that the configuration does not fail over automatically. You must manually break the SnapMirror relationship, unmount the clients, remount the clients on the destination volumes, and change the NFS export policies.

SnapMirror and Volume Autosize

When using SnapMirror XDP relationships, it is possible to mirror a larger volume from a source to a smaller volume on the destination due to the integrated data efficiencies native to the LRSE replication process used by XDP relationships. It is recommended that destination volumes be similar in size (or larger) than the source volume and enable the Autosize option.

■ Best Practice

- Keep the source and destination volumes the same size or slightly larger with the Auto Grow option enabled on the destination volume.
- If Autosize is enabled on the source, Fujitsu recommends that you enable Autosize on the destination to ensure adequate capacity for the SnapMirror transfers.

When autosize increases the size of the source volume of a SnapMirror relationship, the destination volume also automatically increases in size.

SnapMirror and NDMP

NDMP backups can be performed from either a SnapMirror source or destination volume. When a SnapMirror destination is backed up to tape with the dump engine, only the data in the volume is backed up. However, if a SnapMirror destination is backed up to tape using SMTape, then the metadata is also backed up. The SnapMirror relationships and the associated metadata are not backed up to tape. Therefore, during restore, only the data on that volume is restored, but the associated SnapMirror relationships are not restored. There are advantages to performing NDMP backups from SnapMirror destination volumes rather than from source volumes, including the following:

- SnapMirror transfers can happen quickly and with less effect on the source system. Use Snapshot copies and perform SnapMirror replication from a primary system as a first stage of backup to significantly shorten or eliminate backup windows. Then perform NDMP backup to tape from the secondary system.
- SnapMirror source volumes are more likely to be moved to optimize the production environment than the DR volumes on the destination.

SnapMirror and FabricPool

The SnapMirror replication interval should be set to a lower value than the FabricPool tiering policy to make sure that all data is protected. FabricPool alone does not represent a data protection strategy.

7. Performance

There are multiple factors that can affect the performance of replication:

- **Node CPU utilization**
CPUs will be shared between various data operations such as application data access and data protection operations.
- **Number of concurrent SnapMirror operations**
Each transfer operation takes additional CPU cycles and network bandwidth to move data. The fewer concurrent transfers occurring at a given time, the faster each transfer operation will complete. The supported number of concurrent transfers supported will depend on node model and ONTAP version.
- **Type of transfer: initialization or update**
A new SnapMirror relationship requires a baseline Snapshot copy to be transferred that includes all data in the volume at the time of relationship initialization. Subsequent updates will only transfer the differential data changes since the previous SnapMirror Snapshot copy creation.
- **Node hardware type**
The node model, configuration (including drive types, number of drives in the aggregate, number of volumes in the aggregate, and intercluster network physical port type) will directly effect SnapMirror performance.

Calculate SnapMirror and SnapVault Throughput for Performance

Throughput for a relationship can be determined based on the amount of data moved over a set period. To determine throughput, the fields to note are the Last Transfer Size and Last Transfer Duration. To find the transfer throughput, divide the transfer size by the transfer duration.

```
cluster::> snapmirror show -destination-path vs3:dst -instance

      Source Path: vs1:src_test
      Destination Path: vs3:dst
      Relationship Type: DP
      Relationship Group Type: none
      SnapMirror Schedule: -
      SnapMirror Policy Type: async-mirror
      SnapMirror Policy: DPDefault
      Tries Limit: -
      Throttle (KB/sec): unlimited
      Mirror State: Snapmirrored
      Relationship Status: Transferring
      File Restore File Count: -
      File Restore File List: -
      Transfer Snapshot: snapmirror.89659724-bd35-11e4-9f11-
000c299bf0b8_2147484674.2015-03-02_134417
      Snapshot Progress: 0B
      Total Progress: 0B
      Network Compression Ratio: 2:1
      Snapshot Checkpoint: 0B
      Newest Snapshot: snapmirror.89659724-bd35-11e4-9f11-
000c299bf0b8_2147484674.2015-02-25_134212
      Newest Snapshot Timestamp: 02/25 13:22:08
      Exported Snapshot: snapmirror.89659724-bd35-11e4-9f11-
000c299bf0b8_2147484674.2015-02-25_134212
      Exported Snapshot Timestamp: 02/25 13:22:08
      Healthy: true
      Unhealthy Reason: -
      Constituent Relationship: false
      Destination Volume Node: vsim
      Relationship ID: d8b4cbc8-bd36-11e4-9f11-000c299bf0b8
      Current Operation ID: 46da2fc6-c125-11e4-9f1a-000c299bf0b8
      Transfer Type: update
      Transfer Error: -
      Current Throttle: unlimited
      Current Transfer Priority: normal
      Last Transfer Type: initialize
      Last Transfer Error: -
      Last Transfer Size: 240GB
      Last Transfer Network Compression Ratio: 3.1:1
      Last Transfer Duration: 02:13:32
      Last Transfer From: vs1:src_test
      Last Transfer End Timestamp: 02/25 13:42:15
      Progress Last Updated: 03/02 13:44:17
      Relationship Capability: 8.2 and above
      Lag Time: 120:22:10
      Number of Successful Updates: 0
      Number of Failed Updates: 0
      Number of Successful Resyncs: 0
      Number of Failed Resyncs: 0
      Number of Successful Breaks: 0
      Number of Failed Breaks: 0
      Total Transfer Bytes: 245760
      Total Transfer Time in Seconds: 3
```

SnapMirror and Network Compression

With increasing network bandwidth costs and increasing data growth, customers must do more with less. As the amount of data to be protected increases, more network bandwidth is needed to maintain the recovery point objective (RPO). Otherwise, replication times increase as the amount of data sent over the network to the DR site increases. Differently put, if you do not want to or cannot increase the network bandwidth, you need to lower the replication frequency that is causing larger RPO values and thus increasing your exposure to larger data loss.

The SnapMirror native network compression feature can cut down on the amount of data replicated over the network. It also offers you more flexibility and choices, as described in the following section.

Maintaining the Same RPO Level

- **Challenge.** Your data replication needs are growing. You need more bandwidth to maintain the same level of RPO.
- **Solution.** By using network compression, it is possible to maintain the same RPO without increasing the network bandwidth.

Improve Your RPO Without Increasing the Bandwidth

- **Challenge.** You are using all your network bandwidth. However, your customer wants to reduce their exposure to data loss and improve their RPO.
- **Solution.** By using network compression, you can improve your RPO without increasing the network bandwidth.

Use the Network Bandwidth for Other Purposes

- **Challenge.** Your replication is consuming all your bandwidth. You want to use the network bandwidth for other purposes such as client access or applications without increasing the bandwidth.
- **Solution.** By using network compression, it is possible to reduce the bandwidth consumed by SnapMirror without sacrificing RPO, thereby freeing up network bandwidth for other purposes.


Speeding Up the Initial Transfers

- **Challenge.** Initial SnapMirror transfers can be large and therefore can take a long time to complete under bandwidth constraints.
- **Solution.** By using network compression, you can speed up the initial SnapMirror transfers.

What Is SnapMirror Network Compression?

Network compression is natively built into SnapMirror to enable increased efficiency over the network for SnapMirror transfers. It does not, however, compress data at rest. SnapMirror network compression is not the same as volume compression. [Figure 29](#) shows a very high-level flow of SnapMirror network compression.

Figure 29 SnapMirror network compression functional diagram

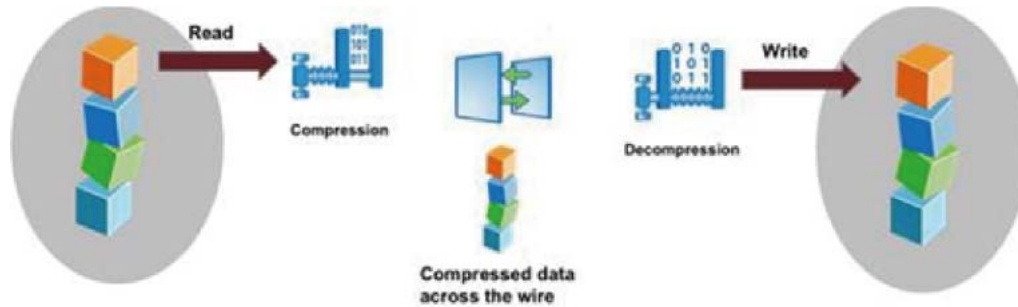

On the source system, the data blocks that must be sent to the destination system are handed off to the compression engine, which compresses the data blocks. The compression engine on the source system creates several threads, depending on the number of CPUs available on the storage system. These compression threads help to compress data in parallel. The compressed blocks are then sent over the network.

On the destination system, the compressed blocks are received and decompressed in parallel using multiple threads. Decompressed data is then written to the appropriate volume.

Enable and Disable Network Compression

SnapMirror network compression can be enabled or disabled by the `-is-network-compression-enabled` option in SnapMirror policy. It cannot be enabled for an active transfer. To enable compression for an existing transfer, you must first abort the transfer, set the `-is-network-compression-enabled` option to true in the SnapMirror policy, and then resume the transfer.

■ Best Practice

SnapMirror network compression increases resource utilization on both the SnapMirror source and destination systems. Therefore, you need to evaluate the resource usage and benefits before deploying compression. For example, compression might not be useful for a high-bandwidth, low-latency connection. But it can be useful for connections that have relatively low bandwidth, such as WAN connections.

Reporting the Compression Ratio

The SnapMirror network compression ratio is reported in the `snapmirror show -instance` output.

```
cluster::> snapmirror show -destination-path vs3:dst -instance

      Source Path: vs1:src_test
      Destination Path: vs3:dst
      Relationship Type: DP
      Relationship Group Type: none
      SnapMirror Schedule: -
      SnapMirror Policy Type: async-mirror
      SnapMirror Policy: DPDefault
      Tries Limit: -
      Throttle (KB/sec): unlimited
      Mirror State: Snapmirrored
      Relationship Status: Transferring
      File Restore File Count: -
      File Restore File List: -
      Transfer Snapshot: snapmirror.89659724-bd35-11e4-9f11-
000c299bf0b8_2147484674.2015-03-02_134417
      Snapshot Progress: 0B
      Total Progress: 0B
      Network Compression Ratio: 2:1
      Snapshot Checkpoint: 0B
      Newest Snapshot: snapmirror.89659724-bd35-11e4-9f11-
000c299bf0b8_2147484674.2015-02-25_134212
      Newest Snapshot Timestamp: 02/25 13:22:08
      Exported Snapshot: snapmirror.89659724-bd35-11e4-9f11-
000c299bf0b8_2147484674.2015-02-25_134212
      Exported Snapshot Timestamp: 02/25 13:22:08
      Healthy: true
      Unhealthy Reason: -
      Constituent Relationship: false
      Destination Volume Node: vsim
      Relationship ID: d8b4cbc8-bd36-11e4-9f11-000c299bf0b8
      Current Operation ID: 46da2fc6-c125-11e4-9f1a-000c299bf0b8
      Transfer Type: update
      Transfer Error: -
      Current Throttle: unlimited
      Current Transfer Priority: normal
      Last Transfer Type: initialize
      Last Transfer Error: -
      Last Transfer Size: 240KB
      Last Transfer Network Compression Ratio: 1:1
      Last Transfer Duration: 0:0:3
      Last Transfer From: vs1:src_test
      Last Transfer End Timestamp: 02/25 13:42:15
      Progress Last Updated: 03/02 13:44:17
      Relationship Capability: 8.2 and above
      Lag Time: 120:22:10
      Number of Successful Updates: 0
      Number of Failed Updates: 0
      Number of Successful Resyncs: 0
      Number of Failed Resyncs: 0
      Number of Successful Breaks: 0
      Number of Failed Breaks: 0
      Total Transfer Bytes: 245760
      Total Transfer Time in Seconds: 3
```

Compression ratio is only shown in transferring state.

SnapMirror Throttling

The SnapMirror throttle setting is used to throttle the network bandwidth consumed, which limits the amount of bandwidth used by intercluster SnapMirror. In other words, SnapMirror throttle does not control network bandwidth. Rather, it works by limiting the blocks that WAFL can use for SnapMirror transfers.

Caution

All replication throttles in ONTAP are in kilobytes per second.

SnapMirror throttle can be set on a per relationship basis when creating a new relationship by using the `-throttle` option and by modifying an existing relationship with the `snapmirror modify` command. In this example, a 10MB/sec throttle is applied to an existing relationship using the `snapmirror modify` command.

```
cluster02::> snapmirror modify -destination-path cluster02://vs1/vol1 -throttle 10240
```

Caution

- To change the throttle of an active SnapMirror relationship, terminate the existing transfer and restart it to use the new value. SnapMirror restarts the transfer from the last restart checkpoint using the new throttle value, rather than restarting from the beginning.
- Intracluster throttle is supported, and it works the same way as intercluster throttle.

ONTAP 9 introduces global SnapMirror throttling available for each node in a cluster to perform SnapMirror transfer at a fixed maximum bandwidth for outgoing and incoming transfers. SnapMirror global throttling restricts the bandwidth used by incoming and/or outgoing SnapMirror and SnapVault transfers. The restriction is enforced cluster wide on all nodes in the cluster. This capability is in addition to the throttle for each SnapMirror relationship as described above. Each node has a global throttle for sender-side (outgoing) transfers as well as receiver-side (incoming) transfers and an option to enable or disable this throttling. The per-transfer throttle is capped at the node-level throttle if it exceeds the global node throttle value. Otherwise, the transfers take place at the specified value.

Global throttling works with the per-relationship throttle feature for SnapMirror and SnapVault transfers. The per-relationship throttle is enforced until the combined bandwidth of per-relationship transfers exceeds the value of the global throttle, after which the global throttle is enforced. A throttle value 0 implies that global throttling is disabled.

Caution

Global throttling should not be enabled on clusters that have SnapMirror Synchronous relationships.

The minimum throttle bandwidth should be 4KBps, and the maximum can be up to 2TBps. A throttle bandwidth of 0 implies that the transfer is not throttled or that bandwidth is unlimited.

A new cluster-wide option to control throttling is as follows:

```
cluster::> options replication*

cluster
  replication.throttle.enable      on          -
  replication.throttle.incoming.max_kbs 4000    -
  replication.throttle.outgoing.max_kbs 2000     -
3 entries were displayed.
```

Each entry can be edited individually. The enable option either enables or disables both the outgoing and incoming throttle.

```
cluster::> options replication.throttle.enable on
1 entry was modified.
```

Changing the outgoing and incoming throttle is reflected in the actual transfer only if the enable option is on. The outgoing and incoming throttle values can be changed irrespective of the enable option value.

```
cluster::> options replication.throttle.outgoing.max_kbs 8000
1 entry was modified.

cluster::> options replication.throttle.incoming.max_kbs 5000
1 entry was modified.
```

How to Change TCP Receive Buffer Size

SnapMirror uses the network service `ctlopccp` with a tunable TCP receive buffer window for both intercluster (WAN network) and intra-cluster (LAN network) replication. The TCP receive buffer window is configured per cluster, and an increase in the TCP receive buffer size takes effect immediately with no requirement to reboot.

Table 8 TCP receive buffer windows

	Default	Minimum	Maximum
Intercluster TCP receive buffer window	2MB	256KB	7MB
Intracuster TCP receive buffer window	256KB	256KB	7MB

Concurrent Replication Operations

The number of supported simultaneous SnapMirror operations is limited. This limit is per node and varies depending on the platform and version of ONTAP. For information about the number of concurrent SnapMirror operations allowed per node model, see the FUJITSU Storage ETERNUS AX/HX series Data Protection Power Guide in the [Fujitsu manual site](#).

■ Best Practice

- When planning concurrent operations, it is a best practice to consider the frequency of volume move and volume copy operations in the environment in addition to SnapMirror replications.
- Size the system correctly with enough CPU headroom to allow the CPU workload to execute.

ONTAP provides a greater level of scalability by allowing expansion of a cluster beyond two nodes. Each node in the cluster provides CPU and memory resources that are used for replication of volumes owned by that node.

■ Best Practice

To optimize replication, distribute replicated volumes across different nodes in the clusters rather than placing all volumes requiring replication on a single node. This best practice allows all nodes in the cluster to share replication activity.

Recommended Replication Intervals

SnapMirror updates must establish a communication session between the source and destination nodes, creating and deleting Snapshot copies, and determining which blocks of data to send to the destination. Therefore, while the ONTAP scheduler supports creating schedules that run every minute, Fujitsu does not recommend performing a SnapMirror update operation every minute.

Network Sizing Requirements

When deploying SnapMirror, you must consider the round-trip travel time of a packet from the source to the destination storage system, because network distance causes write latency. A network with the appropriate bandwidth available to transfer the system data is required to support the desired replication interval, so that application performance is not affected. There are limitations on the network characteristics that are supported for intercluster replication.

Network Sizing Requirements for Intercluster Replication

The intercluster network must be sized appropriately depending on the data change rate and the update interval to meet the recovery point objective (RPO) of the solution and individual node performance characteristics. Intercluster SnapMirror is supported across networks that have the following characteristics:

- A minimum bandwidth of 0.5Mbps
- A packet loss of 1%

■ Best Practice

All paths used for intercluster replication must have equal performance characteristics. Configuring multipathing in such a way that a node has one intercluster LIF on a slow path and another intercluster LIF on a fast path degrades performance, because data is multiplexed across both paths simultaneously.


Network Sizing Requirements for Intracluster Replication

All intracluster transfers, including SnapMirror, volume move, and volume copy operations, use the private cluster interconnect between nodes in the same cluster.

8. S3 SnapMirror

ONTAP 9.10.1 introduced ONTAP S3 SnapMirror. S3 SnapMirror provides customers with a native replication and backup solution for their ONTAP S3 object stores. S3 SnapMirror supports a wide variety of S3 targets for data protection and DR including another ONTAP S3 bucket, ONTAP Cloud Volumes ONTAP S3 buckets, and native cloud-provided S3 buckets such as AWS S3 ([Figure 30](#)).

Figure 30 ONTAP S3 SnapMirror overview

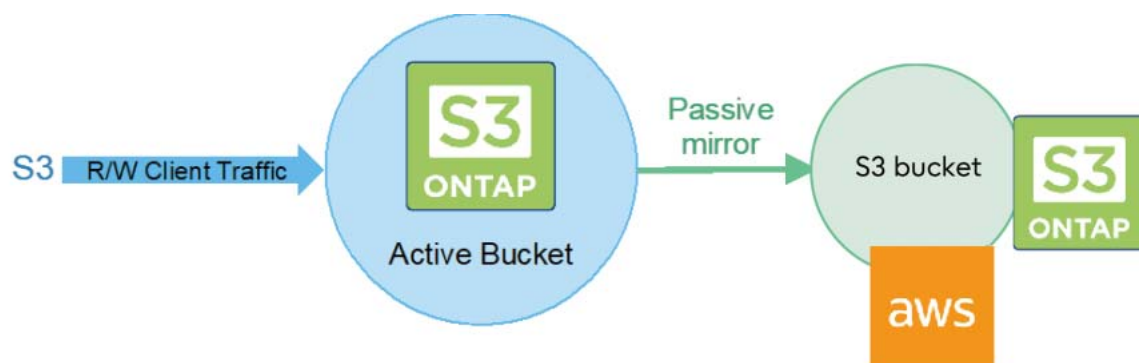

S3 SnapMirror uses a specialized replication engine different from the standard LRSE replication engine used by SnapMirror for FlexVolume and FlexGroup asynchronous replication. When setting up S3 SnapMirror relationships, the replication protection policy used is Continuous (`-type continuous`).

9. Interoperability

Refer to the Service Support Matrix on the Fujitsu Support site to validate that the exact product and feature versions described in this document are supported for your specific environment. The Service Support Matrix defines the product components and versions that can be used to construct configurations that are supported by Fujitsu. Specific results depend on each customer's installation in accordance with the published specifications. You should verify that the source and destination volumes are running compatible ONTAP versions before creating a SnapMirror relationship.

10. Troubleshooting Tips

Troubleshooting Cluster Peer Relationships

Procedure ►►►

- 1 Run the `cluster peer show` command to verify the availability of the cluster peer relationship.

This command displays all existing configured cluster peer relationships.

```
cluster01::> cluster peer show
Peer Cluster Name      Cluster Serial Number Availability
-----
cluster02              1-80-000013      Available
```

- 2 Add `-instance` to the command to view more detailed information about the cluster peers. Include `-cluster <cluster_name>` to view results for a specific cluster. The `-instance` option displays the remote addresses that are used for intercluster communication.

```
cluster01::> cluster peer show -cluster cluster02 -instance
Peer Cluster Name: cluster02
Remote Intercluster Addresses: 10.12.12.3,10.12.12.4
Availability: Available
Remote Cluster Name: cluster02
Active IP Addresses: 10.12.12.3,10.12.12.4
Cluster Serial Number: 1-80-000013
```

- 3 Run the `cluster peer ping` command to view information about connectivity between each intercluster address, including RTT response times. For multiple configured cluster peers, use the `-cluster <cluster_name>` option to perform the ping for one specific peer relationship. The `cluster peer ping` command displays the results of a ping between intercluster interfaces. As mentioned earlier, when performing intercluster SnapMirror mirroring over multiple paths between the local and remote clusters, each path must have the same performance characteristics. In this example, the ping response times (RTTs) are comparatively equal to the pings to nodes where the destination cluster displays as `cluster02`.

```
cluster01::> cluster peer ping cluster02

Node: cluster01-01      Destination Cluster: cluster01
Destination Node IP Address  Count  TTL  RTT(ms)  Status
-----
cluster01-01      10.12.12.1      1      255      0.186      interface_reachable
cluster01-02      10.12.12.2      1      255      1.156      interface_reachable

Node: cluster01-01      Destination Cluster: cluster02
Destination Node IP Address  Count  TTL  RTT(ms)  Status
-----
cluster02-01      10.12.12.3      1      255      7.164      interface_reachable
cluster02-02      10.12.12.4      1      255      7.065      interface_reachable

Node: cluster01-02      Destination Cluster: cluster01
Destination Node IP Address  Count  TTL  RTT(ms)  Status
-----
cluster01-01      10.12.12.1      1      255      1.324      interface_reachable
cluster01-02      10.12.12.2      1      255      0.809      interface_reachable

Node: cluster01-02      Destination Cluster: cluster02
Destination Node IP Address  Count  TTL  RTT(ms)  Status
-----
cluster02-01      10.12.12.3      1      255      7.279      interface_reachable
cluster02-02      10.12.12.4      1      255      7.282      interface_reachable
```



Troubleshooting SVM Peer Relationships

Here is a list of common issues and how to troubleshoot them:

- SVM peer action failure for the intercluster environment:
 - Verify that the peer cluster is reachable.
 - Verify that both clusters support ONTAP versions with SVM peering capability enabled.
 - Verify that the peer SVM name is not associated with another cluster from peer SVM names in the SVM peering table.
 - Check `mgwd.log` and the console logs for error messages.
- SVM peer action failure for the intra-cluster or intercluster environment:
 - Verify that both clusters supported ONTAP versions, with SVM peering capability enabled. Verify that local and peer SVM names are not the same.
 - Check `mgwd.log` and the console logs for error messages.
- Run the `vserver peer show` command to verify the SVM peer relationship. This command displays all existing configured SVM peer relationships.

```
cluster02::> vserver peer show
Vserver      Peer      Peer
Vserver      Vserver   State
-----
vs1_dest     vs1_backup peered
vs1_dest     vs1_src   peered
```

- Check for any notifications with the `vserver peer show-all` command.

```
cluster02::> vserver peer show-all
Vserver      Peer      Peer      Peer Cluster      Peering
Vserver      Vserver   State      Applications
-----
vs1_dest     vs1_backup peered      cluster03          snapmirror
vs1_dest     vs1_src   peered      cluster01          snapmirror
```

Understanding SnapMirror Relationship Status

The Healthy column indicates the SnapMirror relationship status. This column is shown in the output of the `snapmirror show` command on the CLI and as the Healthy column in the displayed status of SnapMirror relationships in ONTAP System Manager.

```
cluster02::> snapmirror show
Source      Destination  Mirror  Relationship  Total      Progress      Progress      Healthy      Last
Path        Type        Path    State    Status    Progress    Progress    Updated
-----
vs1_src:voll XDP        vs1_dest:voll
                        Snapmirrored
                        Transferring  128KB      true      02/25 15:43:53
```

The Mirror State column also displays if the destination volume is offline or if it cannot be reached.

Troubleshooting SnapMirror Relationships

To determine when the last SnapMirror transfer for a specific relationship completed, see the Exported Snapshot Timestamp field for instance information.

```
cluster02:> snapmirror show -instance

      Source Path: snap_src1:SMSSource
      Destination Path: svm_dst1:SMSSource_dest
      Relationship Type: XDP
      Relationship Group Type: none
      SnapMirror Schedule: -
      SnapMirror Policy Type: vault
      SnapMirror Policy: XDPDefault
      Tries Limit: -
      Throttle (KB/sec): unlimited
      Mirror State: Snapmirrored
      Relationship Status: Idle
      File Restore File Count: -
      File Restore File List: -
      Transfer Snapshot: -
      Snapshot Progress: -
      Total Progress: -
      Network Compression Ratio: -
      Snapshot Checkpoint: -
      Newest Snapshot: snapmirror.12ceb7f0-b078-11e8-baec-0050
56b013db_2160175147.2020-01-24 043858
      Newest Snapshot Timestamp: 01/24 04:38:59
      Exported Snapshot: snapmirror.12ceb7f0-b078-11e8-baec-0050
56b013db_2160175147.2020-01-24 043858
      Exported Snapshot Timestamp: 01/24 04:38:59
      Healthy: true
      Unhealthy Reason: -
      Constituent Relationship: false
      Destination Volume Node: cluster2-01
      Relationship ID: 1a46a611-3e64-11ea-86bf-005056b013db
      Current Operation ID: -
      Transfer Type: -
      Transfer Error: -
      Current Throttle: -
      Current Transfer Priority: -
      Last Transfer Type: resync
      Last Transfer Error: -
      Last Transfer Size: 0B
Last Transfer Network Compression Ratio: 1:1
      Last Transfer Duration: 0:0:1
      Last Transfer From: snap_src1:SMSSource
      Last Transfer End Timestamp: 01/24 04:45:16
      Progress Last Updated: -
      Relationship Capability: 8.2 and above
      Lag Time: 5:27:1
Identity Preserve Vserver DR: -
      Volume MSIDs Preserved: -
      Is Auto Expand Enabled: -
      Number of Successful Updates: 0
      Number of Failed Updates: 0
      Number of Successful Resyncs: 1
      Number of Failed Resyncs: 0
      Number of Successful Breaks: 0
      Number of Failed Breaks: 0
      Total Transfer Bytes: 0
      Total Transfer Time in Seconds: 1
```

To troubleshoot SnapMirror relationship, review information about relationships in the event log. Use the `-message` option with the `event log show` command to filter the event log for messages related to SnapMirror, as shown in the following example. Specify the `mgmt.snapmir*` message name to filter the output and find only messages related to SnapMirror.

```
cluster01:> event log show -message mgmt.snapmir*
Time          Node          Severity  Event
-----
12/6/2011 17:35 cluster02-01 ERROR      mgmt.snapmir.update.fail: Update from source
volume 'cluster01://vs1/vol03' to destination volume(s) 'cluster02://vs2/vol03' failed with error
'Failed to setup transfer. (Duplicate transfer specified. (Other error.))'. Job ID 1322.
12/6/2011 17:34:35 cluster02-01 DEBUG      mgmt.snapmir.abnormal.abort: Source Path
cluster01://vs1/vol01, Destination Path cluster02://vs2/vol01, Error Transfer failed.
(Destination volume cluster02://vs2/vol01 is smaller than the source volume.), Function
copySnapshot, line 5030, job ID 1355.
12/5/2011 05:15:45 cluster02-01 DEBUG      mgmt.snapmir.abnormal.abort: Source Path
cluster01://vs2/vol12, Destination Path cluster02://vs8/vol12, Error Failed to delete Snapshot
copy weekly.2011-12-04 0015 on volume cluster02://vs8/vol12. (Snapshot is in use.), Function
deleteSnapshot, line 4285, job ID 1215.
```

To find an error message about a specific volume, filter the message list further by specifying the name of the volume, enclosed in asterisks, with the `-event` option, as shown in the following example.

```
cluster01::> event log show -messagename mgmt.snapmir* -event *vol01*
Time                Node                Severity    Event
-----
12/6/2011 17:34:35  cluster02-01        DEBUG       mgmt.snapmir.abnormal.abort: Source Path
cluster01://vs1/vol01, Destination Path cluster02://vs2/vol01, Error Transfer failed.
(Destination volume cluster02://vs2/vol01 is smaller than the source volume.), Function
copySnapshot, line 5030, job ID 1355.
```

All SnapMirror events are logged to the `SnapMirror_audit.log` and `SnapMirror_error.log` files on the node where the destination volume resides. This node might be different from the one where the command was issued. The node running the operation can be determined by running the `snapmirror show -fields destination-volume-node` command. ONTAP System Manager allows viewing of the SnapMirror log files.

11. Best Practices for DR Configurations

- Volumes that belong to one SVM at the source site should be replicated to one SVM at the destination site. An SVM is the root of a NAS namespace for NAS clients and a single storage target in SAN environments. If some NAS volumes are replicated from one SVM into different SVMs at the destination, then all those volumes cannot be recovered into the same namespace. The same is true of volumes containing LUNs. If the volumes are replicated into different SVMs at the destination, then all the LUNs are not presented under the same SAN target.
- The destination SVM should be a member of the same Active Directory, LDAP, or NIS domain of which the source SVM is a member. This configuration is required so that access control lists (ACLs) stored in NAS files are not broken if a NAS volume is recovered into an SVM that cannot authenticate those ACLs. The process of changing file-level ACLs to correct them for access from a different domain can be extremely difficult and time consuming. It is also important so that authentication of tools running in SAN clients such as SnapCenter Plug-in for Windows can be done using the same credentials.
- Because the destination SVM is a different SVM than the source, and because Fujitsu recommends that it be a member of the same Active Directory domain, the destination SVM must be joined to the domain with a different SVM name. It is common practice to have a DR system with a different name than the source system. In DR failover scenarios, it is typical to change DNS name resolution or use DNS aliases to redirect clients to the name of the recovered storage systems. This practice makes sure that CIFS shares are still accessible using the same UNC path name and that NFS clients are also able to access the expected path.

Caution

This is a primary use case for configuring SnapMirror to replicate SVMs (SVM DR) rather than individual volumes.

- Using destination volume names that are the same as the source volume names is not required. However, this practice can make mounting destination volumes into the destination simpler to manage if the junction path where the volume is mounted also has the same name as the volume.
- Construct the destination NAS namespace for an SVM such that it is identical in paths and directory structure as the source SVM.
- Many SAN clients cannot access a LUN that resides in a completely read-only container, such as a SnapMirror destination volume. Generally, LUNs should be mapped to igroups and mounted by SAN clients after the SnapMirror break operation is performed.
- Configure the destination SVMs ahead of time as described in the following section. This approach can greatly speed up the storage system DR process, possibly reducing it to a few SnapMirror break operations and the update of some DNS aliases.
- As new volumes are created at the source site, SnapMirror relationships must be created to replicate those volumes. You should make configuration settings pertaining to those volumes in the DR site after the volumes are created and replicated so they can be ready in the event of a disaster.

12. Configuration and Failover for DR

Configuration and failover for DR is presented here in an overview of the DR process for intracluster SnapMirror data protection (async-mirror) replication. The process is presented in two sections. The first section provides steps that must be completed before a failover is required to prepare the destination for failover. These steps should be completed to prepare the DR site for a DR scenario. The second section provides the steps necessary to perform a failover.

Every environment has its own unique characteristics. Each environment can affect a DR plan. Depending on the type of DR solutions deployed, each organization's DR situation can be very different. To enable success, proper planning, documentation, and a realistic walkthrough of a DR scenario are required.

Environment Failover Requirements and Assumptions

To provide a successful DR experience, consider some general requirements and assumptions. The following is not an all-inclusive list:

- System administrator access to a workstation or server desktop session from which to administer the DR site and perform the failover.
- System administrators have all appropriate credentials, accounts, passwords, and so on required to access the systems.
- Connectivity to the DR network is available from wherever operations are performed.
- Certain infrastructure servers already exist in the DR site and are accessible. These systems provide basic services necessary for the administrators to work in the environment and execute the recovery plan.
 - DR site Active Directory services to provide authentication.
 - DR site DNS services to provide name resolution.
 - DR site license servers to provide licensing services for all applications that require them.

Caution

A server must be available at the DR site to perform the necessary Active Directory FS MO roles. For information regarding transferring roles to a surviving Active Directory server or seizing these roles from a failed server, see [Microsoft KB 255504](#).


- The DR site has time synchronized to the same source as the primary site or a source in sync with the primary site.
- All required volumes are replicated using SnapMirror to the DR site.
- SnapMirror operations have been monitored and are up to date with respect to the designed RPO.
- The required capacity exists on the DR controller. This refers to the capacity required to support day-to-day operations that have been planned for in the DR environment.
- All DR site application servers have the proper connectivity configured to be able to connect to the DR storage arrays.
- A method exists to isolate or fence the failed primary network from the DR site. This approach is necessary if the event causing the disaster is temporary or intermittent in nature, such as an extended power outage. When the primary site systems restart, services might conflict with the recovered operations that are then running at the DR site.
- Plans have been made for providing users and applications access to the data and services at the DR site. For example, updating the DNS such that home directory mount requests to the primary site SVM are directed to the DR site SVM instead.

Preparing the Destination for Failover

Many parts of a DR process can be prepared ahead of time prior to a DR event. For example, mounting volumes into the namespace, creating CIFS shares, and assigning NFS export policies, can all be performed ahead of time. SnapMirror cannot be used to replicate configuration information that could be independent in the destination SVMs. These configurations include SVM domain membership, CIFS configuration, NFS policies, Snapshot policy schedules, or storage efficiency policies.

[Figure 31](#) illustrates volume layout for DR.

Figure 31 Volume layout for DR

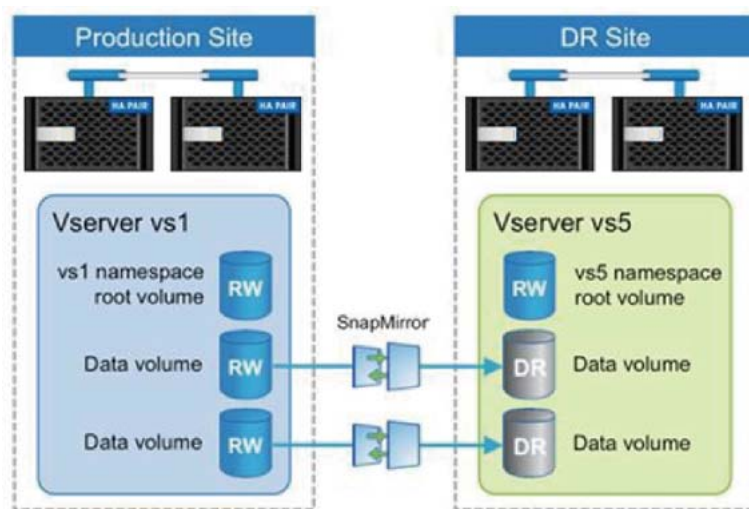

After volumes have been replicated, complete the following steps to prepare the destination system for failover.

NAS and SAN Environments

Procedure ►►►

- 1 Configure the destination SVM membership into the appropriate Active Directory, LDAP, or NIS domain.
- 2 Determine that the destination SVM is a member of the same domain as the source SVM. This configuration also ensures that the same users can be authenticated against file-level ACLs that are replicated by SnapMirror.
- 3 Create any nondefault Snapshot copy policies needed in the destination cluster.

Caution

Fujitsu recommends configuring Snapshot copy policies in the destination cluster with the same schedules as those in the source. Snapshot copy policies must be applied to DP volumes after failover.

4 Create storage efficiency policies in the destination SVM.

Caution

If storage efficiency policies are assigned to the volumes in the source SVM, a policy must be created in the destination SVM in order to schedule the dedupe process after failover at the DR site. Storage efficiency policies must be applied to DP volumes after failover.



NAS Environments

Procedure ►►►

- 1 Verify that all necessary volumes in the source SVM are being replicated to the destination SVM. Volumes can be mounted in subfolders or inside other volumes in the namespace. If this condition exists, it is important to make sure that all the volumes required to properly reconstruct the namespace at the destination are being replicated.
- 2 Verify the security style and permissions on the destination SVM root volume. The security style and permissions of the root of the destination SVM namespace must be set correctly, or the NAS namespace might be inaccessible after failover.
- 3 Mount the destination NAS volumes into the destination SVM namespace.
SnapMirror does not replicate the SVM namespace junction path information. NAS volumes have no junction path, so they are not accessible after a SnapMirror break occurs unless they are pre-mounted before failover or until they are mounted after failover.
When mounting the volumes, mount them into the namespace using the same junction path into which the source volume was mounted in the source SVM. This configuration is important so that paths in the recovered namespace are not different than paths that existed at the primary site. If the paths are different, then client mount points, links, shortcuts, and aliases might not be able to find the correct paths.

Caution

Volumes cannot be mounted inside (nested in) other volumes that are still in a DP state. After using the `snapmirror break` command, any volume that has a mount point nested inside a replicated volume must be mounted, and any CIFS shares must be created.

- 4 Create CIFS shares on the destination SVM using the same share names that were used at the source. Clients can access the CIFS shares. However, all data is read-only until the volume is failed over.
- 5 Apply the proper ACLs to the CIFS shares at the destination.
- 6 Create appropriate NFS export policies for the destination SVM.
- 7 Assign the NFS export policies to the destination volumes. Although clients can access the NFS exports, all data is read-only until the volume is failed over.



SAN Environments

Procedure ►►► —————

- 1 If the destination SVMs use portsets, they can be configured as required before failover.
- 2 Configure igroups on the destination SVM.

Typically, there are different application servers that connect to the recovered storage at the DR site. The initiators from these servers can be preconfigured into appropriate igroups in the destination SVM.

Because some hosts do not support connecting to LUNs in read-only containers, which is what a SnapMirror destination volume is, mapping LUNs to igroups is normally performed after failover.

Performing a Failover

With most of the configuration necessary for DR performed prior to a failover, the actual steps required to fail over during a DR scenario are greatly reduced. They are as follows.

NAS Environment

Procedure ►►► —————

- 1 Perform a SnapMirror break operation to fail over each volume. In ONTAP, wildcards can be used to perform a SnapMirror operation on multiple volumes with one command. The following example performs failover for all volumes in the destination SVM called `vs5`. It can be restricted to certain volumes by using part of the volume name in the command.
- 2 If the volumes have been mounted in the namespace and CIFS shares and NFS export policies have been created and applied, clients then have read-write access to the NAS data.
- 3 Redirect clients to the recovered storage.

```
cluster02::> snapmirror break -destination-path cluster02://vs5/*
```

It is a common practice to have a DR system with a different name than the source system. In DR failover scenarios, it is typical to change DNS name resolution or use DNS aliases to redirect clients to the name of the recovered storage systems. This approach enables CIFS share access using the same UNC path name, and NFS clients can also access the expected path. Alternatively, the failed source storage system can be removed from Active Directory. The recovery storage system can then be removed and added again to Active Directory using the same name as the source system. However, it can take time for this change to propagate through a large Active Directory environment.

SAN Environment

Procedure ►►►

- 1 Perform a SnapMirror break operation to fail over each volume. Wildcards can be used to perform a SnapMirror operation on multiple volumes with one command. The following example performs failover for all volumes in the destination SVM called `vs5`. It can be restricted to certain volumes by using part of the volume name in the command.

```
cluster02::> snapmirror break -destination-path cluster02://vs5/*
```

- 2 Make the LUNs in the volume available to the SAN clients at the DR site by mapping the LUN into the appropriate igroup.
- 3 On the SAN client, perform a storage rescan to detect the connected LUN.



Post failover Volume Configuration

Snapshot copy policies and storage efficiency policies cannot be assigned to volumes in a DP state, so they must be assigned after failover.

Procedure ►►►

- 1 If you are using an ONTAP Snapshot copy schedule, assign a Snapshot copy policy to the recovered volumes. In SAN environments, Snapshot copies are typically scheduled in the client.
- 2 If you are using storage efficiency technology, assign a storage efficiency policy to the recovered volumes.



Fujitsu Storage
ETERNUS AX series All-Flash Arrays,
ETERNUS HX series Hybrid Arrays
SnapMirror Configuration and Best Practices Guide
for ONTAP 9.11.1

P3AG-5642-04ENZ0

Date of issuance: April 2023
Issuance responsibility: Fujitsu Limited

- The content of this manual is subject to change without notice.
- This manual was prepared with the utmost attention to detail.
However, Fujitsu shall assume no responsibility for any operational problems as the result of errors, omissions, or the use of information in this manual.
- Fujitsu assumes no liability for damages to third party copyrights or other rights arising from the use of any information in this manual.
- The content of this manual may not be reproduced or distributed in part or in its entirety without prior permission from Fujitsu.

FUJITSU