

FUJITSU Server

PRIMEQUEST 2000 Series

Installation Manual



Preface

This manual describes the functions and this manual describes how to set up this product, including the steps for installation of the PRIMEQUEST 2000 series server, initialization, and software installation. The manual is intended for system administrators.

For details on the regulatory compliance statements and safety precautions, see the *PRIMEQUEST 2000 Series Safety and Regulatory Information* (CA92344-0523).

Organization of this manual

This manual is organized as follows.

[CHAPTER 1 Installation Overview](#)

Chapter 1 describes the workflow up to actual operation of the PRIMEQUEST 2000 series server

[CHAPTER 2 Preparing for Main Unit Installation](#)

Chapter 2 describes the preparation before main unit installation. This preparation includes work up to power cable connection.

[CHAPTER 3 Work before Operating System Installation](#)

Chapter 3 describes the work that must be done before you install an operating system on the PRIMEQUEST 2000 series server. The chapter also describes settings for actual operation and various setup works.

[CHAPTER 4 Installation of Operating System and bundled software](#)

Chapter 4 describes how to install the operating system and bundled software.

Chapter 5 describes how to make various necessary settings after operating system.

[CHAPTER 6 Work after installation](#)

Chapter 6 describes the work performed after PRIMEQUEST 2000 series installation. This work includes configuring NTP and security.

[CHAPTER 7 Power ON and OFF of the partition](#)

Chapter 7 describes partition power control.

[Appendix A List of setting items](#)

Appendix A provides links to Appendix A List of Settings in the *PRIMEQUEST 2000 Series Tool Reference* (CA92344-0539)

[Appendix B About software](#)

Appendix B provides a link to 3.3 Bundled Software in the *PRIMEQUEST 2000 Series General Description* (CA92344-0534).

[Appendix C Configuring the SAN boot environment](#)

Appendix C is a link to the *PRIMEQUEST 2000 Series SAN Boot Environment Configuration Manua*.

[Appendix D Notes on VMware installation](#)

Appendix D describes the procedure for installing an internal hard disk in a RAID environment in VMware vSphere and provides notes on installation

[Appendix E Setting up the NTP Server \(Windows\)](#)

Appendix E describes how to specify and set of an NTP server for a specific Windows operating system

[Appendix F Starting HII Configuration Utility](#)

Appendix F describes how to start HII Configuration Utility

[Appendix G Starting Web BIOS](#)

Appendix G describes how to start WebBIOS

Revision History

Edition	Date	Revised location (type)	Description
1	2014-08-12	All pages	- The edition is initialized to "01" for changing manual code - Added descriptions about Extended Partitioning function
2	2014-10-07	All pages	- Added description about RHEL7
3	2015-02-03	Appendix F	- Added Starting HII Configuration Utility
4	2015-05-01	All pages	- Added PRIMEQUEST 2400E2/2800E2/2800B2
5	2015-09-29	Chapter 3	- Added LDAP
6	2015-10-30	Chapter 3	- Added LDAP(Novell eDirectory/OpenLDAP/OpenDS/Open DJ)
7	2016-01-29	Chapter 5	- Added "5.7.3 Storage of LAN card and CNA card configuration information"
8	2016-02-16	Chapter 4	- Added warning about OS installation
		Chapter 5	- Added descriptions about sadump setting
9	2016-5-30	All pages	- Added PRIMEQUEST 2400E3/2800E3/2800B3
10	2016-11-28	Chapter 4	- Added warning about OS installation
		Chapter 5	- Added warning about sadump
11	2017-01-16	Appendix D	- Added description about VMware vSphere 6.5
12	2017-02-08	All pages	- Added description about Widows Server 2016
		Chapter 3	- Added description about setting of Blue Screen Timeout
13	2017-02-28	Chapter 5	- Modified description about setting of sadump
14	2017-08-08	Chapter 4	- Added warning about OS installation with SVIM in the environment where Dynamic Reconfiguration is used.
		Appendix D	- Added description about VMware vShere 6

Product operating environment

This product is a computer intended for use in a computer room environment. For details on the product operating environment, see the following manual:

PRIMEQUEST 2000 Series Hardware Installation Manual (CA92344-0535)

Safety Precautions

Alert messages

This manual uses the following alert messages to prevent users and bystanders from being injured and to prevent property damage.



This indicates a hazardous (potentially dangerous) situation that is likely to result in death or serious personal injury if the user does not perform the procedure correctly.



This indicates a hazardous situation that could result in minor or moderate personal injury if the user does not perform the procedure correctly. This also indicates that damage to the product or other property may occur if the user does not perform the procedure correctly.

Important

This indicates information that could help the user use the product more efficiently.

Alert messages in the text

An alert statement follows an alert symbol. An alert statement is indented on both ends to distinguish it from regular text. Similarly, one space line is inserted before and after the alert statement.



Only Fujitsu certified service engineers should perform the following tasks on this product and the options provided by Fujitsu. Customers must not perform these tasks under any circumstances.

Otherwise, electric shock, injury, or fire may result.

- Newly installing or moving equipment
- Removing the front, rear, and side covers
- Installing and removing built-in options
- Connecting and disconnecting external interface cables
- Maintenance (repair and periodic diagnosis and maintenance)

The List of important alert items table lists important alert items.

List of important alert items

This manual does not contain important alert items.

WARNING

This indicates a hazardous (potentially dangerous) situation that is likely to result in death or serious personal injury if the user does not perform the procedure correctly.

Work Category	Warning	Location
Setup	<p>Field engineers perform the following tasks on this product.</p> <p>Customers must not perform these tasks under any circumstances.</p> <p>Otherwise, electric shock, injury, or fire may result.</p> <ul style="list-style-type: none"> - Newly installing or moving equipment - Removing the front, rear, and side covers - Installing and removing built-in options - Connecting and disconnecting external interface cables - Maintenance (repair and periodic diagnosis and maintenance) 	1.1 Setup Workflow

CAUTION

This indicates a hazardous situation that could result in minor or moderate personal injury if the user does not perform the procedure correctly. This also indicates that damage to the product or other property may occur if the user does not perform the procedure correctly.

Work Category	Warning	Location
Normal operation	<p>The unit may be damaged or operating abnormally.</p> <ul style="list-style-type: none"> - Follow the precautions, warnings, and instructions shown on the main unit. - Do not block the vent holes. - Do not install the main unit in a location exposed to direct sunlight or close to a device that may generate large amounts of heat. - Do not install the main unit in a location exposed to large amounts of dust, corrosive gas, or salt spray. - Do not install the main unit in a location subject to strong vibration. Install the main unit on a flat surface. - Use grounded Category 3 wiring or better. Using another type of grounded wiring may cause abnormal operation. - Do not route cables under the main unit. Do not allow cables to become taut. - Do not disconnect the power cables while the main unit power is on. - If it is hard to push the connector latch of a LAN cable or other cable when attempting to disconnect the cable, push it with a flathead screwdriver. Forcibly inserting a finger may cause personal injury or damage the unit. - Do not place anything on top of the main unit. Do not work above or on top of 	2.1 Safety Precautions


Work Category	Warning	Location
	<p>the main unit.</p> <ul style="list-style-type: none"> - Prevent rapid rises in the ambient temperature during winter. Such an abrupt temperature change may cause condensation to form in the main unit. Allow sufficient warm-up time before starting operation. - Do not install the main unit close to a photocopier, air-conditioning unit, welder, or other device that generates electromagnetic noise. - Do not install the main unit close to a device that generates large amounts of electrical noise. - Do not connect the main unit to the same power supply line as an elevator in the facility or other equipment that would expose it to sudden voltage drops. - Implement antistatic measures at the installation site. - Confirm that the power supply voltage and frequency are adequate according to the respective ratings shown on the main unit. - Do not insert or drop foreign matter into the openings of the main unit. The main unit contains high-voltage components. If any metallic matter or other electro-conductive object enters the main unit through an opening, it may cause a short circuit. This may lead to fire, electric shock, or damage to the main unit. - For details on maintenance of the main unit, contact the distributor where you purchased your product, or your sales representative. 	
Normal operation	<p>(Ignition)</p> <p>When over current is detected and the power is cut off by tripping the breaker of the AC power or optional power distribution box, there is a possibility that failure, such as short circuit occurring in the main unit. In such case, contact to your sales representative or field engineer without turning on the power supply again.</p>	3.2.1 Power-on/off of main unit
Normal operation	<p>(Damage to data)</p> <p>Confirm that the System Power LED of the OPL is off before turning off the main power. If you turn off the main power while the System Power LED of the OPL is on, data may be damaged.</p>	3.2.1 Power-on/off of main unit
Normal operation	<p>(Damage to data)</p> <p>Confirm that selection of disk is right, when choosing a dumping device. If selection is mistaken, data may be damaged.</p>	5.3Setting of sadump

Warning labels




Never remove the warning labels.


Warning label location (the main cabinet top)

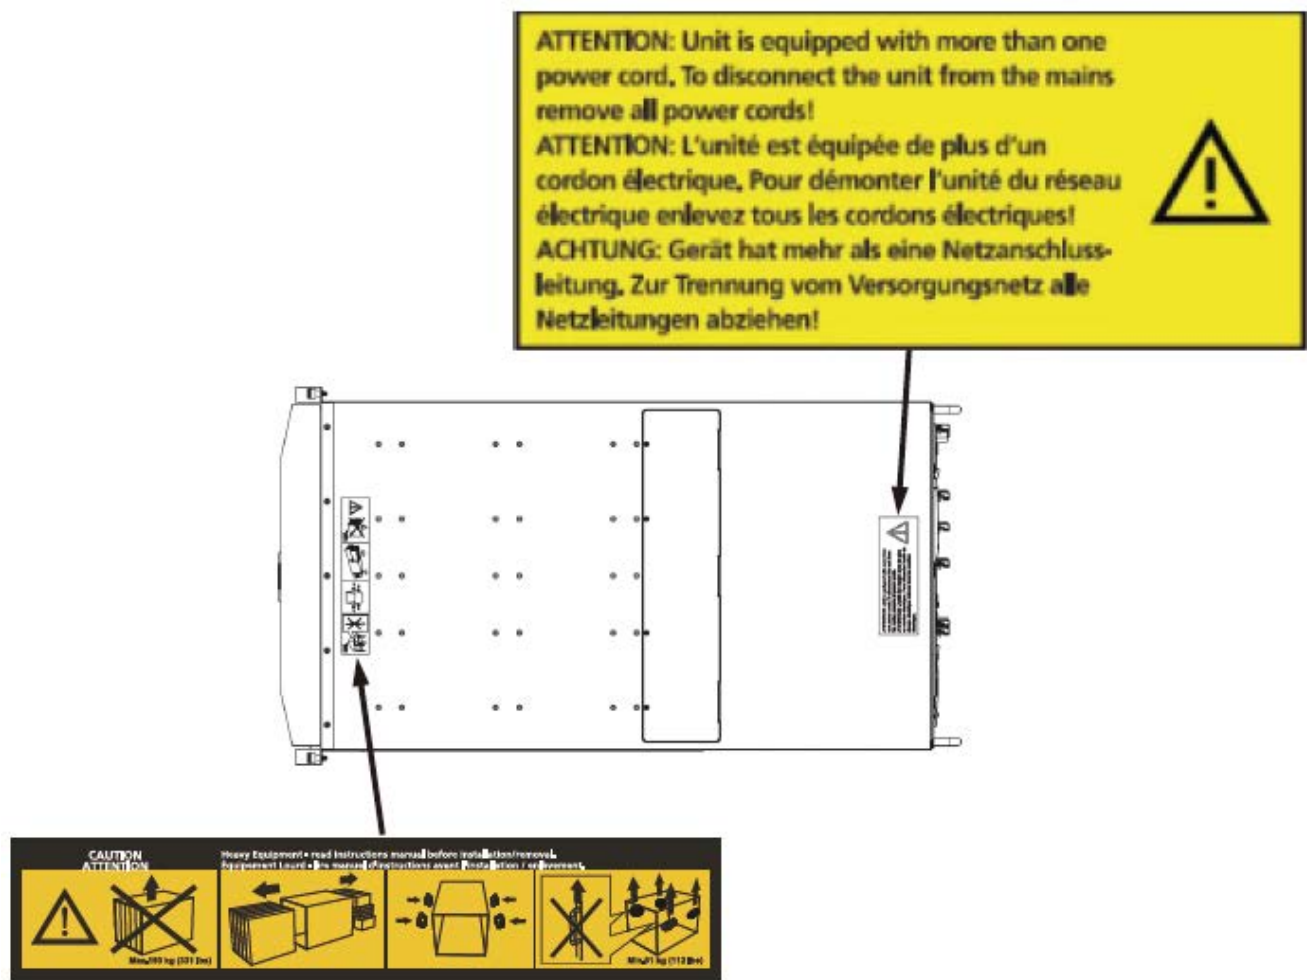

Warning label location (the main cabinet left)

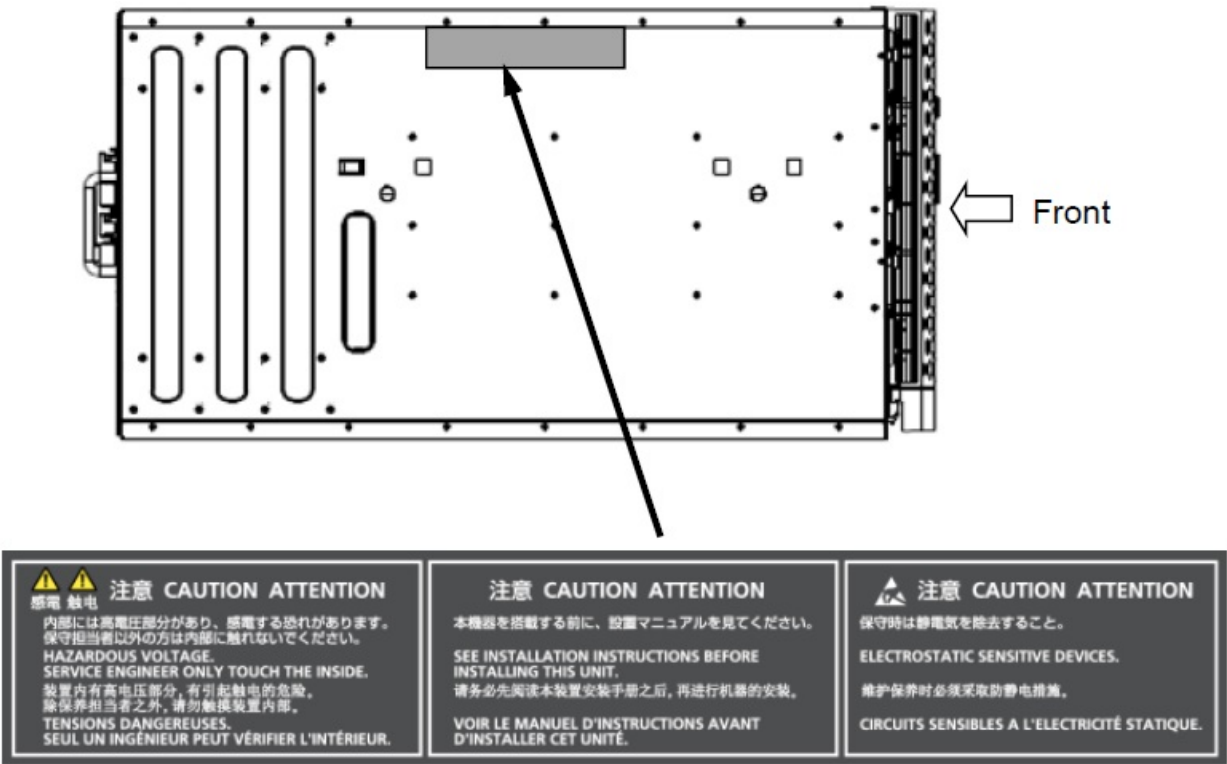

Warning label location (PCI_Box)

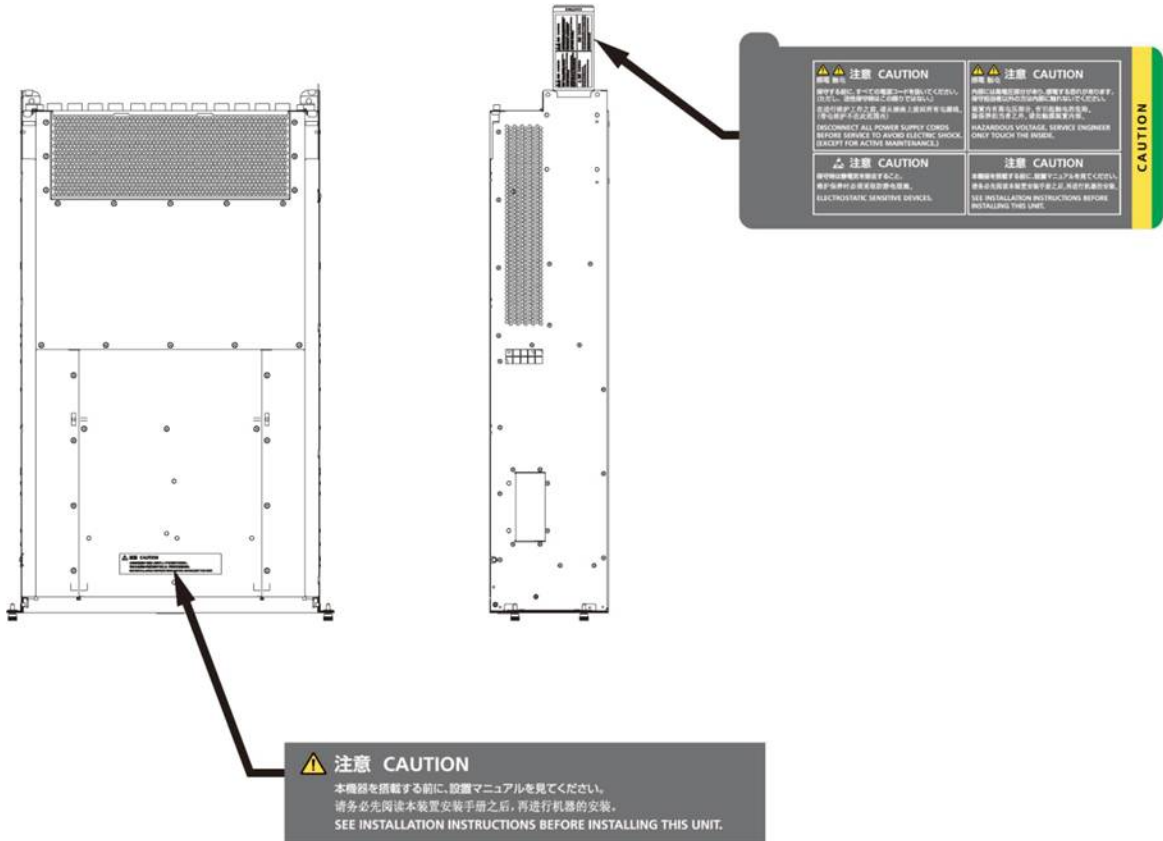

Notes on Handling the Product

About this product

This product is designed and manufactured for standard applications. Such applications include, but are not limited to, general office work, personal and home use, and general industrial use. The product is not intended for applications that require extremely high levels of safety to be guaranteed (referred to below as "safety-critical" applications). Use of the product for a safety-critical application may present a significant risk of personal injury and/or death. Such applications include, but are not limited to, nuclear reactor control, aircraft flight control, air traffic control, mass transit control, medical life support, and missile launch control. Customers shall not use the product for a safety-critical application without guaranteeing the required level of safety. Customers who plan to use the product in a safety-critical system are requested to consult the Fujitsu sales representatives in charge.

Storage of accessories

Keep the accessories in a safe place because they are required for server operation.

Adding optional products

For stable operation of the PRIMEQUEST 2000 series server, use only a Fujitsu-certified optional product as an added option.

Note that the PRIMEQUEST 2000 series server is not guaranteed to operate with any optional product not certified by Fujitsu.

Exportation/release of this product

Exportation/release of this product may require necessary procedures in accordance with the regulations of the Foreign Exchange and Foreign Trade Control Law of Japan and/or US export control laws.

Maintenance



Only Fujitsu certified service engineers should perform the following tasks on this product and the options provided by Fujitsu. Customers must not perform these tasks under any circumstances.

Otherwise, electric shock, injury, or fire may result.

- Newly installing or moving equipment
- Removing the front, rear, and side covers
- Installing and removing built-in options
- Connecting and disconnecting external interface cables
- Maintenance (repair and periodic diagnosis and maintenance)



Only Fujitsu certified service engineers should perform the following tasks on this product and the options provided by Fujitsu. Customers must not perform these tasks under any circumstances.

Otherwise, product failure may result. PRIMEQUEST 2000 Series General Description

- Unpacking an optional Fujitsu product, such as an optional adapter, delivered to the customer

Modifying or recycling the product



Modifying this product or recycling a secondhand product by overhauling it without prior approval may result in personal injury to users and/or bystanders or damage to the product and/or other property.

Note on erasing data from hard disks when disposing of the product or transferring it

Disposing of this product or transferring it as is may enable third parties to access the data on the hard disk and use it for unforeseen purposes. To prevent the leakage of confidential information and important data, all of the data on the hard disk must be erased before disposal or transfer of the product.

However, it can be difficult to completely erase all of the data from the hard disk. Simply initializing (reformatting) the hard disk or deleting files on the operating system is insufficient to erase the data, even though the data appears at a glance to have been erased. This type of operation only makes it impossible to access the data from the operating system.

Malicious third parties can restore this data.

If you save your confidential information or other important data on the hard disk, you should completely erase the data, instead of simply carrying out the aforementioned operation, to prevent the data from being restored. To prevent important data on the hard disk from being leaked when the product is disposed of or transferred, you will need to take care to erase all the data recorded on the hard disk on your own responsibility.

Furthermore, if a software license agreement restricts the transfer of the software (operating system and application software) on the hard disk in the server or other product to a third party, transferring the product without deleting the software from the hard disk may violate the agreement. Adequate verification from this point of view is also necessary.

Product and service inquiries

For all product use and technical inquiries, contact the distributor where you purchased your product, or a Fujitsu sales representative or systems engineer (SE). If you do not know the appropriate contact address for inquiries about the PRIMEQUEST 2000 series, use the Fujitsu contact line.

Fujitsu contact line

We accept Web inquiries. For details, visit our website:

<https://support.ts.fujitsu.com/IndexContact.asp?Ing=COM&In=true>

Warranty

If a component failure occurs during the warranty period, we will repair it free of charge in accordance with the terms of the warranty agreement. For details, see the warranty.

Before requesting a repair

If a problem occurs with the product, confirm the problem by referring to 12.2 Troubleshooting in the *PRIMEQUEST 2000 Series Administration Manual* (CA92344-0537). If the error recurs, contact your sales representative or a field engineer. Confirm the model name and serial number shown on the label affixed to the right front of the device and report it. Also check any other required items beforehand according to 12.2 Troubleshooting in the *PRIMEQUEST 2000 Series Administration Manual* (CA92344-0537).

The system settings saved by the customer will be used during maintenance.

Manual

How to use this manual

This manual contains important information about the safe use of this product. Read the manual thoroughly to understand the information in it before using this product. Be sure to keep this manual in a safe and convenient location for quick reference.

Fujitsu makes every effort to prevent users and bystanders from being injured and to prevent property damage. Be sure to use the product according to the instructions in this manual.

Exportation/release of this document may require necessary procedures in accordance with the regulations of the Foreign Exchange and Foreign Trade Control Law of Japan and/or US export control laws.

Manuals for the PRIMEQUEST 2000 series

The following manuals have been prepared to provide you with the information necessary to use the PRIMEQUEST 2000 series.

You can access HTML versions of these manuals at the following sites:

Japanese-language site:

<http://www.fujitsu.com/jp/products/computing/servers/primequest/products/2000/catalog/manual/2000/>

Global site: <http://www.fujitsu.com/global/products/computing/servers/mission-critical/primequest/>

<http://manuals.ts.fujitsu.com/>

Title	Description	Manual code
<i>PRIMEQUEST 2000 Series Getting Started Guide</i>	Describes what manuals you should read and how to access important information after unpacking the PRIMEQUEST 2000 series server. (This manual comes with the product.)	CA92344-0522
<i>PRIMEQUEST 2000 Series Safety and Regulatory Information</i>	Contains important information required for using the PRIMEQUEST 2000 series safely.	CA92344-0533
<i>PRIMEQUEST 2000 Series General Description</i>	Describes the functions and features of the PRIMEQUEST 2000 series.	CA92344-0534
<i>SPARC Enterprise/ PRIMEQUEST Common Installation Planning Manual</i>	Provides the necessary information and concepts you should understand for installation and facility planning for SPARC Enterprise and PRIMEQUEST installations.	C120-H007EN
<i>PRIMEQUEST 2000 Series Hardware Installation Manual</i>	Includes the specifications of and the installation location requirements for the PRIMEQUEST 2000 series.	CA92344-0535
<i>PRIMEQUEST 2000 Series Installation Manual</i>	Describes how to set up the PRIMEQUEST 2000 series server, including the steps for installation preparation, initialization, and software installation.	CA92344-0536
<i>PRIMEQUEST 2000 Series User Interface Operating Instructions</i>	Describes how to use the Web-UI and UEFI to assure proper operation of the PRIMEQUEST 2000 series server.	CA92344-0538
<i>PRIMEQUEST 2000 Series Administration Manual</i>	Describes how to use tools and software for system administration and how to maintain the system (component replacement and error notification).	CA92344-0537
<i>PRIMEQUEST 2000 Series Tool Reference</i>	Provides information on operation methods and settings, including details on the MMB and UEFI functions.	CA92344-0539

Title	Description	Manual code
<i>PRIMEQUEST 2000 Series Message Reference</i>	Lists the messages that may be displayed when a problem occurs during operation and describes how to respond to them.	CA92344-0540
<i>PRIMEQUEST 2000 Series REMCS Installation Manual</i>	Describes REMCS service installation and operation	CA92344-0542
<i>PRIMEQUEST 2000 Series Glossary</i>	Defines the PRIMEQUEST 2000 series related terms and abbreviations.	CA92344-0541

Related manuals

The following manuals relate to the PRIMEQUEST 2000 series.

You can access these manuals at the following site:

<http://www.fujitsu.com/global/products/computing/servers/mission-critical/primequest/>

<http://manuals.ts.fujitsu.com/>

Contact your sales representative for inquiries about the ServerView manuals

Title	Description
<i>ServerView Suite ServerView Operations Manager Quick Installation (Windows)</i>	Describes how to install and start ServerView Operations Manager in a Windows environment.
<i>ServerView Suite ServerView Operations Manager Quick Installation (Linux)</i>	Describes how to install and start ServerView Operations Manager in a Linux environment.
<i>ServerView Suite ServerView Installation Manager</i>	Describes the installation procedure using ServerView Installation Manager.
<i>ServerView Suite ServerView Operations Manager Server Management</i>	Provides an overview of server monitoring using ServerView Operations Manager, and describes the user interface of ServerView Operations Manager.
<i>ServerView Suite ServerView RAID Management User Manual</i>	Describes RAID management using ServerView RAID Manager.
<i>ServerView Suite Basic Concepts</i>	Describes basic concepts about ServerView Suite.
<i>ServerView Operations Manager Installation ServerView Agents for Linux</i>	Describes installation and update installation of ServerView Linux Agent.
<i>ServerView Operations Manager Installation ServerView Agents for Windows</i>	Describes installation and update installation of ServerView Windows Agent.
<i>ServerView Mission Critical Option User Manual</i>	Describes the necessary functions unique to PRIMEQUEST (cluster linkage) and ServerView Mission Critical Option (SVMco), which is required for supporting these functions.

Title	Description
<i>ServerView RAID Manager VMware vSphere ESXi 5 Installation Guide</i>	Describes the installation and settings required to use ServerView RAID Manager on the VMware vSphere ESXi 5 server.
<i>Modular RAID Controller</i>	Provides technical information on using SAS RAID controllers.
<i>LSI MegaRAID SAS 2.0 Software</i>	RAID Ctrl SAS 6Gb 1GB (D3116C)
<i>LSI MegaRAID SAS 2.0 Device Driver Installation</i>	MegaRAID SAS 9286CV-8e Refer to the following URL: The Fujitsu Technology Solutions manuals server http://manuals.ts.fujitsu.com/
<i>Modular RAID Controller</i>	Provides technical information on using SAS RAID controllers.
<i>LSI MegaRAID SAS 3.0 Software</i>	PRAID EP400i / EP420i (D3216)
<i>LSI Integrated RAID SAS 3.0 Solution</i>	PRAID EP420e Refer to the following URL: The Fujitsu Technology Solutions manuals server http://manuals.ts.fujitsu.com/

Abbreviations

This manual uses the following product name abbreviations.

Formal product name	Abbreviation
Microsoft (R) Windows Server (R) 2016 Standard	Windows, Windows Server 2016
Microsoft (R) Windows Server (R) 2016 Datacenter	
Microsoft (R) Windows Server (R) 2012 R2 Standard	Windows, Windows Server 2012 R2
Microsoft (R) Windows Server (R) 2012 R2 Datacenter	
Microsoft (R) Windows Server (R) 2012 Standard	Windows, Windows Server 2012
Microsoft (R) Windows Server (R) 2012 Datacenter	
Microsoft (R) Windows Server (R) 2008 R2 Standard	Windows, Windows Server 2008 R2
Microsoft (R) Windows Server (R) 2008 R2 Enterprise	
Microsoft (R) Windows Server (R) 2008 R2 Datacenter	
Red Hat (R) Enterprise Linux (R) 7 (for Intel64)	Linux, RHEL7, RHEL
Red Hat (R) Enterprise Linux (R) 6 (for Intel64)	Linux, RHEL6, RHEL
Oracle Linux 6 (x86_64)	Oracle Linux, Oracle Linux 6
VMware vSphere (R) 6	VMware, vSphere 6.x, VMware 6, VMware 6.x
VMware (R) ESXi (TM) 6	ESXi, ESXi 6, ESXi 6.x
VMware vSphere (R) 5	VMware, vSphere 5.x, VMware 5, VMware 5.x
VMware (R) ESXi (TM) 5	ESXi, ESXi 5, ESXi 5.x
SUSE (R) Linux Enterprise Server 12	SLES, SLES12

Formal product name	Abbreviation
SUSE (R) Linux Enterprise Server 11	SLES, SLES11

Trademarks

- Microsoft, Windows, Windows Server, Hyper-V and BitLocker are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.
- Linux is a registered trademark of Linus Torvalds.
- Red Hat, the Shadowman logo and JBoss are registered trademarks of Red Hat, Inc. in the U.S. and other countries.
- Intel, Intel logo, Intel Inside, Intel Inside logo, Intel Atom, Intel Atom Inside, Intel Core, Core Inside, Intel vPro, vPro Inside, Celeron, Celeron Inside, Itanium, Itanium Inside, Pentium, Pentium Inside, Xeon, Xeon Phi, Xeon Inside, Ultrabook are trademarks or registered trademarks of Intel Corporation.
- Ethernet is a registered trademark of Fuji Xerox Co., Ltd. in Japan and is a registered trademark of Xerox Corp. in the United States and other countries.
- VMware is a trademark or registered trademark of VMware, Inc. in the United States and other countries.
- Novell is a registered trademark of Novell Inc. SUSE and the SUSE logo is a trademark, of SUSE LLC a Novell company, in the United States and other countries.
- Xen is a trademark or registered trademark of Citrix Systems, Inc. or its subsidiaries in the United States and other countries.
- Other company names and product names are the trademarks or registered trademarks of their respective owners.
- Trademark indications are omitted for some system and product names in this manual.

Notation

This manual uses the following fonts and symbols to express specific types of information.

Font or symbols	Meaning	Example
<i>Italics</i>	Title of a manual that you should refer to	See the <i>PRIMEQUEST 2000 Series Installation Manual</i> (CA92344-0536).
[]	Window names as well as the names of buttons, tabs, and drop-down menus in windows are enclosed in brackets.	Click the [OK] button.

Notation for the CLI (command line interface)

The following notation is used for commands.

Command syntax

Command syntax is represented as follows.

- Variables requiring the entry of a value are enclosed in angle brackets < >
- Optional elements are enclosed in brackets [].
- Options for optional keywords are grouped in | (stroke) separated lists enclosed in brackets [].
- Options for required keywords are grouped in | (stroke) separated lists enclosed in braces { }.

Command syntax is written in a box.

Remarks

The command output shown in the PDF manuals may include line feeds at places where there is no line feed symbol (¥ at the end of the line).

Notes on notations

- If you have a comment or request regarding this manual, or if you find any part of this manual unclear, please take a moment to share it with us by filling in the form at the following webpage, stating your points specifically, and sending the form to us:
<https://support.ts.fujitsu.com/IndexContact.asp?lng=COM&ln=true>
- The contents of this manual may be revised without prior notice.
- In this manual, the Management Board and MMB firmware are abbreviated as "MMB."
- In this manual, IOU_10GbE and IOU_1GbE are collectively referred to as IO Units.
- Screenshots contained in this manual may differ from the actual product screen displays.
- The IP addresses, configuration information, and other such information contained in this manual are display examples and differ from that for actual operation.
- The PDF file of this manual is intended for display using Adobe(R) Reader(R) in single page viewing mode at 100% zoom.

This manual shall not be reproduced or copied without the permission of Fujitsu Limited.

Copyright 2014-2017 FUJITSU LIMITED

Contents

Preface.....	i
CHAPTER 1 Installation Overview.....	1
1.1 Setup Workflow.....	1
1.1.1 Work performed by a field engineer.....	1
1.1.2 Work performed by the user.....	2
CHAPTER 2 Preparing for Main Unit Installation	3
2.1 Safety Precautions.....	3
2.2 Before Installing the Main Unit	4
2.3 Checking Environmental Conditions	4
2.4 Preparing the Power Supply Equipment.....	4
2.4.1 Electrical specifications.....	4
2.4.2 Facility power requirements and characteristics	5
2.4.3 Grounding.....	5
2.5 Checking the Installation Site	5
2.6 Preparing to Install the Main Unit	5
2.7 Confirming the Supplied Parts	6
2.8 Mounting the Main Unit in a 19-inch Rack.....	6
2.9 Connecting the Power Cables	6
CHAPTER 3 Work before Operating System Installation.....	9
3.1 Before Starting Setup	9
3.1.1 MMB Settings.....	9
3.1.2 Partition Settings	9
3.2 System Startup	10
3.2.1 Power-on/off of main unit.....	10
3.3 Connection and Setting of MMB.....	11
3.3.1 Connecting the MMB console PC	12
3.3.2 MMB Initialization	13
3.3.3 Setting of Connection for Actual operating Environment.....	15
3.3.4 Login to MMB.....	17
3.3.5 Web-UI Window View	19
3.3.6 Network set up of MMB.....	19
3.3.7 Set up of telnet	21
3.3.8 Configuration of DNS server	23
3.3.9 Set up of Alarm E-Mail.....	25
3.3.10 Registration of User Account.....	27
3.3.11 Setting of System Name.....	29
3.3.12 Setting of Date and Time.....	30
3.4 Partition Configuration (Physical Partition)	32
3.4.1 Setting the partition configuration	32
3.4.2 Setting the Home SB.....	35
3.4.3 Setting of Reserved SB.....	37
3.4.4 Partition name settings	45

3.4.5	Various mode settings	46
3.4.6	Settings of Console Redirection.....	47
3.4.7	Power OFF and ON of the partition	48
3.4.8	Confirmation of partition information	49
3.5	Partition Configuration (Extended Partitioning)	50
3.5.1	Enabling the Extended Partitioning function.....	50
3.5.2	Generating the Extended Partition.....	51
3.5.3	Assigning SB resources to Extended Partition.....	53
3.5.4	Assigning IOU resources to Extended Partition	55
3.5.5	Assigning PCI_Box resources to Extended Partition.....	56
3.5.6	Various mode settings	57
3.5.7	Settings of Console Redirection.....	58
3.5.8	Setting of Extended Socket.....	60
3.5.9	Power OFF and ON of the Extended Partition.....	62
3.5.10	Confirmation of Extended Partition information	62
3.6	Setting of LDAP	63
3.6.1	User Management using an LDAP directory service.....	63
3.6.2	Overview of LDAP settings	64
3.6.3	Setting procedure of LDAP (Active Directory).....	65
3.7	Storage of the configuration information.....	77
3.7.1	Backup of the MMB configuration information	77
CHAPTER 4	Installation of Operating System and bundled software.....	78
4.1	Installation procedure of Operating System and bundled software	78
4.2	Install procedure of Operating System to Extended Partition.....	79
4.3	Procedure to install Windows in SAN/iSCSI storage device.....	81
4.3.1	Presetting	81
4.3.2	Preparation for installation	82
4.3.3	Installation of operating system.....	82
4.3.4	Bundled software setting after installation is completed	83
4.3.5	Connection of SAN and the internal HDD/SDD after installation	85
4.4	Procedures to install Windows into internal HDD/SSD	85
4.4.1	Presetting	85
4.4.2	Preparations for installation	86
4.4.3	Installation of operating system.....	86
4.4.4	Setting the bundled software after completion of installation.....	87
4.4.5	After Installation, Connection between SAN and internal HDD/SSD.....	89
4.5	Procedures to install RHEL in SAN storage device.....	90
4.5.1	Presetting	90
4.5.2	Preparation for installation	90
4.5.3	Execution of installation	91
4.5.4	Configuring Bundled Software after Installation	93
4.5.5	After installation, connecting SAN and internal HDD/SSD	94
4.6	Procedure to install RHEL into internal HDD/SSD.....	95
4.6.1	Presetting	95
4.6.2	Preparing for Installation	95

4.6.3	Installation.....	96
4.6.4	Configuring Bundled Software after Installation	97
4.6.5	After installation, connecting SAN with internal HDD/SSD.....	99
4.7	Procedure to install VMware on the SAN storage device	100
4.7.1	Presetting	100
4.7.2	Preparation of installation	101
4.7.3	Installation of VMware	102
4.7.4	Setting of Software Watchdog.....	104
4.7.5	VMware Installation completion.	104
4.7.6	Installation of Bundled Software.....	104
4.8	Procedure to install VMware into internal HDD/SSD.....	105
4.8.1	Presetting	105
4.8.2	Preparation of installation	105
4.8.3	VMware installation.....	106
4.8.4	Setting of notification in case that OS freezes	107
4.8.5	Completion of VMware installation.....	107
4.8.6	Installation of the bundled software.....	107
4.9	Procedure of Hyper-V installation	108
4.10	Procedure of KVM installation.....	108
4.11	Procedure to install SUSE Linux Enterprise Server into the SAN Storage Unit.....	109
4.11.1	Presetting.....	109
4.11.2	Preparation of installation.....	110
4.11.3	Installation.....	110
4.11.4	Configuring Bundled Software after Installation.....	111
4.11.5	After installation, connecting SAN and internal HDD/SSD	111
4.12	Procedure to install SUSE Linux Enterprise Server into the Internal HDD.....	112
4.12.1	Presetting.....	112
4.12.2	Preparing for Installation	112
4.12.3	Installation.....	113
4.12.4	Configuring Bundled Software after Installation.....	114
4.12.5	After completing OS installation, configure the bundled software.After installation, connecting SAN and internal HDD/SSD	114
CHAPTER 5	Work after Operating System installation.....	115
5.1	Types of work.....	115
5.2	Setting of SVS (SVagent/SVAgentless Service/SVmco)	115
5.2.1	Management LAN setting for SVagent.....	116
5.3	Setting of sadump.....	118
5.4	Setup of dump environment (Windows).....	128
5.4.1	About memory dump file/paging file	128
5.5	Setup of dump environment (Linux)	128
5.5.1	How to use sadump (Linux)	128
5.6	Setup of NTP client.....	131
5.7	Saving management and configuration information	131
5.7.1	Storage of MMB configuration information	131
5.7.2	Storage of BIOS configuration information	132

5.7.3	Storage of LAN card and CNA card configuration information	133
5.8	“Write Policy” recommended setting of SAS array controller card	133
5.9	Setup of Serial Port	134
5.9.1	Setup of Serial Port (Red Hat Enterprise Linux 7.x)	134
5.9.2	Setup of Serial Port (Red Hat Enterprise Linux 6.x)	134
5.9.3	Setup of Serial Port (SUSE (R) Linux Enterprise Server 12)	134
CHAPTER 6	Work after installation	135
6.1	Redundant configuration of network adaptor	135
6.2	NTP Configuration	136
6.2.1	Method of operating NTP in PRIMEQUEST 2000 series	136
6.2.2	Setting NTP server	138
6.3	Configuring DNS server	139
6.4	Set up of SMTP	139
6.5	Set up of security	139
6.5.1	Set up of Access Control	140
6.5.2	Set up of SNMP	142
6.5.3	Set up of SSH	146
6.5.4	HTTPS Settings	147
6.6	Schedule operations	147
CHAPTER 7	Power ON and OFF of the partition	148
7.1	Related to the power ON and OFF of the partition	148
7.1.1	Power ON of the partition	148
7.1.2	Power OFF of the partition	149
Appendix A	List of setting items	151
A.1	Setting items of MMB	151
A.2	Setting items of UEFI	151
A.3	Setting items of BMC	151
Appendix B	About software	152
Appendix C	Configuring the SAN boot environment	153
Appendix D	Notes on VMware installation	154
D.1	Building the RAID environment in the VMware internal disk.	154
D.2	Installing VMware Bundled Software	154
D.3	Setting of PCI Bus mode	154
D.4	Setting of Address Range Mirror	155
Appendix E	Setting up the NTP Server (Windows)	156
E.1	Overview of NTP Client Settings	157
E.2	NTP Settings in Windows Server 2016	158
E.2.1	Specifying an NTP Server	158
E.2.2	Synchronization Interval and Startup Settings of NTP Service	160
E.2.3	Event Task Settings	163
E.3	NTP Settings in Windows Server 2012 R2 and Windows Server 2012	168
E.3.1	Specifying an NTP Server	168
E.3.2	Synchronization Interval and Startup Settings of NTP Service	171
E.3.3	Event Task Settings	174
E.4	NTP Settings in Windows Server 2008 R2	180

E.4.1 Specifying an NTP Server..... 180

E.4.2 Synchronization Interval and Startup Settings of NTP Service..... 183

E.4.3 Event Task Settings 186

Appendix F Starting HII Configuration Utility..... 191

F.1 Starting HII Configuration Utility..... 191

F.2 Method of identifying position where SAS RAID Controller is mounted 193

F.3 Method of identifying SB where SAS RAID Controller is mounted..... 196

Appendix G Starting Web BIOS..... 203

Appendix H Allocation Order of PCI Bus Number..... 207

Figures

FIGURE 2.1 Power cable socket locations (PRIMEQUEST2000 Series)	7
FIGURE 2.2 Power cable socket locations (PCI_Box)	8
FIGURE 3.1 External Views of Mounting Locations and External interface of MMB.....	12
FIGURE 3.2 Location of MMB user port.....	15
FIGURE 3.3 Network Configuration and IP Address of Management LAN.....	16
FIGURE 3.4 MMB Web-UI [Login] Window	18
FIGURE 3.5 Example of [IPv4 Interface] Window	20
FIGURE 3.6 Example of [IPv6 Interface] Window	21
FIGURE 3.7 Example of [Network Protocols] Window.....	22
FIGURE 3.8 Example of [IPv4 Interface] Window	23
FIGURE 3.9 Example of [IPv6 Interface] Window	24
FIGURE 3.10 Example of [Alarm E-Mail] Window.....	25
FIGURE 3.11 Example of [Alarm E-Mail Filtering Condition] Window.....	26
FIGURE 3.12 Example of [User List] Window.....	27
FIGURE 3.13 Example of [Add User] Window	28
FIGURE 3.14 Example of [Edit User] Window.....	28
FIGURE 3.15 [System Information] Window Example.....	29
FIGURE 3.16 [Date/ Time] Window Example.....	30
FIGURE 3.17 [Management LAN Port Configuration] Windows Example	31
FIGURE 3.18 [Partition Configuration] Window Example (PRIMEQUEST 2800E3/2800E2/2800E)	32
FIGURE 3.19 Example of [Add SB/IOU to Partition] Window.....	33
FIGURE 3.20 [Partition Configuration] Window Example.....	34
FIGURE 3.21 Example of [Remove SB/IOU from Partition] Window.....	35
FIGURE 3.22 Example of [Partition Home] Window	36
FIGURE 3.23 Example of [Reserved SB Configuration] Window.....	37
FIGURE 3.24 Setting of BlueScreenTimeout ([Configure] tab).....	40
FIGURE 3.25 Setting of BlueScreenTimeout (Edit screen of [Edit Advanced System Settings])	41
FIGURE 3.26 Setting of BlueScreenTimeout (After searching BlueScreenTimeout).....	42
FIGURE 3.27 Setting of BlueScreenTimeout ([System] tab).....	43
FIGURE 3.28 Setting of BlueScreenTimeout (After searching BlueScreenTimeout).....	44
FIGURE 3.29 Setting of BlueScreenTimeout ([Edit Option] screen).....	44
FIGURE 3.30 Example of [Partition Configuration] Window	45
FIGURE 3.31 Example of [IPv4 Console Redirection Setup] Window	47
FIGURE 3.32 Example of [IPv6 Console Redirection Setup] Window.....	48
FIGURE 3.33 Example of [Information] Window.....	49
FIGURE 3.34 [Mode] Window Example.....	50
FIGURE 3.35 [Partition Configuration] Window Example.....	51
FIGURE 3.36 Example of [Add SB/IOU to Partition] Window.....	52
FIGURE 3.37 Example of [Extended Partition Configuration of SB Resources] Window	53
FIGURE 3.38 Example of [Extended Partition Configuration of IOU Resources] Window	55
FIGURE 3.39 Example of [Extended Partition Configuration of PCI_Box Resources] Window	56
FIGURE 3.40 Example of [IPv4 Console Redirection Setup] Window.....	58

FIGURE 3.41 Example of [IPv6 Console Redirection Setup] Window	59
FIGURE 3.42 Example of [Mode] Window.....	60
FIGURE 3.43 Example of [Extended Socket Configuration] Window	61
FIGURE 3.44 Example of [Information] Window.....	62
FIGURE 3.45 User Management using an LDAP	63
FIGURE 3.46 Overview of LDAP settings.....	64
FIGURE 3.47 [LDAP User Group List] Window.....	66
FIGURE 3.48 [Add LDAP User Group] Window.....	67
FIGURE 3.49 [LDAP User Group List] Window (after generating User Group).....	68
FIGURE 3.50 [Directory Service Configuration] Window (Active Directory) (1/2)	69
FIGURE 3.51 [Directory Service Configuration] Window (Active Directory) (2/2)	69
FIGURE 3.52 [Directory Service Configuration] Window (Active Directory) (The setting example 1).....	71
FIGURE 3.53 [Directory Service Configuration] Window (Active Directory) (The setting example 2).....	71
FIGURE 3.54 [Directory Service Configuration] Window (OpenLDAP) (The setting example 1)	74
FIGURE 3.55 [Directory Service Configuration] Window (OpenLDAP) (The setting example 2)	74
FIGURE 3.56 [Directory Service Configuration] Window (Test LDAP).....	75
FIGURE 3.57 Dialog box which in case connection test is succeeded.	76
FIGURE 3.58 Dialog box which in case connection test is failed.	76
FIGURE 3.59 Example of [Backup/Restore MMB Configuration] Window	77
FIGURE 4.1 File Structure.....	93
FIGURE 4.2 File Structure.....	98
FIGURE 5.1 Example of Device Manager Menu.....	119
FIGURE 5.2 Main menu (sadump)	119
FIGURE 5.3 sadump set-up menu	120
FIGURE 5.4 sadump set-up menu	120
FIGURE 5.5 Main menu (sadump)	121
FIGURE 5.6 Dump Device Maintenance Menu.....	121
FIGURE 5.7 Dump Device Structure Menu	122
FIGURE 5.8 Dump Device Selection Menu	122
FIGURE 5.9 Dump Device Selection Menu	123
FIGURE 5.10 Dump Device Structure Menu	124
FIGURE 5.11 Dump Device Maintenance Menu.....	124
FIGURE 5.12 Dump Device Setting Menu.....	125
FIGURE 5.13 Dump Device List Menu.....	125
FIGURE 5.14 Dump Device Setting Menu.....	126
FIGURE 5.15 Dump Device Maintenance Menu.....	126
FIGURE 5.16 Main Menu (sadump).....	127
FIGURE 5.17 Example of [Backup/Restore MMB Configuration] Window	132
FIGURE 5.18 Example of [Backup BIOS Configuration].....	133
FIGURE 6.1 External network configuration.....	135
FIGURE 6.2 Operation Diagram when External NTP Server is used (When three NTP servers are used).....	137
FIGURE 6.3 Example of [Date/Time] Window.....	138
FIGURE 6.4 Example of [Access Control] Window.....	140
FIGURE 6.5 Example of [Add Filter] Window	141
FIGURE 6.6 Example of [Network Protocols] Window.....	142

FIGURE 6.7 Example of [SNMP Community] Window.....	143
FIGURE 6.8 Example of [SNMP Trap] Window	144
FIGURE 6.9 Example of [SNMP v3 Configuration].....	145
FIGURE 6.10 Example of [Network Protocols] Window.....	146
FIGURE 6.11 Example of [Network Protocols] window.....	147
FIGURE 7.1 Example of [Power Control] window	149
FIGURE 7.2 Example of [Power Control] window	150
Figure E.1 [Date and Time] window (1)	158
Figure E.2 [Date and Time] window (2)	159
Figure E.3 [Internet Time Settings] dialog box.....	159
Figure E.4 [Registry Editor] selection window.....	160
Figure E.5 [Registry Editor] window	161
Figure E.6 [Services] window	161
Figure E.7 [Windows Time Properties] window.....	162
Figure E.8 [Task Scheduler] window	163
Figure E.9 [Create Basic Task Wizard] window (Create a Basic Task).....	164
Figure E.10 [Create Basic Task Wizard] window (Task Trigger).....	164
Figure E.11 [Create Basic Task Wizard] window (When an Event Is Logged)	165
Figure E.12 [Create Basic Task Wizard] window (Action)	165
Figure E.13 [Create Basic Task Wizard] window (Start a Program)	166
Figure E.14 [Create Basic Task Wizard] window (Finish).....	166
Figure E.15 [Properties] dialog box	167
Figure E.16 [Select User or Group] window	167
FIGURE E.0.17 [Date and Time] window (1)	168
FIGURE E.0.18 [Date and Time] window (2)	169
FIGURE E.0.19 [Internet Time Settings] window	170
FIGURE E.0.20 [Registry Editor] selection window	171
FIGURE E.0.21 [Registry Editor] window	172
FIGURE E.0.22 [Windows Time Properties] window	173
FIGURE E.0.23 [Task Scheduler] window	174
FIGURE E.0.24 [Create Basic Task Wizard] window (Create a Basic Task).....	175
FIGURE E.0.25 [Create Basic Task Wizard] window (Task Trigger).....	175
FIGURE E.0.26 [Create Basic Task Wizard] window (When a Specific Event Is Logged)	176
FIGURE E.0.27 [Create Basic Task Wizard] window (Action)	177
FIGURE E.0.28 [Create Basic Task Wizard] window (Start a Program).....	177
FIGURE E.0.29 [Create Basic Task Wizard] window (Summary)	178
FIGURE E.0.30 [Properties] dialog box	178
FIGURE E.0.31 [Select User or Group] window	179
FIGURE E.0.32 [Date and Time] window (1)	180
FIGURE E.0.33 [Date and Time] window (2)	181
FIGURE E.0.34 [Internet Time Settings] window	182
FIGURE E.0.35 [Run] window	183
FIGURE E.0.36 [Registry Editor] window	183
FIGURE E.0.37 [Services] window	184
FIGURE E.0.38 [Windows Time Properties] window	185

FIGURE E.0.39 [Task Scheduler] window	186
FIGURE E.0.40 [Create Basic Task Wizard] window (Create a Basic Task).....	187
FIGURE E.0.41 [Create Basic Task Wizard] window (Task Trigger).....	187
FIGURE E.0.42 [Create Basic Task Wizard] window (When a Specific Event Is Logged)	188
FIGURE E.0.43 [Create Basic Task Wizard] window (Action)	188
FIGURE E.0.44 [Create Basic Task Wizard] window (Start a Program)	189
FIGURE E.0.45 [Create Basic Task Wizard] window (Summary)	189
FIGURE E.0.46 [Properties] dialog box	190
FIGURE E.0.47 [Select User or Group] window	190
FIGURE F.0.1 [Boot Manager] window	191
FIGURE F.0.2 [Device Manager] window	192
FIGURE F.0.3 [Boot Manager] window	193
FIGURE F.0.4 [Device Manager] window	194
FIGURE F.0.5 HII Configuration Utility [Main Menu] window	194
FIGURE F.0.6 HII Configuration Utility [Controller Management] window.....	195
FIGURE F.0.7 [Boot Manager] window	196
FIGURE F.0.8 [Device Manager] window	197
FIGURE F.0.9 HII Configuration Utility [Main Menu] window	197
FIGURE F.0.10 HII Configuration Utility [Device management] window	198
FIGURE F.0.11 HII Configuration Utility [Select operation] window.....	198
FIGURE F.0.12 HII Configuration Utility [Device Management] window	199
FIGURE F.0.13 HII Configuration Utility [Success] window.....	199
FIGURE F.0.14 HII Configuration Utility [Main Menu] window	200
FIGURE F.0.15 HII Configuration Utility [Select operation] window.....	201
FIGURE F.0.16 HII Configuration Utility [Device management] window	201
FIGURE F.0.17 HII Configuration Utility [Main Menu] window	202
FIGURE F.0.18 [Device Manager] window	202

Tables

TABLE 1.1 Work performed by the user.....	2
TABLE 2.1 Accessories required in main unit installation.....	5
TABLE 3.1 Flow of connection and setting of MMB.....	11
TABLE 3.2 External interface of MMB	12
TABLE 3.3 contents of setting of terminal software.....	13
TABLE 3.4 contents of setting of terminal software.....	13
TABLE 3.5 Settings required for connecting external LAN.....	16
TABLE 3.6 URL to be entered for Login	18
TABLE 3.7 Default user account/password.....	18
TABLE 3.8 Example for Extended Socket (Zone) configuration	61
TABLE 3.9 Setting item in [Directory Service Configuration] Window (Active Directory).....	70
TABLE 3.10 Setting item in [Directory Service Configuration] Window (Novell eDirectory/OpenLDAP/OpenDS/OpenDJ)	72
TABLE 4.1 Operating system installation by SVIM.....	82
TABLE 4.2 Operating System Installation using SVIM.....	86
TABLE 4.3 Operating system installation with SVIM	91
TABLE 4.4 Operating system installation with SVIM	96
TABLE 4.5 Operating system installation with SVIM	102
TABLE 4.6 Operating system installation by SVIM.....	106
TABLE 4.7 Operating system installation with SVIM	110
TABLE 4.8 Operating system installation with SVIM	113
TABLE 5.1 Type of operations	115
Table E.1 Settings for system clock synchronization	157

CHAPTER 1 Installation Overview

This chapter describes the workflow up to actual operation of the PRIMEQUEST2000 series server.

For an overview of the hardware and software and Product names and functions of the server, see the *PRIMEQUEST2000 Series General Description* (CA92344-0534).

1.1 Setup Workflow

This section describes the workflow for the tasks required to prepare the PRIMEQUEST2000 series server for operation. Setup work consists of tasks performed by a field engineer and other tasks performed by the user.

The setup workflow is described below.

Field engineers perform the following tasks on this product.

Customers are not allowed to perform these tasks under any circumstances. Otherwise, electric shock, injury, or fire may result.

- Newly installing or moving equipment
- Removing the front, rear, and side covers
- Installing and removing built-in options
- Maintenance (repair and periodic diagnosis and maintenance)

1.1.1 Work performed by a field engineer

A field engineer sets up the unit. This includes the following tasks:

- Checking mounted components
- Preparing for main unit installation
- Checking partitions ... etc.

Remark

The following tasks need to be completed before the user starts the setup work:

- Unit setup by a field engineer
- MMB setup within the scope of responsibility of the field engineer
- Running test programs ... etc.

1.1.2 Work performed by the user

The user performs the following tasks in the order given.

TABLE 1.1 Work performed by the user

No.	Work item	Work tasks and description	See
1.	Setup	- Initializing partition settings Perform tasks such as setting partition names and configuring partitions individually.	3.1.2 Partition Settings
		- Connecting and configuring the MMB (operating environment) - Setting up the connection environment for actual operation. Set up the MMB connection environment, such as by setting the IP addresses for actual operation.	0 Setting of Connection for Actual operating Environment
		- Initializing MMB settings Set the parameters for the entire MMB, such as the user account names or system names.	3.3.10 Registration of User Account 3.3.11 Setting of System Name 3.3.12 Setting of Date and Time
		- Setting various modes Set modes as needed.	3.4.5 Various mode settings
		- Starting the system and confirming system startup Start the system and confirm that it has started normally.	3.2 System Startup
		- Saving setting information Save the setting information for the MMB.	3.7 Storage of the configuration information
2.	Installing the OS and bundled software.	Install the operating system and bundled software.	CHAPTER 4 Installation of Operating System and bundled software
3.	Work after installation	Specify the monitoring method, and save the specified information.	CHAPTER 5 Types of work
4.	Configuring SNMP and security	Configure SNMP and security.	CHAPTER 7 Power ON and OFF of the partition

CHAPTER 2 Preparing for Main Unit Installation

This chapter describes the preparation before main unit installation.

This preparation includes work up to power cable connection.

2.1 Safety Precautions

Observe the following precautions when installing the main unit.



Installation of main units must follow the precautions below. Otherwise system may be damaged.

- Follow the precautions, warnings, and instructions labelled on the main unit.
- Do not block the vent holes.
- Do not install the main unit in a location exposed to direct sunlight or close to a device that may generate heat.
- Do not install the main unit in a location exposed to dust, corrosive gas, or salt spray.
- Do not install the main unit in a location subject to strong vibration. Install the main unit on a flat surface.
- Use grounded Category 3 wiring or better. Using another type of grounded wiring may cause abnormal operation.
- Do not route cables under the main unit. Do not allow cables to become taut.
- Do not disconnect the power cables while the main unit power is on.
- If it is hard to push the connector latch of a LAN cable or other cable when attempting to disconnect the cable, push it with a flathead screwdriver.

Forcibly inserting a finger may cause personal injury or damage the unit.

- Do not place anything on top of the main unit. Do not work above or on top of the main unit.
- Prevent rapid rises in the ambient temperature during winter. Such an abrupt temperature change may cause condensation to form in the main unit. Allow sufficient warm-up time before starting operation.
- Do not install the main unit close to a photocopier, air-conditioning unit, welder, or other device that generates electromagnetic noise.
- Do not install the main unit close to a device that generates large amounts of electrical noise.
- When installing the main unit, do not connect it to the power supply line for an elevator in the facility, since this would expose it to sudden voltage drops.
- Implement antistatic measures at the installation site.
- Confirm that the power supply voltage and frequency follows rating values labelled on main unit.
- Do not put any materials in the main unit. The main unit contains high-voltage components. So if metallic matter or other electro-conductive object enters the main unit through an opening, it may cause a short circuit. This may lead to fire, electric shock, or damage to the main unit.
- For details on maintenance of the main unit, contact the distributor where you purchased your product, or your sales representative.

2.2 Before Installing the Main Unit

Be sure that you understand the system configuration and have acquired all the requisite installation information before installing the main unit.

For a system overview and details on the system configuration, see the *PRIMEQUEST2000 Series General Description* (CA92344-0534). For details on the installation prerequisites, see the *PRIMEQUEST2000 Series Hardware Installation Manual* (CA92344-0535).

2.3 Checking Environmental Conditions

This section describes the environmental conditions for main unit installation.

The conditions of the main unit operating environment depend on the altitude of the installation site.

For details on the environmental conditions of the PRIMEQUEST2000 series, see 1.3 Installation Specifications in the *PRIMEQUEST2000 Series Hardware Installation Manual* (CA92344-0535).

For details on the recommended temperature and humidity of the computer room, see the *SPARC Enterprise/PRIMEQUEST Common Installation Planning Manual* (C120-H007EN).

2.4 Preparing the Power Supply Equipment

This section describes the electrical specifications, facility power requirements, and grounding for the PRIMEQUEST 2000 series. To prevent accidents, confirm that the power supply equipment can supply enough power to the system.

Electricianing and installation work shall conform to local ordinances and local and national government regulations.

For details on the power supply equipment, see the *SPARC Enterprise/PRIMEQUEST Common Installation Planning Manual* (C120-H007EN).

2.4.1 Electrical specifications

For details on the electrical specifications of the PRIMEQUEST2000 series, see 1.3 Installation Specifications in the *PRIMEQUEST2000 Series Hardware Installation Manual* (CA92344-0535).

For details on the power cables, see 2.2.1 Basic interfaces and peripheral devices in the *PRIMEQUEST2000 Series Hardware Installation Manual* (CA92344-0535).

For details on the connectors and their shapes, see 2.4.1 PRIMEQUEST2000 series main unit in the *PRIMEQUEST 2000 Series Hardware Installation Manual* (CA92344-0535).

2.4.2 Facility power requirements and characteristics

To obtain the required degree of redundancy, the facility must have two independent supplies of power. Connect the circuit breakers to the power receiver provided by the electric power company or to a UPS (uninterruptible power supply).

If the main unit operates in an environment that experiences frequent power failures or has a power source that often becomes unstable, the component failure rate tends to rise.

The PRIMEQUEST2000 series supports the following power feed:

- redundant power feed
- dual power feed

For details on the power line configurations for redundant power connections and dual power connections, see 2.3 Power Cable Connections in the *PRIMEQUEST2000 Series Hardware Installation Manual* (CA92344-0535).

2.4.3 Grounding

The PRIMEQUEST2000 series is shipped with grounded (three-wire) power cables. You need to connect the power cables to outlets with ground terminals. To determine the type of power supply in your building, contact the building manager or a qualified electrician.

2.5 Checking the Installation Site

Before installing the main unit, confirm that the installation site has enough space for the required service (maintenance) area and for accommodating the peripheral devices. For details on checks of the installation site, see Chapter 1 Installation Information in the *PRIMEQUEST2000 Series Hardware Installation Manual* (CA92344-0535).

2.6 Preparing to Install the Main Unit

TABLE 2.1 Accessories required in main unit installation lists the accessories required in main unit installation. Prepare these accessories in advance.

TABLE 2.1 Accessories required in main unit installation

Accessory name	Description
No. 2 Phillips screwdriver	Used to mount the unit in a rack.
Wrist strap	Used to prevent main unit damage from static electrostatic discharged from your body.
Conductive mat	Required for some system configurations. To order any of the accessories, contact the distributor where you purchased your product, or your sales representative.
Ethernet Category 5 cable or better	
Console PC-to-LAN cable (for user LAN)	
External switching hub	Used to connect the PRIMEQUEST2000 series server to an external switching hub via a LAN.
Multitester	Used to check the input AC voltage.

2.7 Confirming the Supplied Parts

Confirm that the delivered parts match the shipping list provided with the main unit.

If any of the parts listed in the shipping list or performance records are missing, incorrect, or damaged, contact the distributor where you purchased your product, or your sales representative.

Note

- If you also purchased optional modules for installation, such as additional memory modules or PCI Express cards, first confirm that the main unit functions normally before mounting the optional modules in the main unit.
- License key must be kept by customer. If you apply the RAID software license, when you will exchange SAS array controller card at the reason for the failure of it, you will need to input the license key.

2.8 Mounting the Main Unit in a 19-inch Rack

The PRIMEQUEST2000 series server is mounted for use in a 19-inch rack. For details on mounting, see Appendix A Racks in the *PRIMEQUEST2000 Series Hardware Installation Manual* (CA92344-0535).

2.9 Connecting the Power Cables

This section describes how to connect the power cables.

You need to connect the power cables to outlets with ground terminals.

Remark

The main unit and PCI_Box are designed to operate with a power supply facility that supports grounded wiring. Do not connect the main unit and PCI_Box to a power supply facility that does not provide grounded wiring. To determine the type of power supply in your building, contact the building manager or a qualified electrician.

Note

If PSU configuration is redundant and power cables are connected first, there is a case the Alarm LED (Amber LED) on OPL is turned on. Also, "Configuration error in excess unit" message is logged in System Event Log. This message does not indicate a failure of the power supply. Please set Power Feed Mode or PSU Redundant Mode in MMB-Web UI.

Operations

1. Confirm with an engineer specializing in electricity that the input power satisfies power requirements. For details on the power requirements, see 1.3 Installation Specifications in the *PRIMEQUEST2000 Series Hardware Installation Manual* (CA92344-0535).
2. Confirm that the power cables are connected to the AC inlets of the main unit and PCI_Box. Also confirm that the power cables are secured with the AC cord clamps for the AC inlets on the main unit.



- The cable is passed through the circle of release Thailand.
- Release tie is tightened and the power cable is fixed. The insulation connector is mistaken from the server and does not come off.

Remark

Release tie can be detached by bending it with the choke end of the zip tie.

3. Group all the cables that run outside the main unit and PCI_Box into power cables and signal cables, and secure them firmly to the cable holders of the 19-inch rack with cable ties.
4. Confirm that the AC power breaker is off. Then, connect the power cables to AC power. For details on the power cable connections, see [“2.4.2Facility power requirements and characteristics”](#).

FIGURE 2.1 Power cable socket locations (PRIMEQUEST2000 Series)


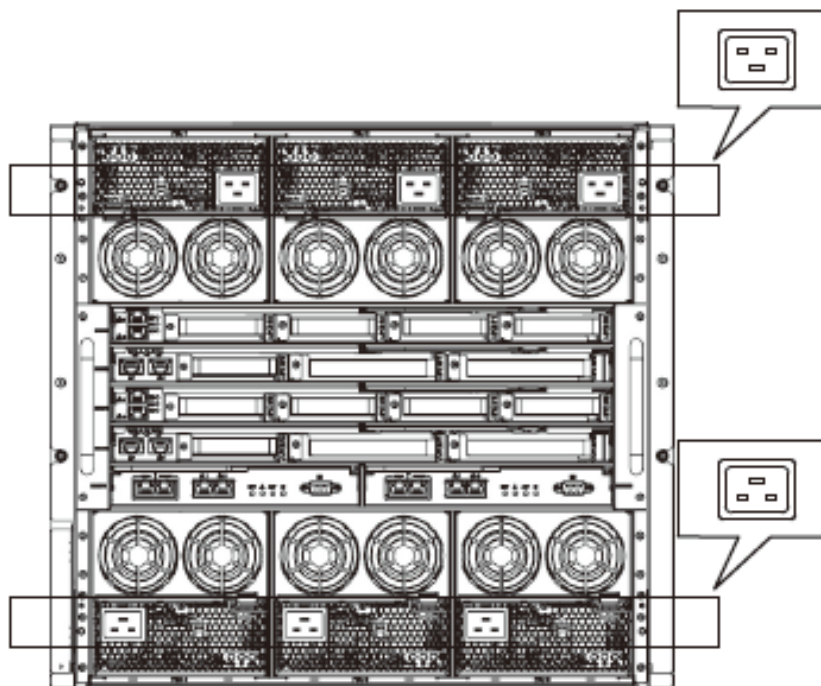


FIGURE 2.2 Power cable socket locations (PCI_Box)

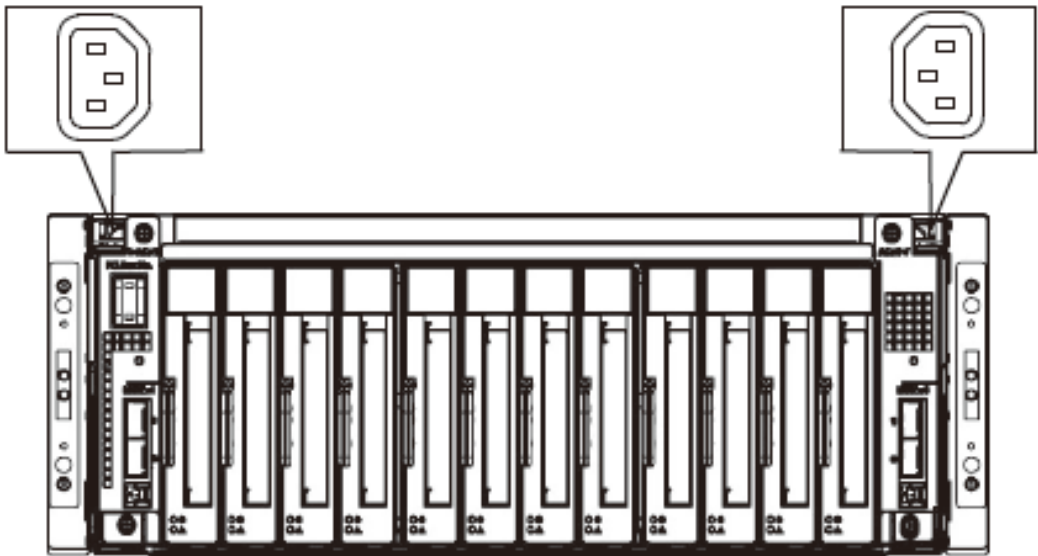

CHAPTER 3 Work before Operating System Installation

This chapter describes the work that must be done before you install the operating system on the PRIMEQUEST 2000 series and setting of actual operation and various setup works.

3.1 Before Starting Setup

This section describes the items necessary to predetermine before the setup.

3.1.1 MMB Settings

It is necessary to predetermine the following items to configure MMB.

- IP address, hostname, subnet mask, and gateway address
- IP address of the PC used as the MMB console (referred to below as the MMB console PC)
- ID for MMB User Account
- PRIMEQUEST 2000 series system name (also used as the system name for SNMP)
- Management LAN environment

For details on setting of MMB, see [“3.3 Connection and Setting of MMB”](#).

Note

The management LAN, remote maintenance LAN and any other LAN must be configured as networks with different subnet masks.

3.1.2 Partition Settings

To construct multiple partitions, following items should be predetermined.

- Number of partitions
- Name of partition
- Configuration of partition
- Home SB

For details on setting of partition, see [“3.4 3.4Partition Configuration”](#).

If partition name and host name of the operating system installed on the partition are the same, operations management of partition becomes easier.

Note

For 2400E3/2800E3/2400E2/2800E2/2400E/2800E Model

- In case PCI Address Mode is set to PCI Segment Mode, PCI ROM Priority parameter in BIOS menu must be set "EFI Compatible ROM" if RAID disk drives including HDD and SSD are to be mounted in Non Home SB.
- In case PCI Address Mode is set to PCI Segment Mode, Legacy OS installation to HDD/SSD on SB is possible only in Home SB.

- In case PCI Address Mode is set to PCI Segment Mode, Legacy OS booting from HDD/SSD on SB is possible only in Home SB.
- The above notes are the same for Extended Partition.

3.2 System Startup

Power control required to startup the system is described in this section.

In case of not being turned on the main power supply of the main unit, follow the procedure described below.

3.2.1 Power-on/off of main unit

Power-on/off of main unit is described.

Power on

The procedure to turn on the main power supply of the main unit is described below.



(Ignition)

When over current is detected and the power is cut off by tripping the breaker of the AC power or optional power distribution box, there is a possibility that failure, such as short circuit occurring in the main unit. In such case, contact to your sales representative or field engineer without turning on the power supply again.

Note

- When the power supply is turned on again after removing the power cable from the AC Inlet, connect the power cable after ten seconds or more.

The procedure to turn on the main power supply of the main unit is described below.

1. Connect the power cable to the AC inlet of the main unit.
For details on the power cable connection, see [“2.9 Connecting the Power Cables”](#).
2. Connect to AC power or optional power distribution box.
3. Turn on the power supply by turning on the circuit breaker of AC power.
After removing the power cable, follow the procedure sequentially from step 1 to turn on the power supply again.

Power off

The procedure to turn off the main power supply of the main unit is described below.



(Data corruption)

Turn off the main power supply of the main unit after confirming that System Power LED of Operator Panel (OPL) is turned off. If the main power supply is turned off while the System Power LED of the OPL is ON, there is a risk of the data being corrupted.

The procedure to turn off the main power supply of the main unit is described below.

1. Turn off the power supply of the main unit. For details, see [“7.1.2 Power OFF of the partition”](#).
2. Confirm that the System Power LED of OPL is turned off.

Remark

When the System Power LED of OPL is turned on, it is in the state that power supply cannot be turned off. When Alarm LED is turned on, contact to your sales representative or field engineer.

3. Remove the power cable connected to power distribution box.

3.3 Connection and Setting of MMB

The MMB has LED display or provides view for server maintenance or administration that the field engineer constructs the environment for testing and test program is executed. Therefore, it is necessary to reconfigure MMB from test environment to actual operating environment. Skip the steps for items already set by field engineer.

After MMB connection, implement following steps by using MMB Web-UI (Web User Interface).

- User account registration
- Security setting
- Time setting

Implement following procedure of connection and setting of MMB.

TABLE 3.1 Flow of connection and setting of MMB

Procedure	Item	Description	Refer to
1.	Connection of MMB console PC	Connect the MMB console PC to set up the environment for actual operation.	3.3.1 Connecting the MMB console PC
2.	Initial setting of MMB	Initialize MMB settings before setting up the connection environment for actual operation.	3.3.1 Connecting the MMB console PC
3.	Connection setting of actual operating environment	The MMB is set for a test connection. Set up the connection environment for actual operation.	0 Setting of Connection for Actual operating Environment
4.	Login to MMB	Log in to the MMB. There is also a description of the MMB Web-UI window for reference.	3.3.4 Login to MMB 3.3.5 Web-UI Window View
5.	Network setting of actual operation	The MMB is set for testing purposes, so configure the network and Web servers for actual operation. Make the required settings appropriate to your operation mode.	3.3.6 Network set up of MMB 3.3.7 Set up of telnet 3.3.8 Configuration of DNS server 3.3.9 Set up of Alarm E-Mail
6.	Various initial settings of MMB	Various initial settings of MMB are implemented. -Registration of user account. -System name setting -Date/ Time setting It is recommended to take the back up of information of the settings when the initial settings are completed. For details on the back-up of information which is set, see “3.7 Storage of the configuration information” .	3.3.10 Registration of User Account 3.3.11 Setting of System Name 3.3.12 Setting of Date and Time

Since all the screenshots in this manual are examples, depending on the configuration, these may differ from the actual screen displays.

3.3.1 Connecting the MMB console PC

This section describes the connection of the MMB and MMB console PC.

There are two methods of connecting MMB with MMB console PC.

- Connect the COM port of the MMB console PC and the External interface RS232C (COM port) of the MMB with RS232C cross cable.
- Connect the LAN port of the MMB console PC and the External interface MAINTENANCE LOCAL (LAN port) of the MMB with LAN cable.

Remark

- In PRIMEQUEST2400E/2800E/2800B, only way of RS232 (COM port) can be used.
- In PRIMEQUEST2400E3/2800E3/2800B3/2400E2/2800E2/2800B2, both ways can be used.

For the mounting location and external interface overview of the MMB, refer to the figure below.

FIGURE 3.1 External Views of Mounting Locations and External interface of MMB

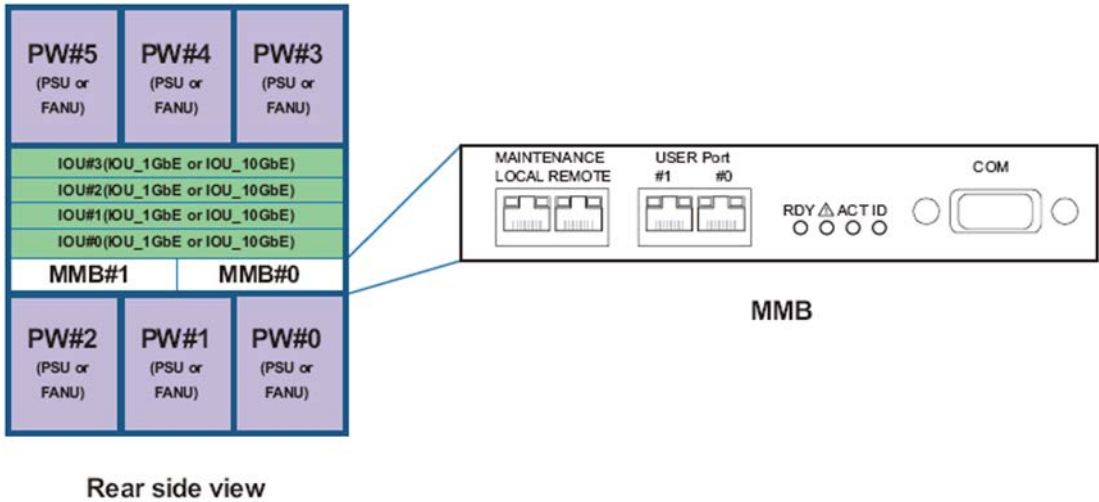


TABLE 3.2 External interface of MMB

External interface	Quantity	Remark
RS232C(COM Port)	1	Used by the field engineer when setting-up the device. It is not used in normal operations.
LAN 1000Base- T	2	User port
LAN 100Base-TX	2	Maintenance -[LOCAL] : CE Port -[REMOTE]: REMCS Port

Set the terminal software by using following contents, at the time of connecting COM port.

TABLE 3.3 contents of setting of terminal software

Setting item	Value
Bit/ second	19200
Data bit	8
Parity	No
Stop bit	1
Flow control	No
Emulation	VT100

Initial setting of MAINTENANCE LOCAL LAN port of MMB is below.

TABLE 3.4 contents of setting of terminal software

Setting item	Value
IP Address	192.168.1.1
Subnet Mask	255.255.255.0
Gateway address	0.0.0.0
SMTP address	0.0.0.0
Network Protocol	Telnet
Telnet Port#	23
Timeout(sec)	600

3.3.2 MMB Initialization

The procedure for the MMB initialization is described below.

If field engineer initialized the MMB, it is not necessary to implement following procedure.

Operations

1. Turn on the power supply of the main unit.
→ Alarm LED of each unit is turned on while MMB Ready LED is blinking (during initialization).
After MMB Ready LED turns from blinking to lighting, the login prompt is displayed.
2. Once MMB Ready LED is turned on (Initialization complete), confirm that the Alarm LED of each unit has been turned off.
3. Login to Administration by using terminal software from MMB console PC.
→ When you first log in, you will be asked to change the Administrator password.
4. Set the password.

Note

The password with eight more characters should be set.

Usable character codes are alphanumeric characters ([A-Z] [a-z] [0-9]) and the following symbols

! " # \$ % & ' () = . ^ _ { } : * ; + ? < . > , / _ |

If the entered password is invalid, re-setting of the password is requested.

For the detail of setting rule of password, see 1.4[User Administration] Menu' of PRIMEQUEST 2000 series Tool Reference (CA92344-0539).

5. Then set MMB network.

Remark

When IPv4 and IPv6 are operated both IPv4 and IPv6 are set.

- In case of IPv4

Set the IP Address by using the following commands.

```
# set hostname <FQDN type host name>
```

```
# set ip <IP Address> <netmask>
```

```
# set gateway <default gateway IP Address>
```

```
# set http enable
```

Example: In case of IP Address:192.168.0.10/ netmask:255.255.255.0/ gateway:192.168.0.1

```
Administrator > set ip 192.168.0.10 255.255.255.0
```

```
Administrator > set gateway 192.168.0.1
```

- In case of IPv6

Set IP Address by using following commands.

```
# set hostname <FQDN type host name>
```

```
# set ipv6 [auto | <IP Address/Prefix>]
```

```
# set gateway_ipv6 <default gateway IP Address>
```

```
# set http enable
```

Example: In case of IP Address=2001:2345:6789::10/ Prefix=64/ gateway=2001:2345:6789::1

```
Administrator > set ipv6 2001:2345:6789::10/64
```

```
Administrator > set gateway_ipv6 2001:2345:6789::1
```

6. Enable http by set http enable command.

Web-UI of MMB can be accessed from MMB console PC through LAN.

```
Administrator > set http enable
```

Remark

Use set https command to enable https.

```
Administrator > set https enable
```

7. Enable telnet by using set telnet enable command.

Remark

Only when connecting to the CLI port, this procedure is required.

```
Administrator > set telnet enable
```

8. Set date and time as required.

Use the following commands.

```
Administrator> set date MMDDhhmm[[CC]YY][,ss]
```

Example: To set 2013/7/27 as date and 13:10:00 as time

```
Administrator > set date 072713102013,00
```

3.3.3 Setting of Connection for Actual operating Environment

According to the following operations, set the connection environment for the actual operation.

- Set IP address of MMB console PC
- Connect MMB console PC to the User port of the MMB
- Connect external LAN of PRIMEQUEST 2000 series


Setting of IP address of MMB console PC

Set the IP address of the PC used as the MMB console. See the Manual of the PC to be used for the setting method.

Connection of MMB console PC to the user interface of the MMB

Connect the MMB console PC to the user port #0 of the MMB using LAN cable. Once it is connected, communication between MMB console PC and MMB is possible via LAN.


FIGURE 3.2 Location of MMB user port

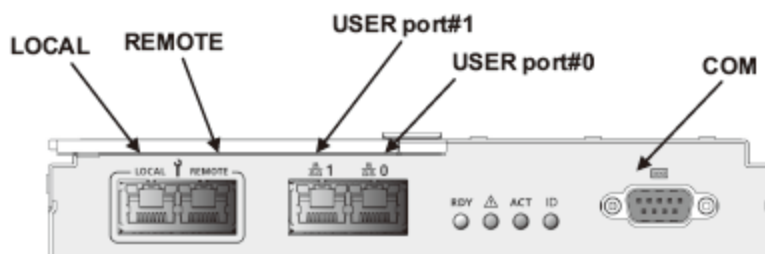

Connection of External LAN of PRIMEQUEST 2000 Series

Configuration of external LAN connection of PRIMEQUEST 2000 series and the notes for external LAN connection are described below. Connection to an external LAN is recommended after setting the security. For details on security, see [“6.5 Set up of security”](#).

FIGURE 3.3 Network Configuration and IP Address of Management LAN

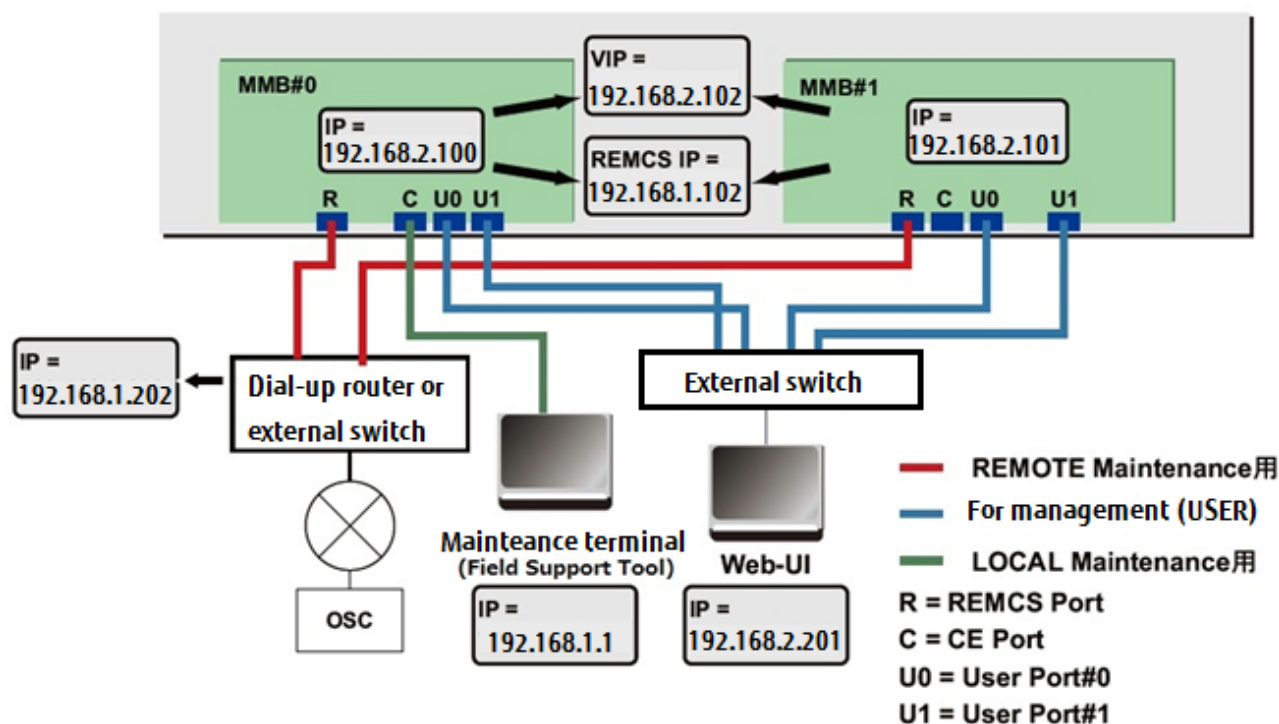

Ports for managing MMB#0 and MMB#1 are connected to the external switching hub device using a LAN cable. At the same time MMB console PC is also connected to the external switching hub device. Physical IP address and Virtual IP address of MMB#0 and MMB#1 are set in identical subnet.

- Physical IP Address (In the above figure, MMB#0=192.168.2.100, MMB#1=192.168.2.101)
- Virtual IP Address (In the above figure, 192.168.2.102)

For external connection (Web browser, Terminal for Maintenance, REMCS, etc.), communication is done by virtual IP address.

TABLE 3.5 Settings required for connecting external LAN

Conditions	Required settings
When using the switching hub which supports the circulatory prevention function (Spanning Tree Protocol or the domain Separation, etc.) in the external switch	Prevent circulatory prevention function to [disable] Spanning Tree Protocol of connection port of switching hub and the main unit or to set Domain Separation 'ON'.
When the data given below corresponds to any of the category- -Destination server becomes external server which is passed through the firewall. -Use a mail server which restricts the IP address.	It is necessary to set the firewall and mail server in such a way that physical IP address packets of MMB #0 and MMB#1 can pass through.
For REMCS connection	Connection format is as given below. - When connecting to internet: Connect REMCS port to the external switching hub. Or connect to the center by restricting the firewall from the external switch of the management port. - When connecting to P-P Connect each REMCS port of MMB of MMB#0 and MMB#1 to the Dial-up route directly. For details on REMCS linkage, see <i>PRIMEQUEST 2000 series REMCS Service Installation Manual (CA92344-0542)</i> .

Remark

- Packets are transmitted from MMB in “NTP”, “Alarm E-Mail”, and “REMCS”. When both the physical IP address and the virtual IP address of MMB are set, the transmission source IP address of packet is considered as the physical IP address of the MMB.
- Physical IP address of MMB is also used in PRIMECLUSTER linkage.

3.3.4 Login to MMB

The method of login to the MMB is described below.

Login/ Logout in MMB Web-UI

The procedure of Login/Logout for MMB Web-UI is described below. Specify any of the following to login to Web-UI.

- Virtual IP Address
- Fully Qualified Domain Name (FQDN) corresponding Virtual IP Address
- Hostname corresponding Virtual IP Address

Note

- MMB Web-UI supports the following browsers. **Note** that, if the browser other than this is used, Web UI window may not display correctly.
 - Internet Explorer 9 onwards
 - Firefox 20 onwards
- Do not multiple login by using Web-UI from one MMB console PC to PRIMEQUEST 2000 series (also includes multiple login with the same user name). If multiple login is done, the following phenomenon may occur by the types and version of a browser to be operated. Moreover, do not multiple login by using multiple tabs.
 - The operation authority of the user logged in previously with Web-UI might change to the operation authority of the user who logs in later.
 - When one Web-UI is logged out, all Web-UIs might be logged out.

Remark

To specify the FQDN, the DNS server should be set in the MMB console PC.

For details on DNS server setting, see [“3.3.8 Configuration of DNS server”](#).

● Login

1. Start the Web browser.

Remark

Enable JavaScript and download in the browser setting.

2. Enter next URL.

TABLE 3.6 URL to be entered for Login


Standard	http://nodename:adminport http://nodename:adminport/login.cgi (In case of Windows Server 2016, Windows Server 2012 R2, Windows Server 2012 and Windows Server 2008 R2)
SSL	https://nodename:adminport
Remark	Above-mentioned nodename: adminport is described in following format. Nodename: Hostname, FQDN or IP Address of MMB. adminport: port number assigned at the management port of the MMB (Default value is 8081 and 432 in case of SSL)

Note

When an https connection is established, a warning message appears because the certificate is not one from a third-party organization. Ignore it and continue establishing the connection.

3. Since MMB Web-UI login window is displayed, enter user account and password and click on [Login] button.

FIGURE 3.4 MMB Web-UI [Login] Window

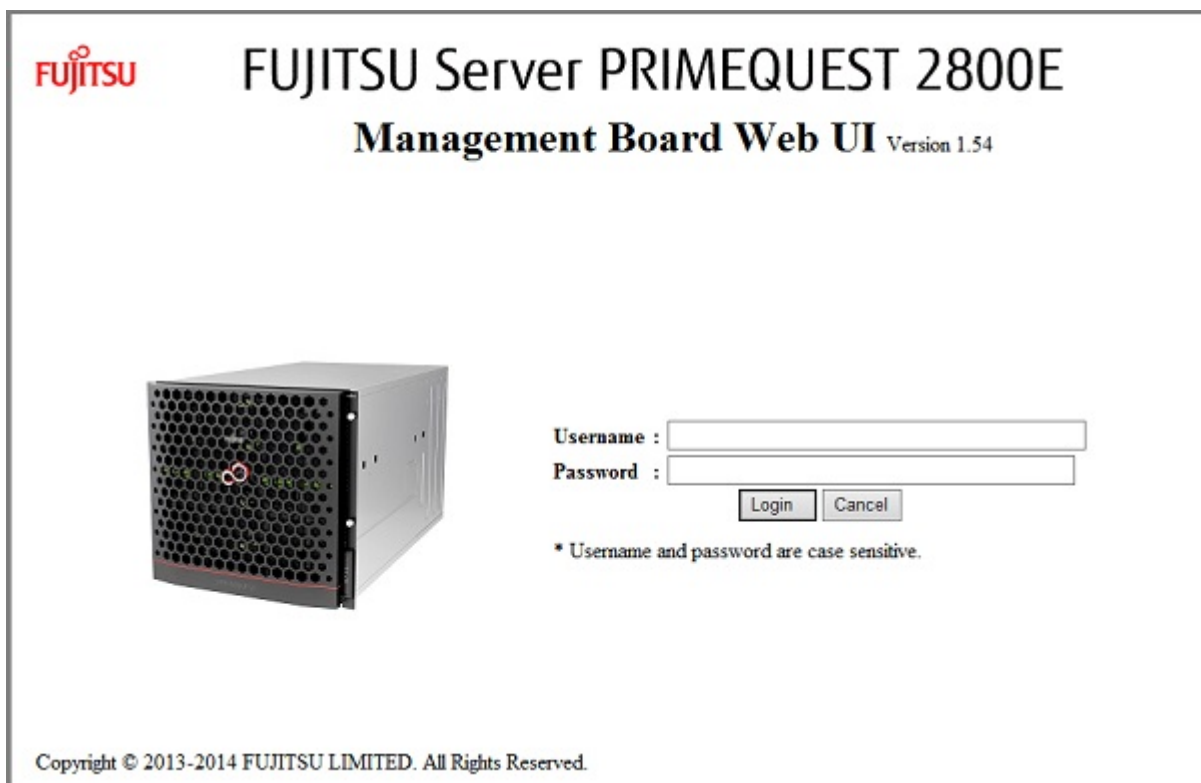

FUJITSU Server PRIMEQUEST 2800E
Management Board Web UI Version 1.54

Username :
Password :

* Username and password are case sensitive.

Copyright © 2013-2014 FUJITSU LIMITED. All Rights Reserved.

Remark

At the time of initial start-up and if the settings have not been changed, following default user account and password are applicable.

TABLE 3.7 Default user account/password

Username	Administrator
Password	Password set up by the field engineer when setting a device

• Logout

Click [Logout] on the Navigation Bar.

-> Log out from Web-UI.

3.3.5 Web-UI Window View

For details on Web-UI window view, see “Chapter 1 Web-UI Overview” of PRIMEQUEST 2000 Series User Interface Operating Instructions (CA92344-0538) .

Remark

When [Read Error] is displayed on Web-UI Window, confirm the contents by referring to “11.2Troubleshooting” of PRIMEQUEST 2000 series Administration Manual (CA92344-0537). In spite of referring to the manual, if the error cannot be resolved, recurs, contact repairs inquiry counter or a sales representative.

Before making contact, confirm the model name and serial number shown on the label on the device and communicate the same.

Basic operations in MMB Web-UI

The flow of basic operations is as follows.

1. The Menu is selected from Navigation Bar.
→ The Submenu of the selected menu is displayed in the submenu area.
2. The Menu is selected from the submenu.
→ The window corresponding to the selected menu is displayed in the content area.
3. Information displayed on the window is confirmed and set.
When [Apply] Button is clicked, the information is set.
When [Cancel] Button is clicked, the information returns to the previous status.

Note

When Internet Explorer is being used, if the display of dialog box for confirmation of process execution, or the display of dialog box or for notification of process completion exceeds 2 minute or more, its connection with MMB Web-UI is cut. In this case, login again to MMB Web-UI.

3.3.6 Network set up of MMB

MMB Network is set up. For the items already set at this time, confirm the setting contents. For the items not set, make the settings.

Following IP Addresses are set..

- Virtual IP Address used to access Web-UI.
- Physical IP Address assigned to the MMB interface.

See “[3.7 Storage of the configuration information](#)” for the backup of information which is set.

Note

- Set up of MMB Physical IP Address is not required, as long as MMB is not mounted at the installation location MMB#1, and PRIMECLUSTER linkage is not performed.

- Log in to 'Administrator privileges, to set up MMB network.
- When on [Network Interface] window, if [Apply] Button is clicked after changing [MMB#0 IP Address] or [MMB#1 IP Address]:

To reflect the settings, the network is temporarily stopped, and Web-UI is cut. It is possible to connect to Web-UI again by selecting Web-UI menu.

- When Virtual IP Address is changed:

Connection with MMB Web-UI is cut. Re-login is required when MMB Web-UI is to be used.

Remark

When Virtual IP Address is set up:

The Web browser has an access for the virtual IP address of PRIMEQUEST 2000 series. Therefore, the MMB Web-UI cannot be accessed by specifying the physical IP address of MMB#0, and MMB#1.

Terminal for maintenance and REMCS can access as against the IP address set in [Maintenance IP Address] of [Network Configuration]-[Network Interface].

Operations

1. Click [Network Configuration]-[Network Interface].
-> [Network Interface] screen is displayed. For details on [Network Interface] screen, see '1.5.2[Network Interface] Menu' of PRIMEQUEST 2000 series Tool Reference (CA92344-0539).

FIGURE 3.5 Example of [IPv4 Interface] Window

The screenshot displays the 'IPv4 Interface' configuration window. The top navigation bar includes 'System', 'Partition', 'User Administration', 'Network Configuration', and 'Maintenance'. The left sidebar lists various configuration options, with 'IPv4 Interface' selected. The main content area is titled 'IPv4 Interface' and includes a note: 'Click the Apply button for all changes to take effect.' The configuration is divided into several sections:

- Virtual IP Address:** Fields for Hostname (PRIMEQUEST), IP Address (xx.xxx.xxx.xxx), Subnet Mask (255.255.255.0), and Gateway address (xx.xx.xxx.1).
- MMB Virtual/Physical IP Address:** A section with radio buttons for 'Enable' and 'Disable' (selected). It includes fields for Hostname (optional), IP Address (0.0.0.0), Subnet Mask (255.255.255.255), and Gateway address (0.0.0.0).
- DNS (optional):** Radio buttons for 'Enable' and 'Disable' (selected). Fields for DNS Server 1, DNS Server 2, and DNS Server 3, all set to 0.0.0.0.
- Management LAN:** A section with radio buttons for 'Enable' and 'Disable' (selected).
- Dualization:** Radio buttons for 'Enable' and 'Disable' (selected).
- Maintenance IP Address:** Radio buttons for 'Enable' (selected) and 'Disable'. Fields for IP Address (192.168.1.1), Subnet Mask (255.255.255.0), Gateway address (0.0.0.0), and SMTP address (0.0.0.0).
- Internal IP Address:** Radio buttons for 'Enable' and 'Disable' (selected). Fields for IP Address (172.30.0.1) and Subnet Mask (255.255.255.0).

The window concludes with 'Apply' and 'Cancel' buttons.

FIGURE 3.6 Example of [IPv6 Interface] Window

2. The values are entered in [IP Address], [Subnet Mask] (*1) of [Virtual IP Address]. Host name is also set up.
*1: [Prefix Length] is entered at the time of [IPv6]. [Gateway address] is also entered at the time of [Gateway address].
3. Each item is entered by clicking [Enable] for [Interface] in [MMB#0 IP Address] or [MMB#1 IP Address]. Here specifies the assigned Physical IP Address.
4. [Apply] button is clicked when the required items are set up.

Notes

If an incorrect value of IP Address is set MMB Web-UI is not displayed. In that case, the correct value is set by connecting MMB console PC to the MMB COM port.

Remark

The Physical IP Address and the Virtual IP Address of MMB#0, and MMB#1 are set up in the same subnet.

3.3.7 Set up of telnet

MMB telnet is set up.

See “3.7 Storage of the configuration information” for the backup of set up information.

The following condition must be satisfied in advance when field engineers perform the Maintenance tasks on this product.

- Video Redirection and Virtual Media are available.

For details on how to setup the procedure, see Chapter 1.3.3 [Console Redirection Setup] window in the PRIMEQUEST 2000 Series Tool Reference (CA92344-0539).

- SSH or Telnet is available.

For details on how to setup the procedure, see Chapter 1.5.4 [Network Protocols] window in the PRIMEQUEST 2000 Series Tool Reference (CA92344-0539).

Note

To set up telnet, log in to Administrator privileges.

Operations

1. Click [Network Configuration]-[Network Protocols].
-> [Network Protocols] window is displayed. For details on [Network Protocols] window, see "1.5.4[Network Protocols] Window" of PRIMEQUEST 2000 series Tool Reference (CA92344-0539).

FIGURE 3.7 Example of [Network Protocols] Window

System Partition User Administration Network Configuration Maintenance Logout

>Network Configuration >Network Protocols

Network Protocols

Click the Apply Button to apply all changes.

Web (HTTP/HTTPS)

HTTP	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
HTTP Port#[80,1024-65535]	8081
HTTPS	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
HTTPS Port#[432,443,1024-65535]	432
TLS1.0/1.1	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Timeout (sec) [0,60-9999]	600

Telnet

Telnet	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Telnet Port#[23,1024-65535]	23
Timeout (sec) [0,60-9999]	600

SSH

SSH	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
SSH Port#[22,1024-65535]	22
Timeout (sec) [0,60-9999]	600

SNMP

SNMP Agent	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Agent Port#[161,1024-65535]	161
SNMP Trap	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Trap Port#[162,1024-65535]	162

Apply Cancel

2. Items of [Telnet] are set.

Note

MMB uses the following fixed port number of TCP/IP. Do not change the following port numbers.

- 623/udp: For RMCP communication
- 664/udp: For RMCP communication

3. Click [Apply] button.

3.3.8 Configuration of DNS server

Only when using a DNS server, set up DNS server.

For the backup of set up information, see “3.7 Storage of the configuration information”.

Note

Log in to Administrator privileges to set up the above-mentioned items.

Operations

1. Click [Network Configuration]-[Network Interface]. Select [IPv4 Interface] or [IPv6 Interface].
-> [IPv4 Interface] or [IPv6 Interface] window is displayed. For details on [IPv4 Interface] or [IPv6 Interface] window, see “1.5.2 [Network Interface] Menu” of PRIMEQUEST 2000 series Tool Reference (CA92344-0539).

FIGURE 3.8 Example of [IPv4 Interface] Window

The screenshot displays the 'IPv4 Interface' configuration window. The top navigation bar includes 'System', 'Partition', 'User Administration', 'Network Configuration', and 'Maintenance'. The sidebar menu on the left lists various system settings, with 'Network Interface' and its sub-items 'IPv4 Interface' and 'IPv6 Interface' highlighted. The main content area is titled 'IPv4 Interface' and includes a 'Help' button. Below the title, a message states: 'Click the Apply button for all changes to take effect.'

The configuration is organized into several sections:

- MMB Virtual/Physical IP Address:**
 - Virtual IP Address:** Fields for Hostname (PRIMEQUEST), IP Address (xx.xxx.xxx.xxx), Subnet Mask (255.255.255.0), and Gateway address (xx.xx.xxx.1).
 - MMB#0 IP Address:** Includes an 'Interface' section with 'Enable' and 'Disable' radio buttons (currently 'Disable' is selected), and fields for Hostname (optional), IP Address (0.0.0.0), Subnet Mask (255.255.255.255), and Gateway address (0.0.0.0).
 - DNS (optional):** Includes 'Enable' and 'Disable' radio buttons (currently 'Disable' is selected), and fields for DNS Server 1, DNS Server 2, and DNS Server 3, all set to 0.0.0.0.
 - Management LAN:** Includes an 'Dualization' section with 'Enable' and 'Disable' radio buttons (currently 'Disable' is selected).
- Maintenance IP Address:** Includes an 'Interface' section with 'Enable' and 'Disable' radio buttons (currently 'Enable' is selected), and fields for IP Address (192.168.1.1), Subnet Mask (255.255.255.0), Gateway address (0.0.0.0), and SMTP address (0.0.0.0).
- Internal IP Address:** Includes an 'Interface' section with 'Enable' and 'Disable' radio buttons (currently 'Disable' is selected), and fields for IP Address (172.30.0.1) and Subnet Mask (255.255.255.0).

At the bottom right, there are 'Apply' and 'Cancel' buttons.

FIGURE 3.9 Example of [IPv6 Interface] Window

IPv6 Interface

Click the Apply button for all changes to take effect.

MMB Virtual/Physical IP Address

Virtual IP Address	
Hostname	PRIMEQUEST
Automatic Acquisition	Auto
IP Address	::
Prefix Length	0
Gateway address	::
MMB#0 IP Address	
Interface	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
Hostname (optional)	
Automatic Acquisition	Auto
IP Address	::
Prefix Length	0
Gateway address	::
DNS (optional)	
DNS	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
DNS Server 1	::
DNS Server 2	::
DNS Server 3	::
Management LAN	
Dualization	<input type="radio"/> Enable <input checked="" type="radio"/> Disable

Maintenance IP Address

Interface	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
IP Address	::
Prefix Length	0
Gateway address	::
SMTP address	

Apply Cancel

2. Click [Enable] of [DNS] in [DNS (optional)], then each item is entered.
3. Click [Apply] button after setting the required items.

3.3.9 Set up of Alarm E-Mail

Set up the following for Alarm E-Mail.

- Whether to notify through E-Mail, when an error occurs during operation.
- Error level and notification destination at the time of notifying.

For the backup of the set up information, see “3.7 Storage of the configuration information”.

Note

To set up the above mentioned items, log in to Administrator privileges.

Operations

1. Click [Network Configuration]-[Alarm E-Mail].
-> [Alarm E-Mail] window is displayed. For details on [Alarm E-Mail] Window, see “1.5.11 [Alarm E-Mail] window” of PRIMEQUEST 2000 series Tool Reference (CA92344-0539).

FIGURE 3.10 Example of [Alarm E-Mail] Window

2. Enter required items.

Remark

When transmitting [Alarm E-Mail], [From] address to be transmitted to SMTP server is as follows.

- When [Use envelope “from” address] checkbox is on
The address set up in [From] of [Alarm E-Mail] window becomes [From] address to be transmitted to SMTP server.
 - When [Use envelope “from” address] checkbox is off (initial set up)
Following [From] address is transmitted to SMTP server according to the format of [Hostname], set up in [Virtual IP Address]-[Hostname] in [Network Configuration]-[Network Interface] window.
 - In FQDN format: root@[Hostname]
 - Except in FQDN format: root@localdomain.localdomain
- Mail address set up in [From], is used as [From] address of the mail to be transmitted to mail receiver ([To]).

- When FQDN is specified in SMTP Server name, DNS Server needs to be set up. DNS Server can be set up from [Network Configuration]-[Network Interface].
- 3. The operation button is clicked depending upon the purpose.
 - When the condition for transmission of mail is set up: [Filter] Button
 - When the settings are to be enabled: [Apply] Button
 - During Test transmission: [Test E-Mail] Button

Setting the conditions for transmission of mail

1. To set the conditions for transmitting the mail, click [Filter] button on [Alarm E-Mail] window.

FIGURE 3.11 Example of [Alarm E-Mail Filtering Condition] Window

1. Select required items. When multiple items are selected, each item is AND condition, when multiple options are selected in each item, it is OR condition.
2. Click [Apply] Button.

3.3.10 Registration of User Account

As an initial set up, user accounts of the required number are registered. The number of maximum registration is 16.
Refer “3.7 Storage of the configuration information” for the backup of set up information.

Operations

- 1. Click [User Administration] [User List].
-> [User List] window is displayed. For details on [User List] window, see “1.4.1[User List] Window” of PRIMEQUEST 2000 series Tool Reference (CA92344-0539)

FIGURE 3.12 Example of [User List] Window



- 2. Click [Add User] button.
-> [Add User] window is displayed. For details on [Add User] window, see “■[Add User] Window” of “1.4.1[User List] Window” of PRIMEQUEST 2000 series Tool Reference (CA92344-0539).

FIGURE 3.13 Example of [Add User] Window

System Partition **User Administration** Network Configuration Maintenance Logout

>User Administration >User List >Add User

User List Change Password Who

Add User

Click the Apply Button to apply all changes.

User Name:

Password:

Confirm Password:

Privilege: ☒ Admin ☐ Operator ☐ User ☐ CE ☐ Partition Operator

Status: ☒ Enabled ☐ Disabled

Full Name: (optional)

Operable Partition (for Partition Operator):

0	1	2	3	4	5	6	7	8	9	10	11
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Apply Cancel

Remark

In case of changing the user count, click the [Edit User] button on the [User List] and change the recorded contents on the [Edit User] window. For details of [Edit User] Window, see “■ [Edit User] Window” of “1.4.1 [User List] Window” of PRIMEQUEST 2000 series Tool Reference (CA92344-0539).

FIGURE 3.14 Example of [Edit User] Window

System Partition **User Administration** Network Configuration Maintenance Logout

>User Administration >User List >Edit User

User List Change Password Who

Edit User

Click the Apply Button to apply all changes.

User Name: Administrator

Current Password:

Password:

Confirm Password:

Privilege: ☒ Admin ☐ Operator ☐ User ☐ CE ☐ Partition Operator

Status: ☒ Enabled ☐ Disabled

Full Name: Default Administrator (optional)

Operable Partition (for Partition Operator):

0	1	2	3	4	5	6	7	8	9	10	11
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Apply Cancel

3. Input the required items.
4. Click [Apply] button.

3.3.11 Setting of System Name

Sets the name for system of PRIMEQUEST 2000 series. This name is used as SNMP [System Name].

For the backup of the set information, see “3.7 Storage of the configuration information”.

Operations

1. Click [System] - [System Information]
-> [System Information] window is displayed.
For details on [System Information] window, see “1.2.5 [System Information] Window” of PRIMEQUEST 2000 series Tool Reference (CA92344-0539).

FIGURE 3.15 [System Information] Window Example

System Information	
System Name	PRIMEQUEST
Product Name	PRIMEQUEST 2800E2
Part Number	MCXXXXXX
Serial Number	YYYYYYYY
Asset Tag	

2. Enter [System Name].
3. Click [Apply] button.

3.3.12 Setting of Date and Time


The date, time and NTP (In case of NTP server) of the MMB is set
However, occasionally it is already set by the field engineer. If it is already set by the field engineer and if it is not required to be changed, go to the next setting.
For the backup of the set information, see“3.7 Storage of the configuration information”.

Remark
MMB provides NTP client function. The NTP client function of MMB adjusts the time on the basis of another NTP Server.
For a stable NTP operation, specify multiple NTP Servers from each NTP client (In case of RHEL more than three servers are recommended).

Operations of [Date/ Time] window

- 1. Click [Network Configuration] - [Date/Time].
-> [Date /Time] window is displayed. For details on [Date /Time] window, see “1.5.1 [Date/Time] window” of PRIMEQUEST 2000 series Tool Reference (CA92344-0539).

FIGURE 3.16 [Date/ Time] Window Example

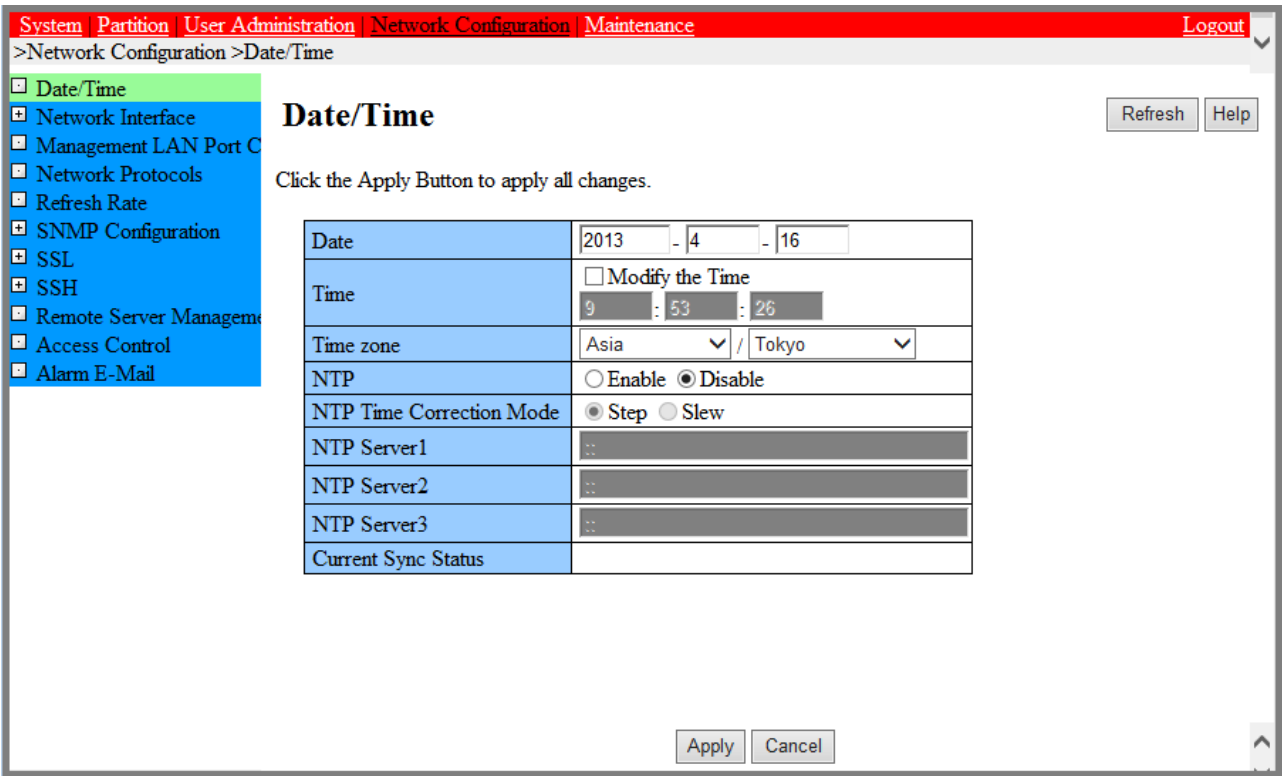


- 2. Input required items.
- 3. Click [Apply] Button.

Operations of [Management LAN Port Configuration]

1. Click [Network Configuration] - [Management LAN Port Configuration].
-> [Management LAN Port Configuration] window is displayed. For details of [Management LAN Port Configuration] window, see “1.5.3 [Management LAN Port Configuration] window” of PRIMEQUEST 2000 series Tool Reference (CA92344-0539).

FIGURE 3.17 [Management LAN Port Configuration] Windows Example

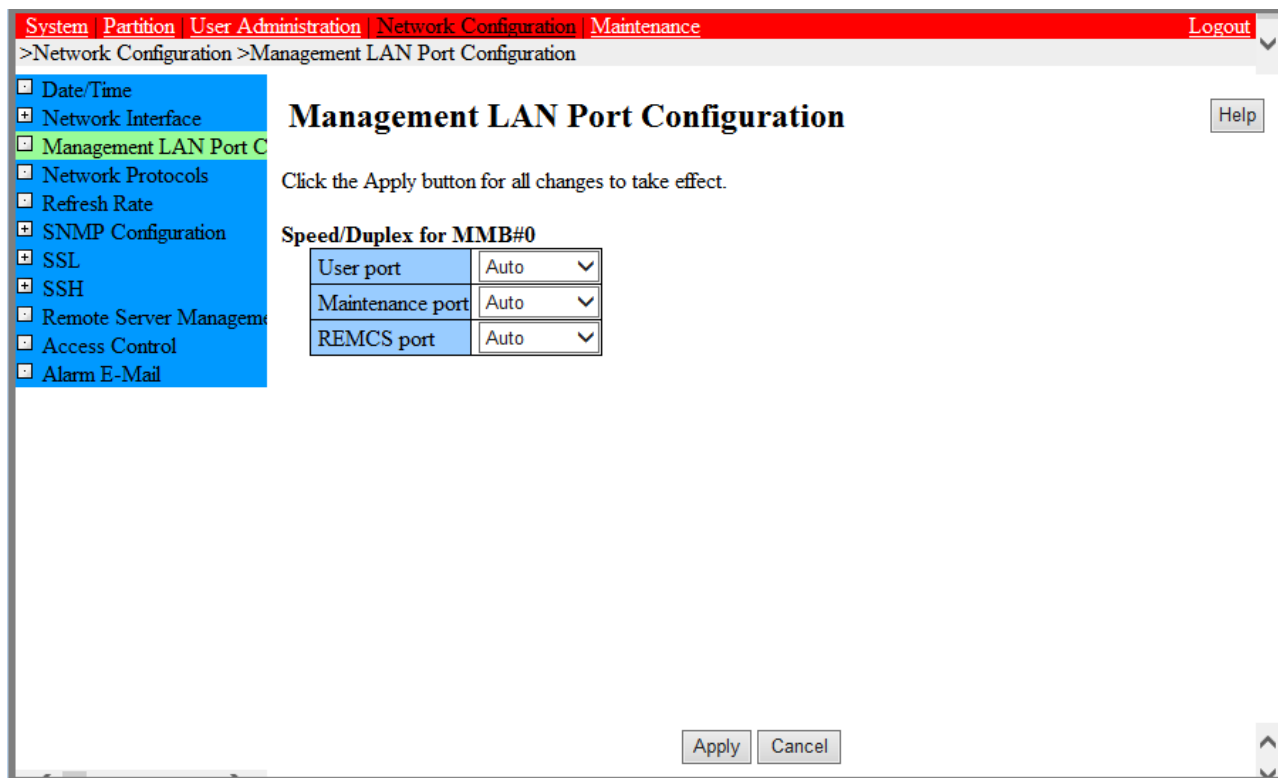

2. Enter required items.
3. Click [Apply] Button.

3.4 Partition Configuration (Physical Partition)

This section describes partition configuration. PRIMEQUEST 2400E3, 2800E3, 2400E2, 2800E2, 2400E and 2800E are available for these functions. Power off, power on for every partition is required to reflect the configuration change of partition. All screenshots are display examples. The displayed contents differ according to the system configuration.

3.4.1 Setting the partition configuration

This section describes addition and removal of operations of SB/Memory Scale-up Board and IOU.


Adding of SB/Memory Scale-up Board/IOU

SB/Memory Scale-up Board and IOU can be added to the partition.

Operations

1. Click [Partition] - [Partition Configuration]
-> [Partition Configuration] window is displayed. For details of [Partition Configuration] window, see “1.3.4 Partition Configuration] window” of PRIMEQUEST 2000 series Tool Reference (CA92344-0539).


FIGURE 3.18 [Partition Configuration] Window Example (PRIMEQUEST 2800E3/2800E2/2800E)

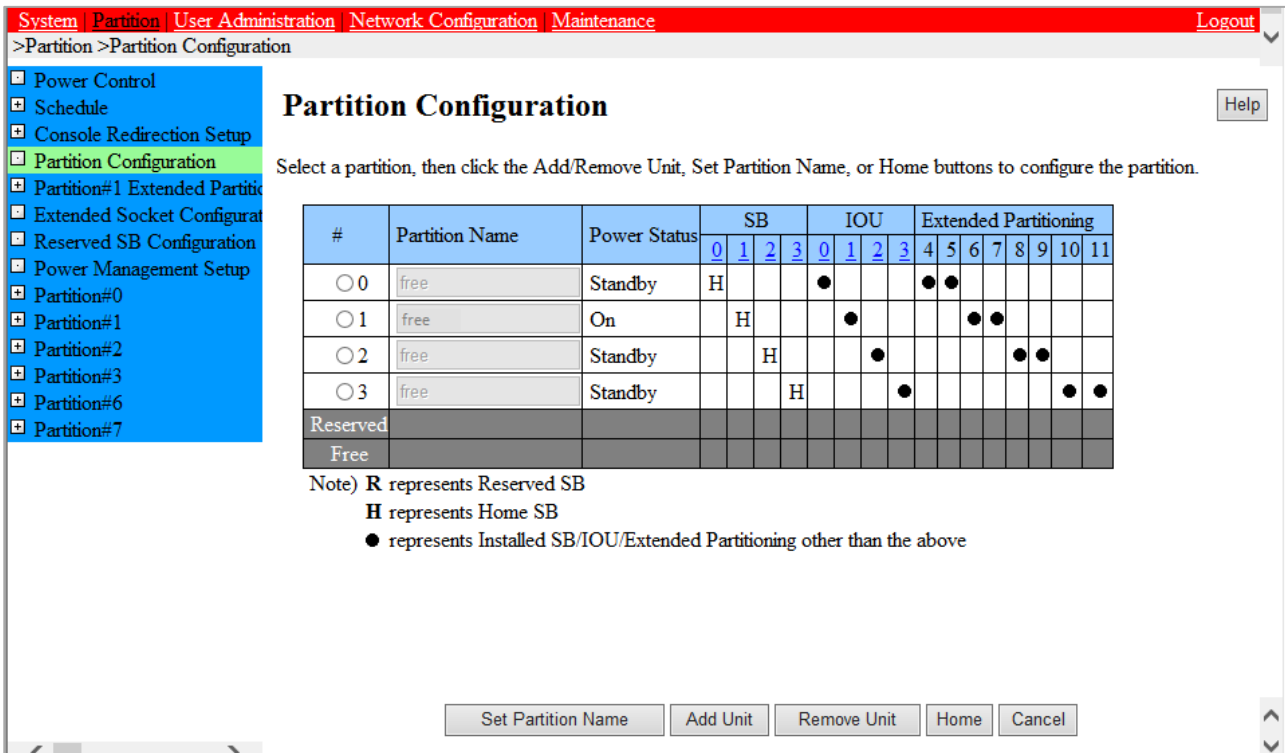

2. Click the radio button of partition where SB/Memory Scale-up Board or IOU need to be added to.
Memory Scale-up Board is shown as “SB” in [Partition Configuration] window.
3. Click [Add Unit] Button.
-> [Add SB/IOU to Partition] window is displayed. Free SB/Memory Scale-up Board and IOU are displayed in the list.

For details of [Add SB/IOU to Partition] window, see “■ [Add SB/IOU to Partition] window] of “1.3.4 [Partition Configuration] window” of PRIMEQUEST 2000 series Tool Reference (CA92344-0539).

FIGURE 3.19 Example of [Add SB/IOU to Partition] Window

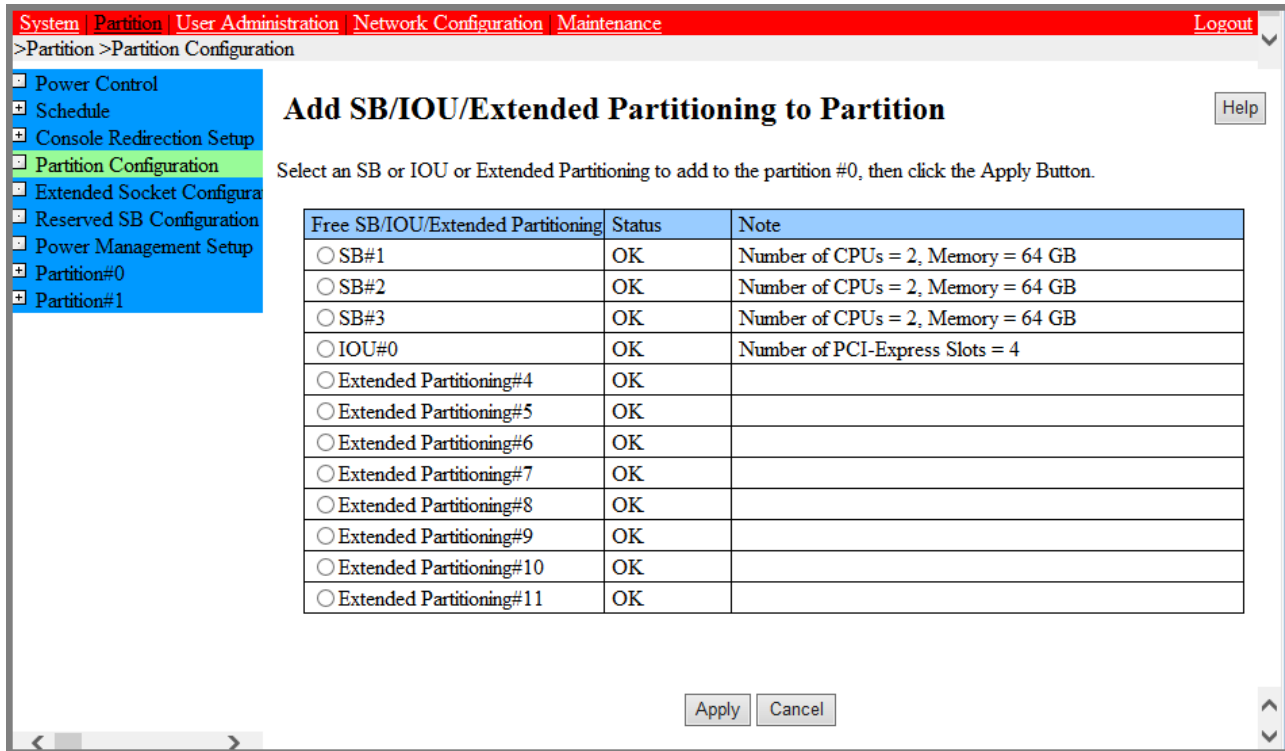

4. Click the radio button of one SB/Memory Scale-up Board or one IOU to add it to the partition.
 5. Only one SB/Memory Scale-up Board or one IOU can be selected by one operation.
 6. Click the [Apply] button.
-> Confirmation dialogue box is displayed.
 7. Click [OK] button.
-> The selected one SB/Memory Scale-up Board or one IOU is added to the partition.
- Repeat procedure 2~6 until you have added all the required SBs/Memory Scale-up Boards or IOUs.

Removing of SB/Memory Scale-up Board and IOU

This section describes the method of removing the SB/Memory Scale-up Board or IOU from the partition.


Remark

You cannot remove an SB/Memory Scale-up Board or IOU while the operating system on the target partition is running. Remove the SB/Memory Scale-up Board or IOU while the partition is in the POWER OFF status.

Operations


- 1. Click [Partition] - [Partition Configuration]
-> [Partition Configuration] window is displayed. For details of [Partition Configuration] window, see “1.3.4 Partition Configuration] window” of PRIMEQUEST 2000 series Tool Reference (CA92344-0539).

FIGURE 3.20 [Partition Configuration] Window Example

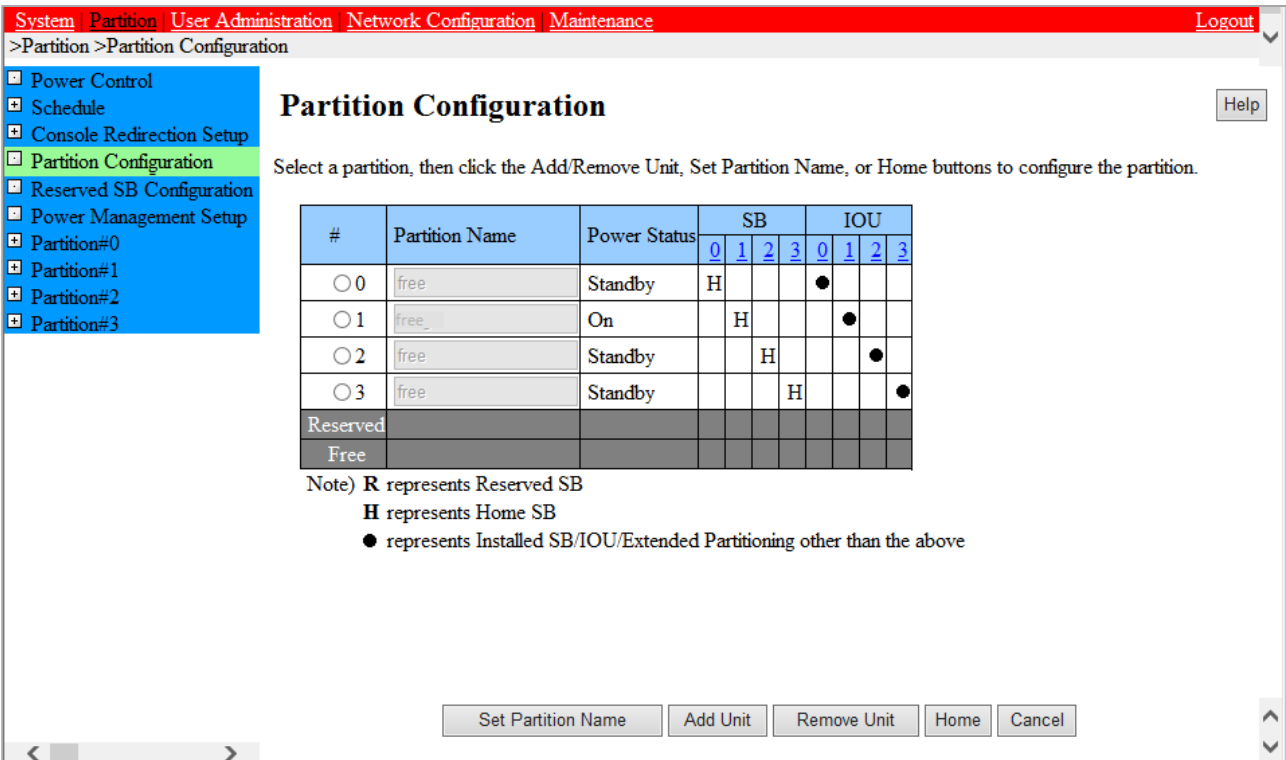

- 2. Click the radio button of the partition number from which the SB/Memory Scale-up Board /IOU has to be removed. Memory Scale-up Board is shown as “SB” in [Partition Configuration] window.
- 3. Click the [Remove Unit] button.
→[Remove SB/IOU from Partition] window is displayed. SB/Memory Scale-up Board and IOU are displayed in the list. The SB/Memory Scale-up Board and IOU are incorporated in the partition that is selected by procedure 2. For details of [Remove SB/IOU from Partition] window, see “■[[Remove SB/IOU from Partition] window] of “1.3.4 [Partition Configuration] window” of PRIMEQUEST 2000 series Tool Reference (CA92344-0539).

FIGURE 3.21 Example of [Remove SB/IOU from Partition] Window

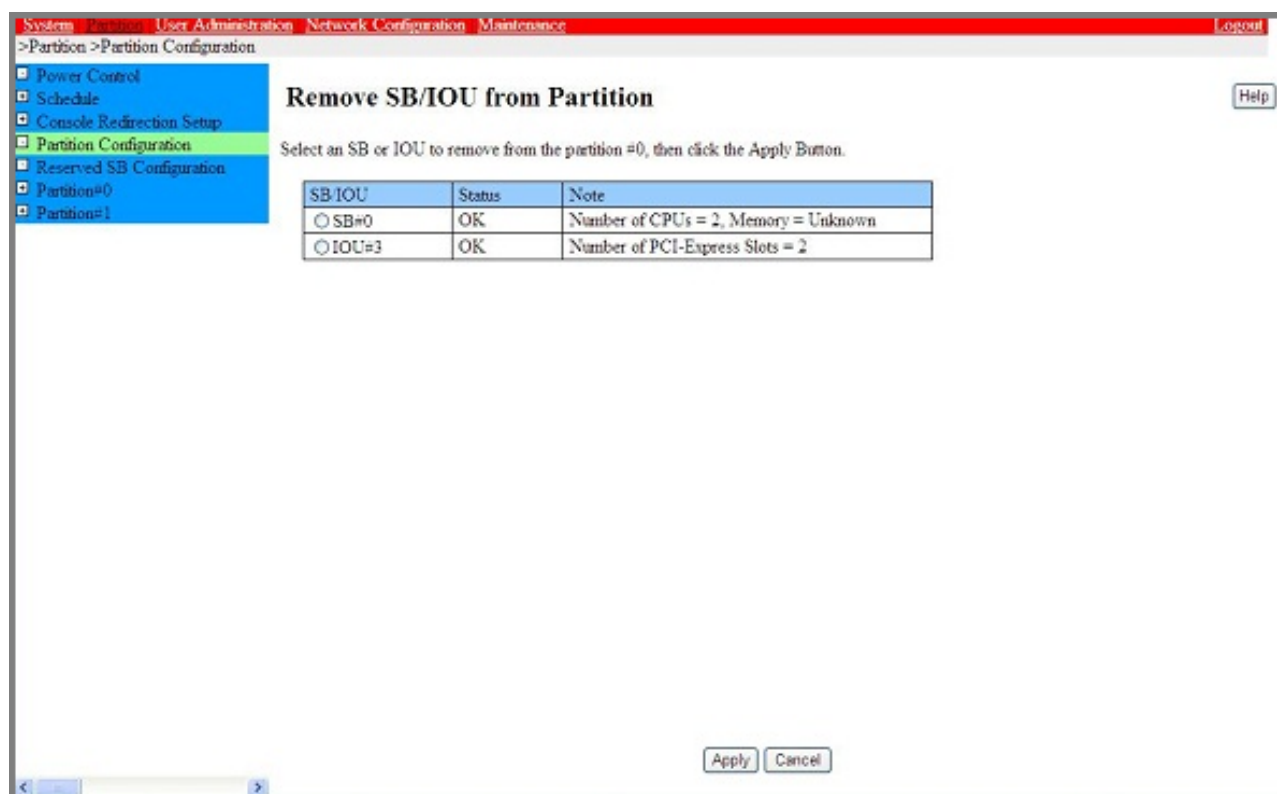

4. Click the radio button of one SB/Memory Scale-up Board or one IOU which is to be removed from the partition.
→ Only one SB/Memory Scale-up Board or one IOU can be selected by one operation.
5. Click the [Apply] button.
→ A confirmation dialogue box is displayed.
6. Click [OK] button.
→ The selected one SB/Memory Scale-up Board or one IOU is removed from the partition and is free.

3.4.2 Setting the Home SB

One SB in each partition is set as the Home SB. The SB that is initially added in every partition is automatically set as Home SB.

Moreover when Home SB is removed, the SB having the smallest number among the SB that configures the partition and which is not degraded is automatically set as Home SB. In Home SB, the USB port and the VGA port can be used as external connectors. When the Home SB has to be changed, it is specified by Web-UI. For details of Home SB, see “5.9 Home SB” of PRIMEQUEST 2000 series General Description (CA92344-0534).

Remark

The Windows license needs to be verified depending on the integration of the SB and the enable kit. For details, see “License verification based on the integration of SB and enabling kit” of “3.4 component expansion” of PRIMEQUEST 2000 series Administration Manual (CA92344-0537).

Memory Scale-up Board cannot be Home SB.

Operations


1. Click [Partition] - [Partition Configuration] - [Home]
-> [Partition Home] window is displayed. For details of [Partition Home] window, see “■[Partition Home] window” of “1.3.4 [Partition Configuration] window” of PRIMEQUEST 2000 series Tool Reference (CA92344-0539)

Remark

If there is more than one partition, select the partition by checking to radio button in [Partition Configuration] window.

2. Selecting an SB as the Home SB for the partition.

FIGURE 3.22 Example of [Partition Home] Window

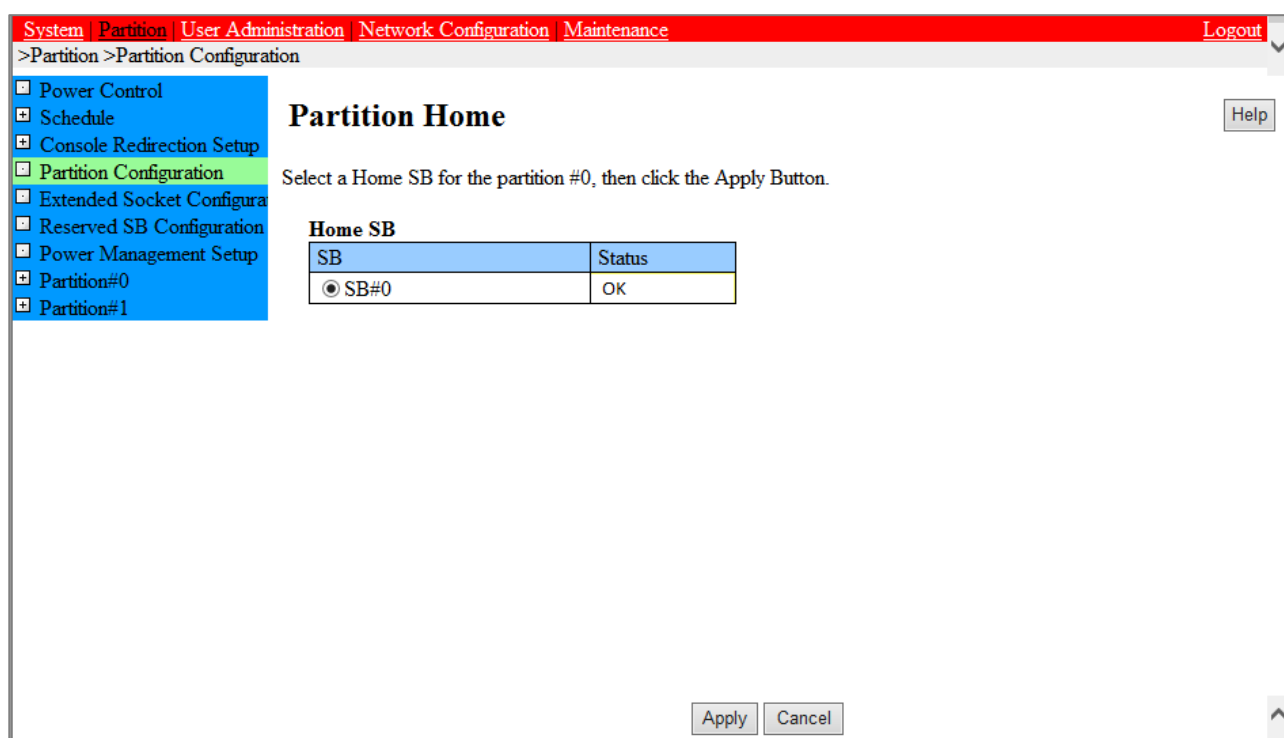

3. Click the radio button for the selected Home SB.

Remark

As long as SB is set as Home SB it is grayed out, even if it is not mounted. The radio button in the row which is shown grayed out can be changed to the radio button on the row which is not grayed out. Once the radio button is not grayed out, the original radio button cannot be selected again.

4. Click [Apply] button.
-> A confirmation dialogue box is displayed.

Note.

At the time of clicking the [Apply] button, if the power supply for the partition has been turned on, Home cannot be changed. A warning dialogue box is displayed.

5. Click [OK] button to continue the process, click [Cancel] button to cancel the process.
→Returns to [Partition Configuration] window.

3.4.3 Setting of Reserved SB

If hardware failure occurs in the SB which is added in the partition and it may be necessary to remove the SB. Reserved SB is an SB which is newly added in the partition instead of removal of SB.

To configure Reserved SB in partition, following points should be considered. SB which is not added in the specified partition can be defined as Reserved SB.

The following SB is not added in the partition.

- SB in free status
- SB added in other partitions
- SB defined in Reserved SB of other partitions

For details of Reserved SB, see “3.2.3 Reserved SB” of PRIMEQUEST 2000 series Administration Manual (CA92344-0537).

Remark

Flexible I/O mode configuration is required to implement the Reserved SB.

Windows license verification is required depending on the combination of SB and enables kit. For details “■Activation depending on the combination of SB and enable kit” of “3.4 Component extension” of PRIMEQUEST 2000 Series Administration Manual (CA92344-0537).

Operations

1. Click [Partition]-[Reserved SB Configuration]
→ [Reserved SB Configuration] window is displayed. Check box is displayed vertically in the free status SB column or the column of SB which is defined as Reserved SB. For details of [Reserved SB Configuration] window, see “1.3.7 [Reserved SB Configuration] window” of PRIMEQUEST 2000 series Tool Reference (CA92344-0539).

FIGURE 3.23 Example of [Reserved SB Configuration] Window

#	Partition Name	Power Status	Mirror Mode (setting)	SB			
				0	1	2	3
0	free	Standby	Disable	●	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
1	free	Standby	Disable	<input type="checkbox"/>	●	<input type="checkbox"/>	<input type="checkbox"/>
2	free	Standby	Disable	<input type="checkbox"/>	<input type="checkbox"/>	●	<input type="checkbox"/>
3	okamoto	Standby	Disable	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	●
Reserved							
Free							

2. Check the checkbox of the partition to be reserved in SB column.

3. Click [Apply] button.

Remark

Uncheck the checkbox on [Reserved SB Configuration] window to free the reserved SB.

Reserved SB configuration conditions

Reserved SB has following conditions.

- Memory Scale-up Board cannot set as Reserved SB of SB/Memory Scale-up Board.
- SB cannot set as Reserved SB of Memory Scale-up Board.
- Reserved SB can set to the partition including Memory Scale-up Board. In that case, the reserved SB works as SB in the partition, but it does not work as Memory Scale-up Board in the partition.
- An SB installed with 32GB DIMM cannot be configured as Reserved SB of the partition, which is configured on the SB installed with memory having various capacities (8GB, 16GB, 64GB, 128GB DIMM).
- An SB with 64GB DIMM cannot be configured as a Reserved SB of the partition which is configured on the SB installed with memory having various capacities (8GB, 16GB, 32GB, 128GB DIMM).
- An SB with 128GB DIMM cannot be configured as a Reserved SB of the partition which is configured on the SB installed with memory having various capacities (8GB, 16GB, 32GB, 64GB DIMM).
- Reserved SB cannot be configured in the partition that uses TPM functions.

If the above mentioned mounting conditions are not fulfilled, a message dialogue box of "Unable to register the specified SB#x as a Reserved SB due to the home SB is TPM enabled." would be displayed and the Reserved SB configuration would be prevented.

Memory Operation Mode may be changed after switch over of faulty SB to Reserved SB if:

- Reserved SB is configured for partition of one SB, and
- The Reserved SB does not fulfill requirements for Memory Operation Mode

In that case, a confirmation dialogue box of "The DIMM does not satisfy requirements of the Mirror Mode. If you register the specified SB as a Reserved SB, the Mirror Mode will be disabled when switching to specified SB. Are you sure to continue?[Y/N]" would be displayed when configuring the Reserved SB. Reserved SB for partition of multiple SB must follows conditions below. This is applicable for PRIMEQUEST 2800E3/2800E2/2800E.

- Mount two CPUs for Reserved SB of the partition.
- Reserved SB fulfills Memory Operation Mode requirements same as switching source partition.
- Mount the same type of CPU with the SB that configures partition for Reserved SB.

If the above mounting conditions are not fulfilled, a message dialogue box of "Unable to register the specified SB#x as a Reserved SB because the DIMM does not satisfy requirements of Mirror Mode." is displayed and Reserved SB configuration would be prevented.

Points to be considered for Windows

When switching to Reserved SB in the partition operating on Windows, Windows operating system is not activated at the time of initial start-up after switching to Reserved SB.

Configure the Reserved SB in partition operated by Windows so that Windows can be configured automatically.

For configuration details, see "11.4.3 Settings of Dump environment (Windows)" of PRIMEQUEST 2000 series Administration Manual (CA92344-0537). Turn on the [Start-up automatically] check box of [Start-up and recover] dialogue box.

Consider the time required for reactivation, when the operation is stopped during SB failure resulting from the above mentioned reasons.

Total two times are required for reactivation at the time of initial start-up and switching to Reserved SB.

However, if below mentioned prevention procedure is executed, reactivation request can be controlled.

Windows re-start prevention procedure

The request of reactivation can be controlled by recognizing Reserved SB to the PRIMEQUEST 2000 series in advance. Execute the following procedures for all Windows partitions.

If this prevention procedure is executed, reactivation is not demanded, when switched to Reserved SB due to SB failure.

1. Shut down the partition after completing Windows installation.
2. One SB is removed from the partition by using MMB Web-UI. When multiple SBs are installed, any one out of them can be removed.
3. Add SB for Reserved SB to the partition.
For details, see "Built in SB and IOU" of ["3.4.1 Setting the partition configuration"](#).
4. Turn on the power supply of partition and start the Windows.
5. Login by Administrator privileges'. Reactivate according to the instructions, if the message requesting the reactivation is displayed.
6. Shut down after Windows is reactivated.
7. Remove the SB for Reserved SB, which was added in procedure 3, from the partition by using MMB Web-UI.
8. Add SB removed from procedure 2 to the partition.

Points to be considered for VMware

When switched to Reserved SB by the partition wherein ESX is in operation, the guest operating system may not be activated at the time of the initial start after switching to the Reserved SB.

Set the items of automatic activation of guest operating system and Blue Screen Timeout while configuring the Reserved SB in the partition wherein ESX is in operation.

For example, to reset the items 20 seconds after a panic occurs in the ESX host, set "20" to Blue Screen Timeout.

Remark


If items are not reset, when ESX host becomes panic, set "0" to Blue Screen Timeout.

Setting method of Blue Screen Timeout from vSphere Web Client

1. Click the host and open [Configure] tab on vSphere Web Client.
2. Click [Advanced System Settings] in [System] column.


3. Click [Edit] button on the right side of [Advanced System Settings] page.

FIGURE 3.24 Setting of BlueScreenTimeout ([Configure] tab)

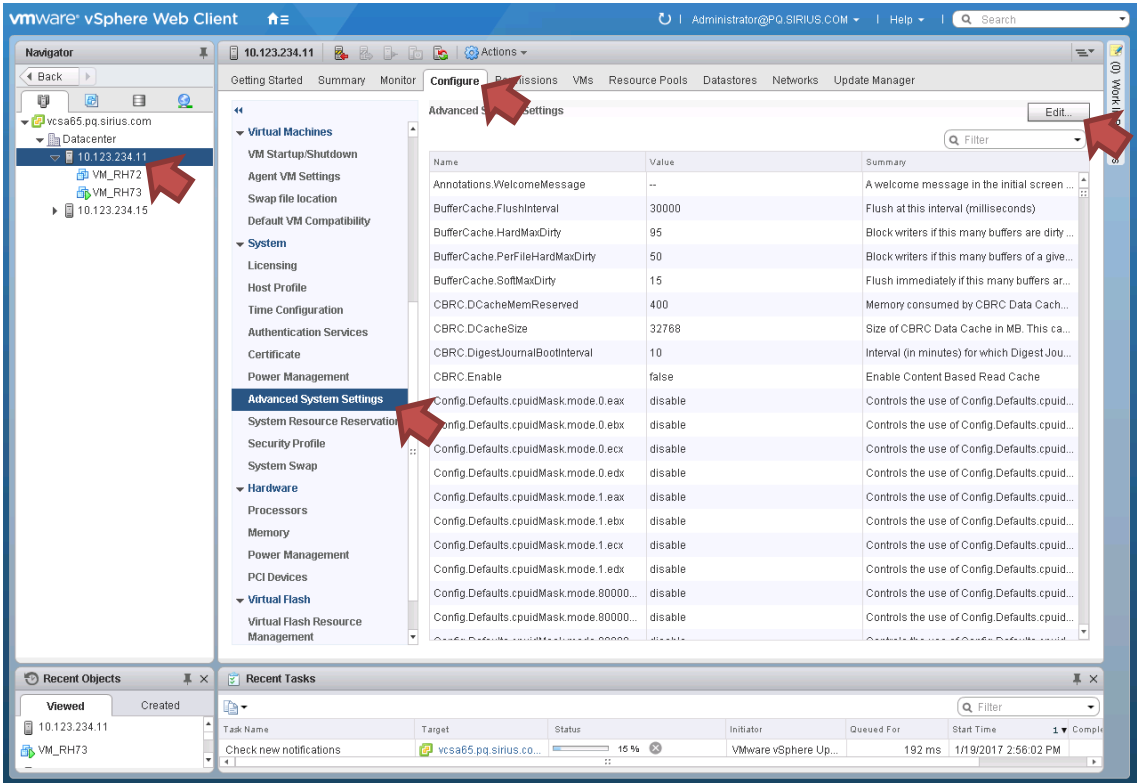


- 4. Edit screen of [Edit Advanced System Settings] appears. Enter 'BlueScreenTimeout' in the filter on the right side and search.

FIGURE 3.25 Setting of BlueScreenTimeout (Edit screen of [Edit Advanced System Settings])

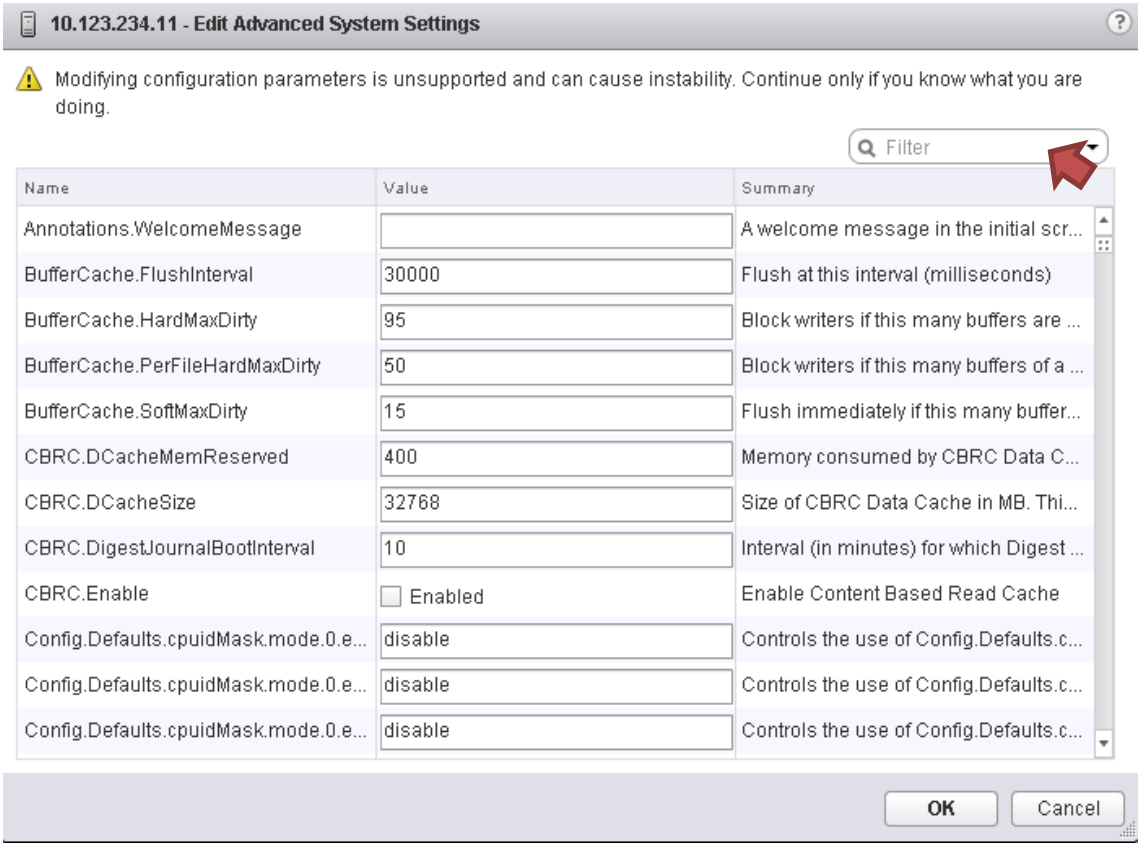

- 5. Set the Misc.BlueScreenTimeout value.


FIGURE 3.26 Setting of BlueScreenTimeout (After searching BlueScreenTimeout)

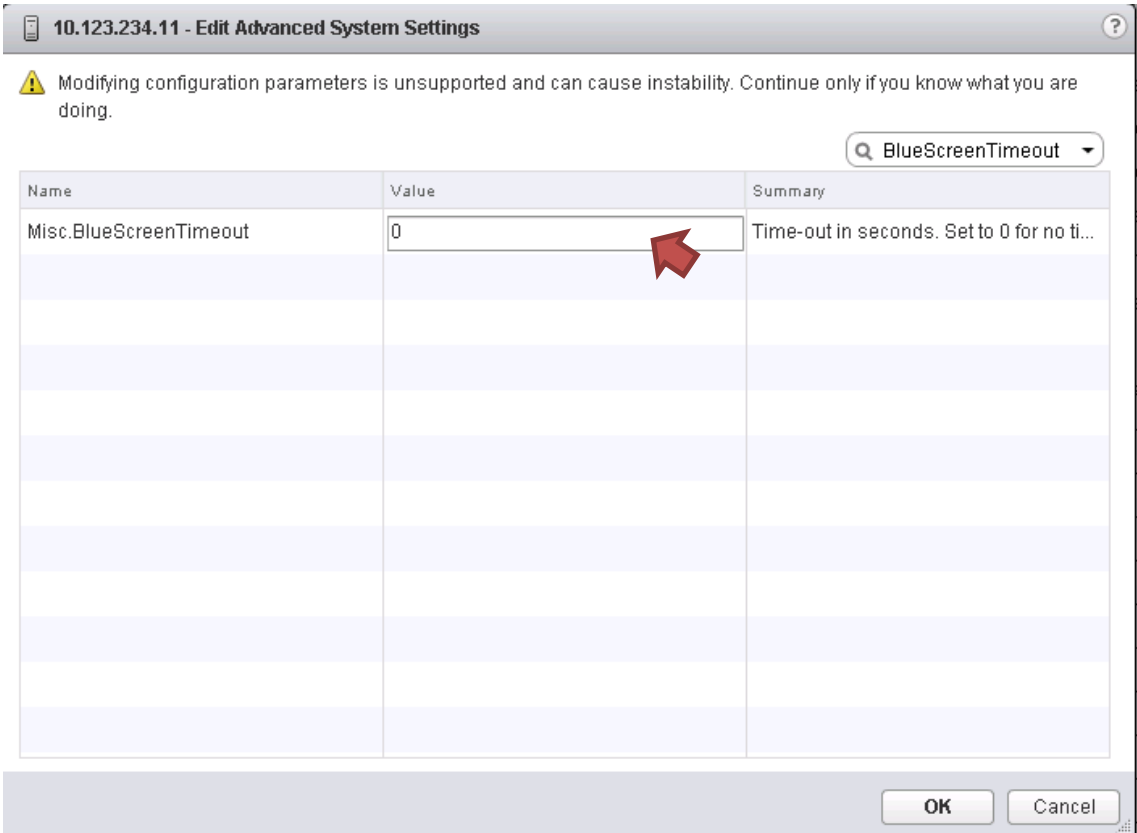

Setting method of Blue Screen Timeout from VMware Host Client


- 1. Click [Manage], open [System] tab, and click [Advanced settings].

FIGURE 3.27 Setting of BlueScreenTimeout ([System] tab)

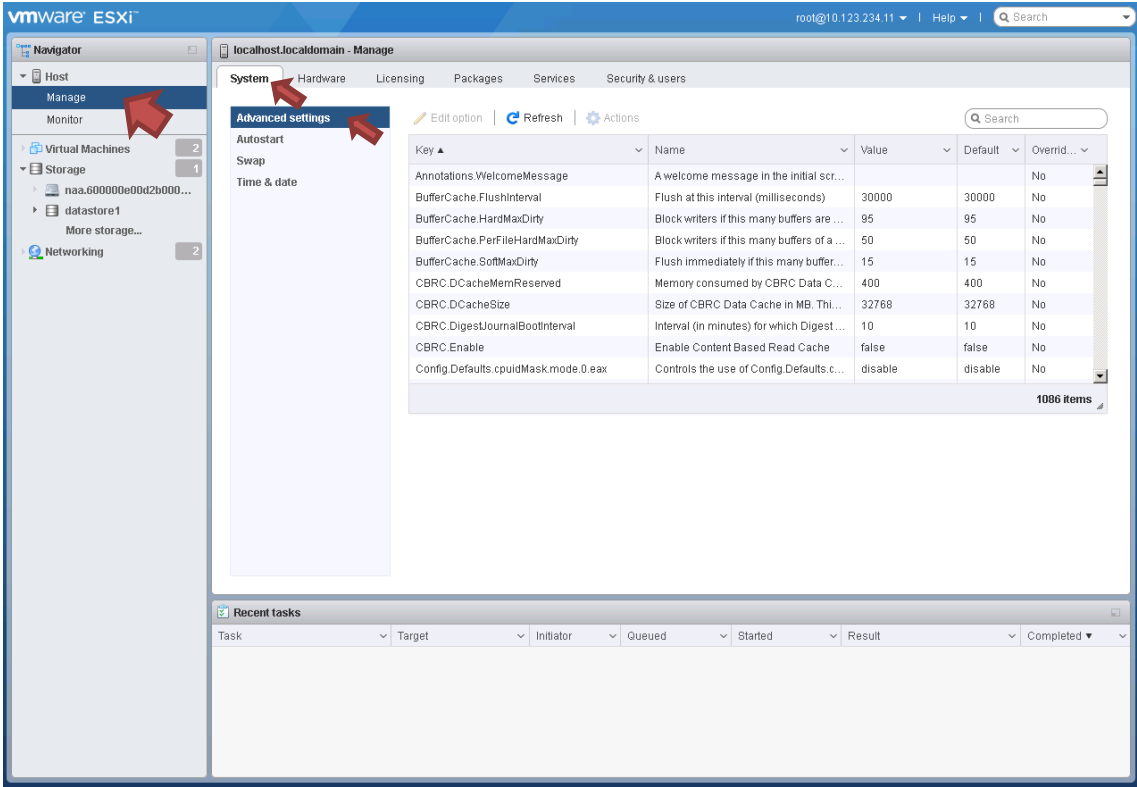


- 2. Search BlueScreenTimeout in the search box on the right side.
- 3. Select Misc.BlueScreenTimeout and click [Edit Option].

FIGURE 3.28 Setting of BlueScreenTimeout (After searching BlueScreenTimeout)

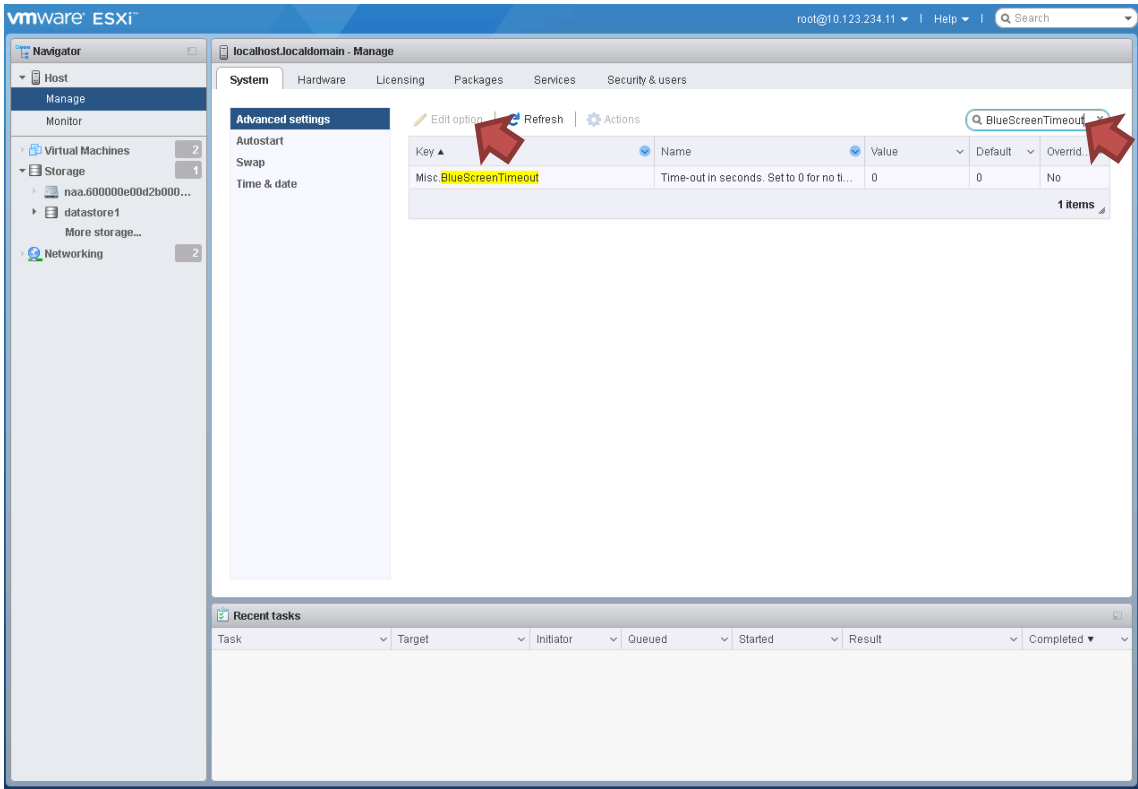

- 4. [Edit Option] screen appears, set the available value of Misc.BlueScreenTimeout value and click [Save].

FIGURE 3.29 Setting of BlueScreenTimeout ([Edit Option] screen)

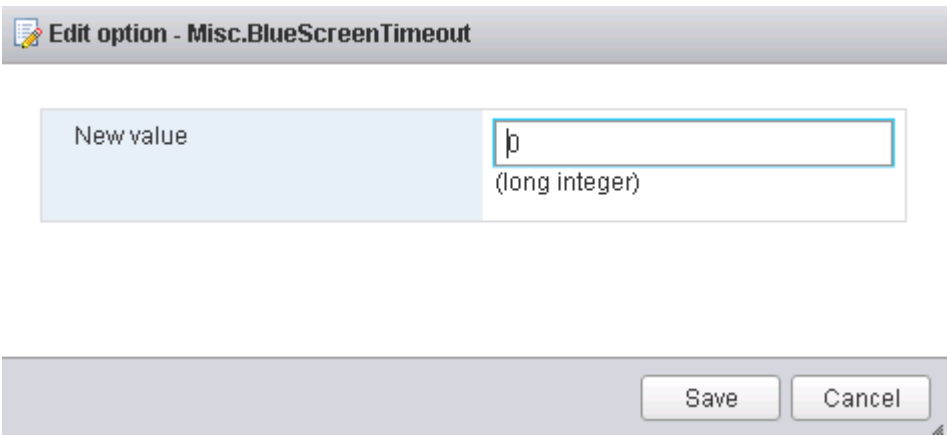


3.4.4 Partition name settings

Administrator privileges are required to set partition name. Fujitsu recommends using host name for partition name.

Operations

- 1. Click [Partition]-[Partition Configuration]

FIGURE 3.30 Example of [Partition Configuration] Window

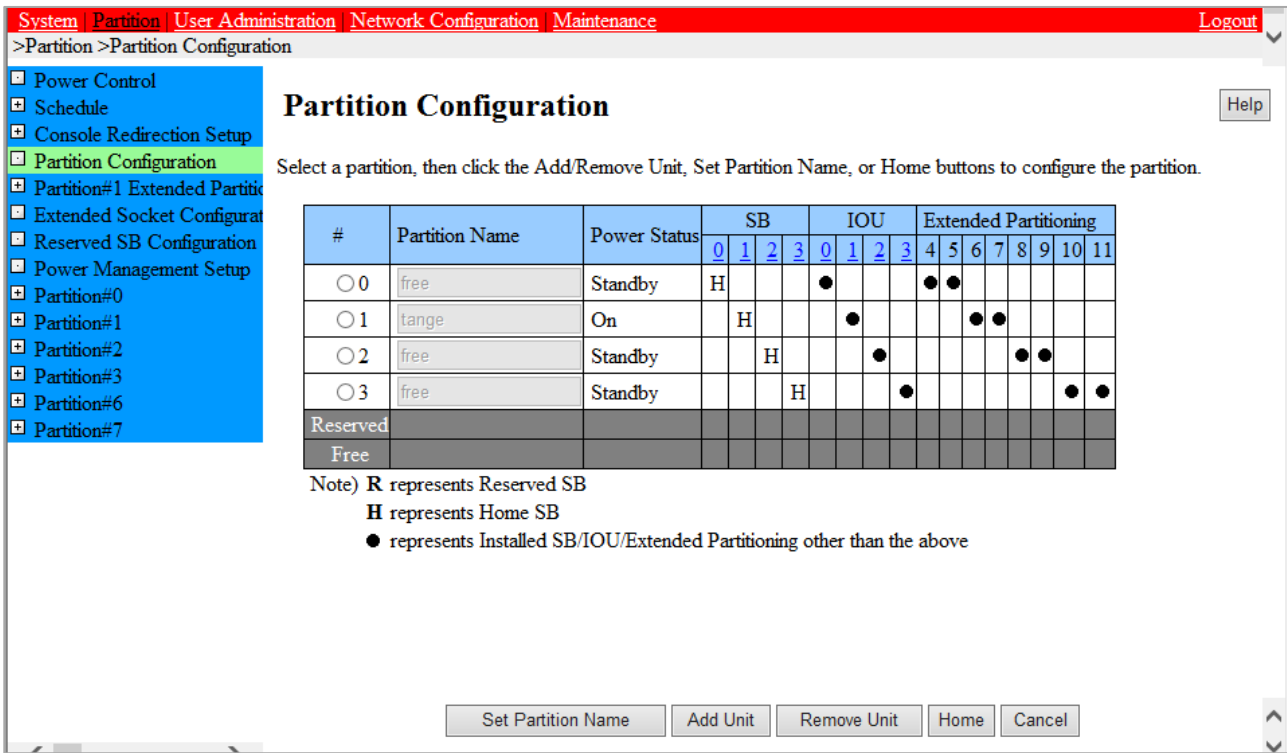

- 2. Select partition which sets the partition name and enter the partition name in [Partition name] cell.

Remark

The name can be input up to 16 characters. The characters that can be used are as follows.

[0-9], [a-z], [A-Z], half-width space, # (Sharp), _ (Underline), and – (Hyphen)

- 3. Click [Set Partition Name] button.
→ Name is set for the selected partition.

3.4.5 Various mode settings

Dynamic Reconfiguration, Memory operation mode, and Hyper Threading Mode, etc. of the partition are set. Setting items are set by MMB Web-UI and UEFI.

For details on the respective settings in MMB, see "[Mode] window" of "1.3.9 [Partition#x] menu" of PRIMEQUEST 2000 series Tool Reference (CA92344-0539)

For details on the respective settings in UEFI, see "3.4 [Device Manager] menu" of PRIMEQUEST 2000 series Tool Reference (CA92344-0539)

Note

- Confirm the I/O space is allocated in the PCI device of a relevant partition.
 - Confirm the I/O space is allocated in the SAS device (SAS card, RAID card, RAID card in DU or RAID card in SB).
If PCI Address Mode is set to PCI Segment Mode, the I/O space cannot be allocated to SAS device on Non Home SB. The SAS device on Non Home SB does not need the I/O space.
SAS device is displayed as "Device: SAS", and the FC device is displayed as "Device: Fibre". When I/O space is not allocated, operate [I/O Space Assignment Configuration] menu and remove the allocation of LAN and FC card. However, do not remove the allocation of I/O space for the FC card and LAN Card below.
 - For legacy boot, also confirm the allocation of the I/O space to the Intel Dual Channel LAN Card (10G BASE).
 - For legacy boot, also confirm the allocation of the I/O space to the Qlogic FC Card (8Gbps).
- For Secure Boot, Web BIOS cannot be used. Please use HII Configuration Utility. For start HII Configuration Utility, refer to LSI MegaRAID SAS 12G Software. For how to start of HII Configuration Utility, see "Appendix F Starting HII Configuration Utility".
- For PRIMEQUEST 2400E3/2800E3/2800B3/2400E2/2800E2/2800B2, Web BIOS cannot be used. Please use HII Configuration Utility. For start HII Configuration Utility, refer to LSI MegaRAID SAS 12G Software. For how to start of HII Configuration Utility, see "Appendix F Starting HII Configuration Utility".
- If PCI Address Mode is set to PCI Segment Mode, when you set configuration of Hardware RAID to HDD/SSD on Non Home SB, confirm the PCI ROM Priority in BIOS menu is set to EFI Compatible ROM. Then, start HII Configuration Utility/Web BIOS by EFI Shell.
- Confirm whether the Boot device used in the relevant partition is recognized in the UEFI. For confirmation, see "3.3[Boot Manager] menu" of PRIMEQUEST 2000 series Tool Reference (CA92344-0539). Identify the Boot device by operating the [Boot Manager] menu when the Boot device is not recognized by the UEFI.
- A confirmation dialog box is displayed, when the DIMM configuration mismatches Reserved SB and the partition. When switched to Reserved SB, warning message containing the reasons for releasing Memory Operation Mode is shown and confirm whether to continue the settings.

3.4.6 Settings of Console Redirection

When operating system is installed remotely, it is necessary to set Console Redirection. Set the Console Redirection to the subnet same as management LAN.

[IPv4 Console Redirection Setup] window

- Click [Partition] - [Console Redirection Setup] - [IPv4 Console Redirection Setup] window.
→ [IPv4 Console Redirection Setup] window is displayed. For details on window, see “1.3.3 [Console Redirection Setup] window” of PRIMEQUEST 2000 series Tool Reference (CA92344-0539).

FIGURE 3.31 Example of [IPv4 Console Redirection Setup] Window

System Partition User Administration Network Configuration Maintenance Logout

>Partition>Console Redirection Setup>IPv4 Console Redirection Setup

IPv4 Console Redirection Setup Help

Click the Apply Button to apply all changes.
Note: For using Video Redirection and Virtual Media in xPAR Partition, VGA/USB2/rKVMs must be connected to the partition.

#	Partition Name	IP Address	Subnet Mask	Video Redirection	Virtual Media
0	masuko	10 . 24 . 76 . 60	255 . 255 . 255 . 0	<input checked="" type="radio"/> Enable <input type="radio"/> Disable	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
1	cannotboot	10 . 24 . 76 . 61	255 . 255 . 255 . 0	<input checked="" type="radio"/> Enable <input type="radio"/> Disable	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
2	cannotboot	10 . 24 . 76 . 62	255 . 255 . 255 . 0	<input checked="" type="radio"/> Enable <input type="radio"/> Disable	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
3	igima	10 . 24 . 76 . 63	255 . 255 . 255 . 0	<input checked="" type="radio"/> Enable <input type="radio"/> Disable	<input checked="" type="radio"/> Enable <input type="radio"/> Disable

Apply Cancel

- Set IP address and subnet mask to access Console Redirection LAN for IPv4
- Enable video redirection and virtual media respectively.
- Click [Apply] button.


Note

After installation, disable the functions not used.

[IPv6 Console Redirection Setup] window

- 1. Click [Partition] - [Console Redirection Setup] - [IPv6 Console Redirection Setup] window.
→ [IPv6 Console Redirection Setup] window is displayed. For details on window, see “1.3.3 [Console Redirection Setup] window” of PRIMEQUEST 2000 series Tool Reference (CA92344-0539).

FIGURE 3.32 Example of [IPv6 Console Redirection Setup] Window

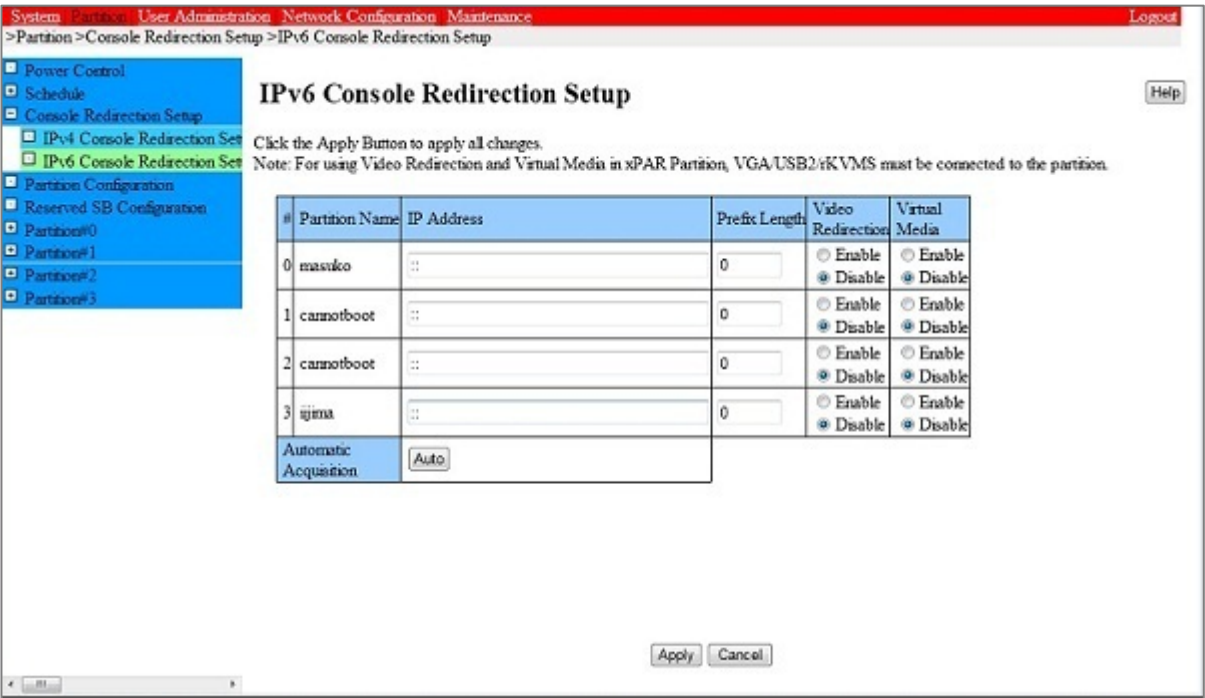

- 2. Set IP address and the prefix length to access Console Redirection LAN for IPv6. When it is set automatically, IP address and the prefix length is acquired by clicking on [Auto] button.
- 3. Enable video redirection and virtual media respectively.
- 4. Click [Apply] button.

3.4.7 Power OFF and ON of the partition

Power OFF and power ON are required for each partition to reflect the configuration change in the partition. For the details of Power OFF and power ON, see “CHAPTER 7Power ON and OFF of the partition”.

Remark

When the console is connected to the partition, processing continues until [UEFI] window is displayed after completion of POST (Power On Self Test) and then it stops.


3.4.8 Confirmation of partition information

The status of the partition and the partition related information is displayed.
The partition configuration of the entire system of PRIMEQUEST 2000 series can be confirmed even by the [Partition Configuration] window.

Operations

- 1. Click [Partition]-[Partition#x]-[Information].
→[Information] window is displayed. For details on [Information] window, see “■ [Information] window” of “1.3.9 [Partition#x] menu” of PRIMEQUEST 2000 series Tool Reference (CA92344-0539).

FIGURE 3.33 Example of [Information] Window

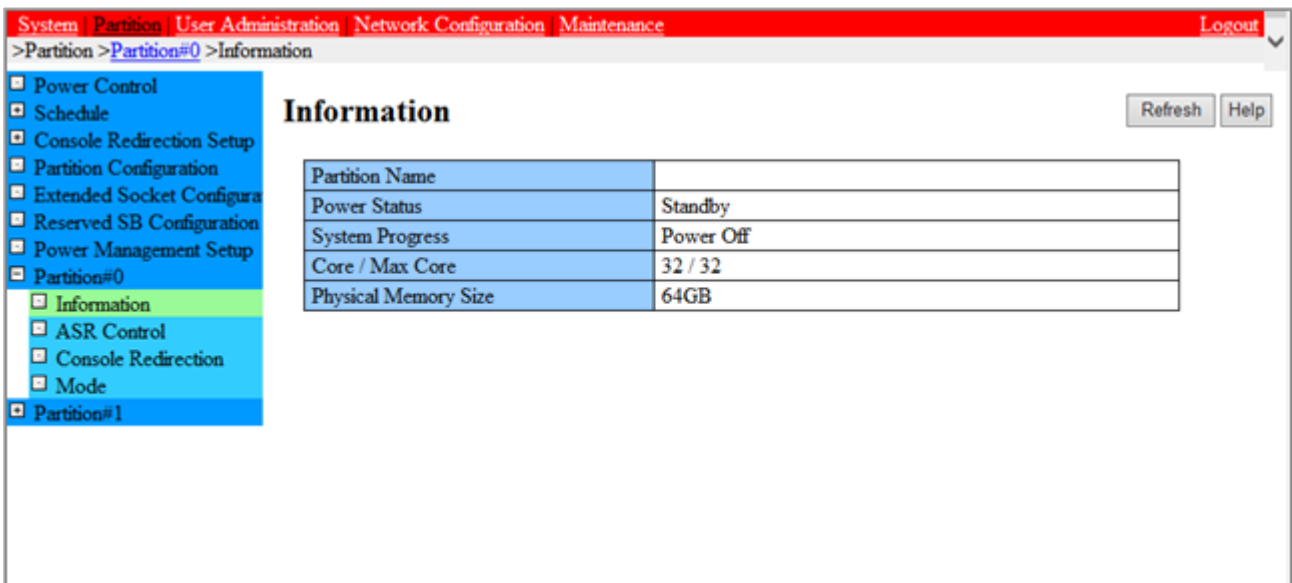

3.5 Partition Configuration (Extended Partitioning)

Extended Partitioning function can be used and a physical partition be divided into two or more partitions. Each partition that is divided by using the Extended Partitioning function is expressed as the Extended Partition.

This section describes the setting of Extended Partition configuration.

It is necessary to have completed the configuration setting of a physical partition that is divided by the Extended Partitioning function before the setting of Extended Partition.

Remark

- PRIMEQUEST 2400E3, 2800E3, 2400E2, 2800E2, 2400E and 2800E are available for this function.
- Power off, power on for every partition is required to reflect the configuration change of partition.
- Performance characteristics of the Extended Partition are different from the Physical partition. Should be used after the performance verification prior.
- All screenshots are display examples. The displayed contents differ according to the system configuration.


3.5.1 Enabling the Extended Partitioning function

This section describes the operations of enabling the Extended Partitioning function.

Operations

1. Click [Partition] - [Partition#x] – [Mode]
-> [Mode] window is displayed. For details of [Mode] window, see PRIMEQUEST 2000 series Tool Reference (CA92344-0539).

FIGURE 3.34 [Mode] Window Example

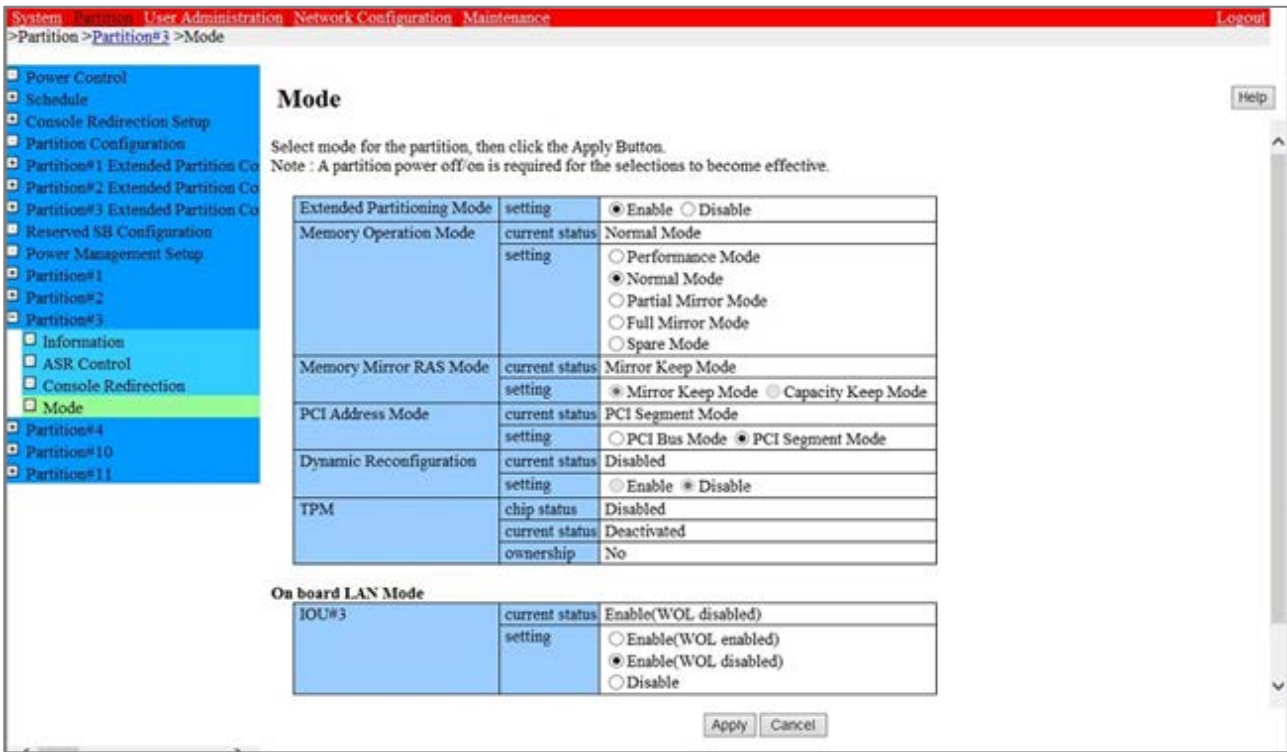


3.5.2 Generating the Extended Partition

This section describes generations of the Extended Partition.

Operations


1. Click [Partition] - [Partition Configuration]
-> [Partition Configuration] window is displayed. For details of [Partition Configuration] window, see “1.3.4 Partition Configuration] window” of PRIMEQUEST 2000 series Tool Reference (CA92344-0539).

FIGURE 3.35 [Partition Configuration] Window Example

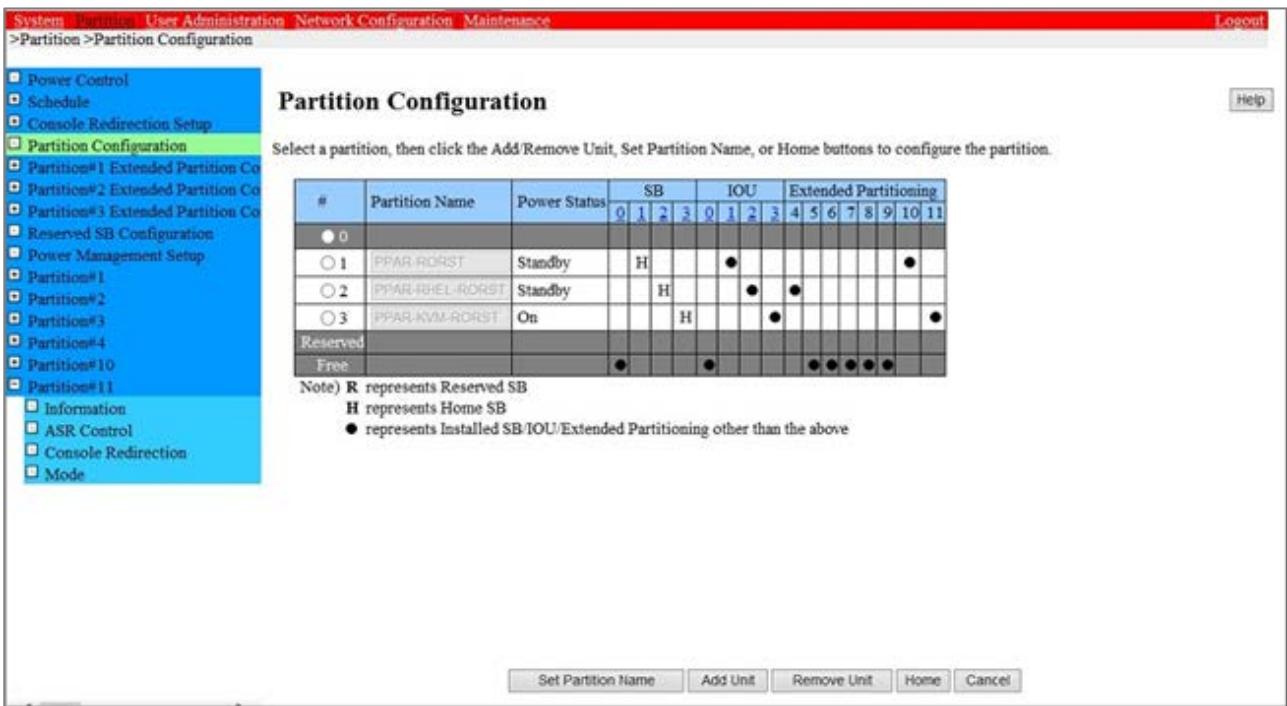

2. Click the radio button of partition number in which Extended Partition is generated
3. Click [Add SB/IOU] Button
-> [Add SB/IOU to Partition] window is displayed. Free SB, IOU and Extended Partition are displayed in the list. For details of [Add SB/IOU to Partition] window, see “■ [Add SB/IOU to Partition] window” of “1.3.4 [Partition Configuration] window” of PRIMEQUEST 2000 series Tool Reference (CA92344-0539).

FIGURE 3.36 Example of [Add SB/IOU to Partition] Window

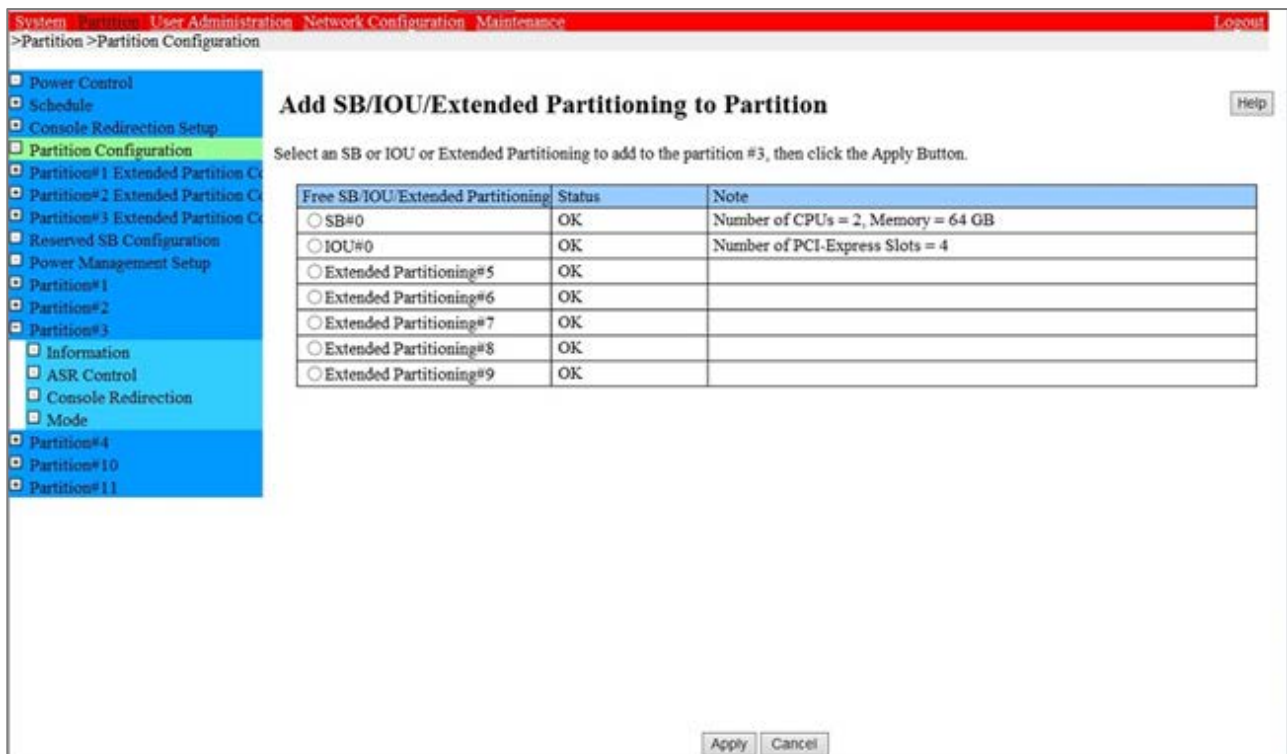

4. Click the radio button of one Extended Partition in the physical partition.
->Only one Extended Partition can be selected by one operation.
 5. Click the [Apply] button.
->Confirmation dialogue box is displayed.
 6. Click [OK] button.
->The selected one Extended Partition is generated in the physical partition.
- Repeat procedure 2-6 until you have generated all the required Extended Partitions.

3.5.3 Assigning SB resources to Extended Partition

Resources on the SB assign the Extended Partition.

Operations

1. Click [Partition]-[Partition#x Extended Partition Configuration] - [SB]
-> [Extended Partition Configuration of SB Resources] window is displayed. For details of [Extended Partition Configuration of SB Resources] window, see "1.3.5 Partition#x Extended Partition Configuration] window" of PRIMEQUEST 2000 series Tool Reference (CA92344-0539).

FIGURE 3.37 Example of [Extended Partition Configuration of SB Resources] Window

System Partition User Administration Network Configuration Maintenance Logout

>Partition>Partition#3 Extended Partition Configuration>SB

Extended Partition Configuration of SB Resources Help

Specify Partition Name, Number of CPU CORE (directly or by clicking SKT +/- buttons), Memory GB (directly or by clicking DIMM +/- buttons), or select radio buttons of other SB resources. To select DIMM EXCL option, check the "Memory EXCL" check box. To select SKT Binding option, check "SKT Binding" check box. After changing configurations, click "Apply" button.

Note: Only home SB has the following hardware resources to be configured to Extended Partitioning.

1.USB1:
Onboard USB ports (Port #0, #1)

2.VGA/USB2/rKVMs (inseparable)
Onboard VGA port, Onboard USB ports (Port #2, #3), Remote KVM and Storage.

#	Partition Name	Power Status	CPU		Memory		E X C L	SKT Binding	Home SB			SB#3
			S K T	CORE	D I M M	GB			USB1	VGA/USB2/rKVMs	PCI Slot	
11	X11	On	+	15	+	32	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	
Free			-	15	-	30	<input type="checkbox"/>	<input type="checkbox"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	

Apply Cancel

2. Sets the partition name.
Enter the partition name in [Partition name] cell and click [Apply] Button.
3. Assign CPU resources to Extended Partition.
Enter the number of assigning CPU Core in [CPU] - [CORE] cell of the Extended Partition and click [Apply] Button.

Remark

- Clicking the [+/-] Button in [CPU] – [SKT] cell can be increased or decreased the number of specified core in one CPU socket unit.
- Even if multiple Extended Partitions do not share one CPU Socket, when a CPU error occurs all Extended Partitions on the physical partition may be influenced.

4. Assign memory resources to Extended Partition.
Enter the capacity of memory by one gigabyte in [Memory] - [GB] cell of the Extended Partition and click [Apply] Button.

Note

- Extended partition needs at least two GB of memory capacity.

Remark

- Clicking the [+/-] Button in [Memory] – [DIMM] cell can be increased or decreased the number of specified memory capacity in one DIMM module unit.
- If the check box in [Memory] – [EXCL] cell of the Extended Partition is checked, all the physical DIMMs (DIMM modules) that are used by the Extended Partition are not used by other partition.
- Even if the assignment of DIMMs was physically divided, when a CPU error occurs all Extended Partitions may be influenced.

5. Enable the socket binding mode

Socket binding is the function that assigns two CPUs of the physical partition and the DIMMs belonging to the CPUs to the Extended Partition. Socket binding guarantees that the number of CPU socket assigned to the Extended Partition is one or two. For example, when the software license is decided by the number of CPU sockets Socket binding mode is useful.

Check the check box of [SKT Binding] field of the Extended Partition and click the [Apply] button.

Then socket binding is enabled.

If number of CPU sockets in physical partition is two or less, socket binding is not required.

Remark

If socket binding function is enabled, the assigning rule of the CPU core and the DIMM is below.

- In the case that the number specified in [CORE] is smaller than the total number of cores within two CPUs, cores of a specified number of [CORE] will be assigned to the Extended Partition.
- In the case that the number specified in [CORE] is greater than the total number of cores within two CPUs, all cores within two CPUs will be assigned to the Extended Partition.
- In the case that the capacity specified in [GB] is smaller than the total capacity of the DIMM which belonging to two CPUs, DIMM capacity specified in [GB] will be assigned to the Extended Partition.
- In the case that the capacity specified [GB] is greater than the total capacity of the DIMM belonging to two CPUs, all DIMMs belonging to two CPUs will be assigned to the Extended Partition.

6. Assign VGA/USB/PCI Slot resources to Extended Partition.

Select [USB1], [VGA/USB2/rKVMs] and [PCI Slot] and click [Apply] button.

Remark

- Video Redirection and virtual media can be used by the Extended Partition where selected [VGA/USB2/rKVMs]. If VGA/USB2/rKVMs is assigned to other partition the following step are required.
 - a. Power off the Extended Partition which is assigned VGA/USB2/rKVMs.
 - b. Remove VGA/USB2/rKVMs of the Extended Partition and assign VGA/USB2/rKVMs to the Extended Partition which uses Video Redirection and virtual media.


3.5.4 Assigning IOU resources to Extended Partition

Resources on the IOU assign the Extended Partition.

Operations

- 1. Click [Partition]-[Partition#x Extended Partition Configuration] - [IOU]
-> [Extended Partition Configuration of IOU Resources] window is displayed. For details of [Extended Partition Configuration of IOU Resources] window, see "1.3.5 Partition#x Extended Partition Configuration] window" of PRIMEQUEST 2000 series Tool Reference (CA92344-0539).

FIGURE 3.38 Example of [Extended Partition Configuration of IOU Resources] Window

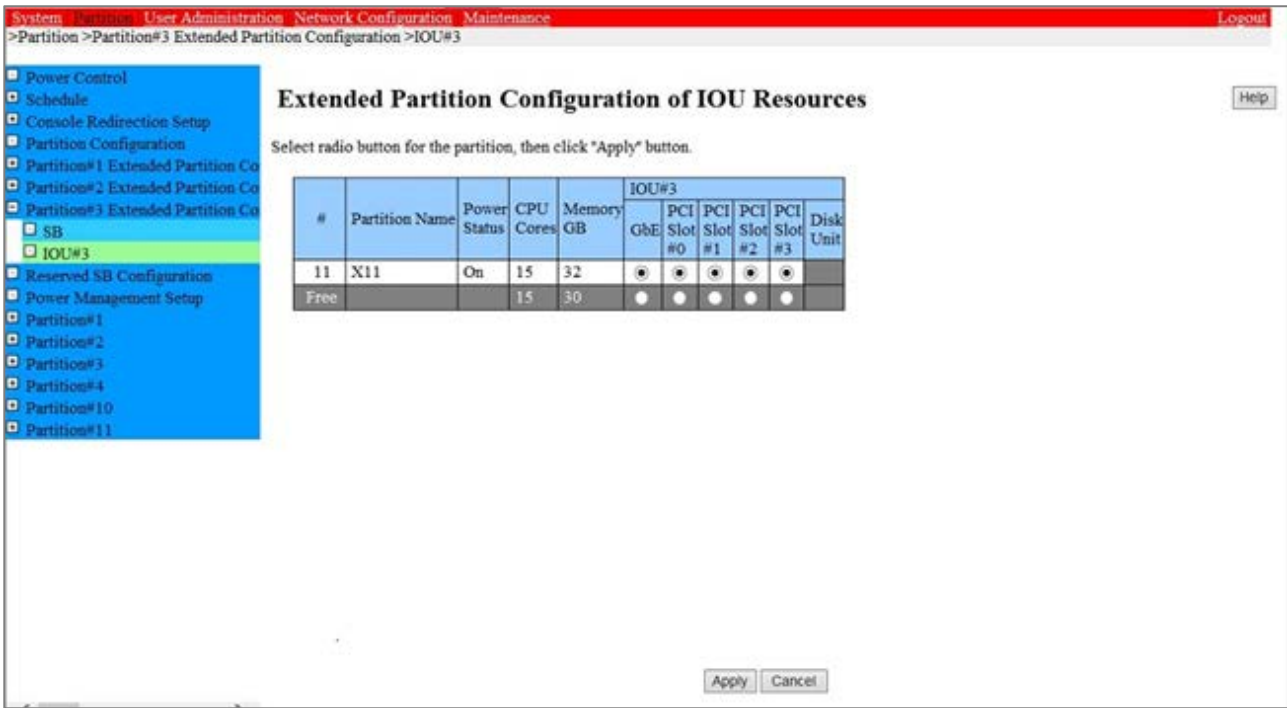

- 2. Select [GbE], PCI Slot] and [DU] and click [Apply] button.


3.5.5 Assigning PCI_Box resources to Extended Partition

Resources on the PCI_Box assign the Extended Partition.

Operations

- 1. Click [Partition]-[Partition#x Extended Partition Configuration] - [PCI_Box]
-> [Extended Partition Configuration of PCI_Box Resources] window is displayed. For details of [Extended Partition Configuration of PCI_Box Resources] window, see "1.3.5 Partition#x Extended Partition Configuration] window" of PRIMEQUEST 2000 series Tool Reference (CA92344-0539).

FIGURE 3.39 Example of [Extended Partition Configuration of PCI_Box Resources] Window

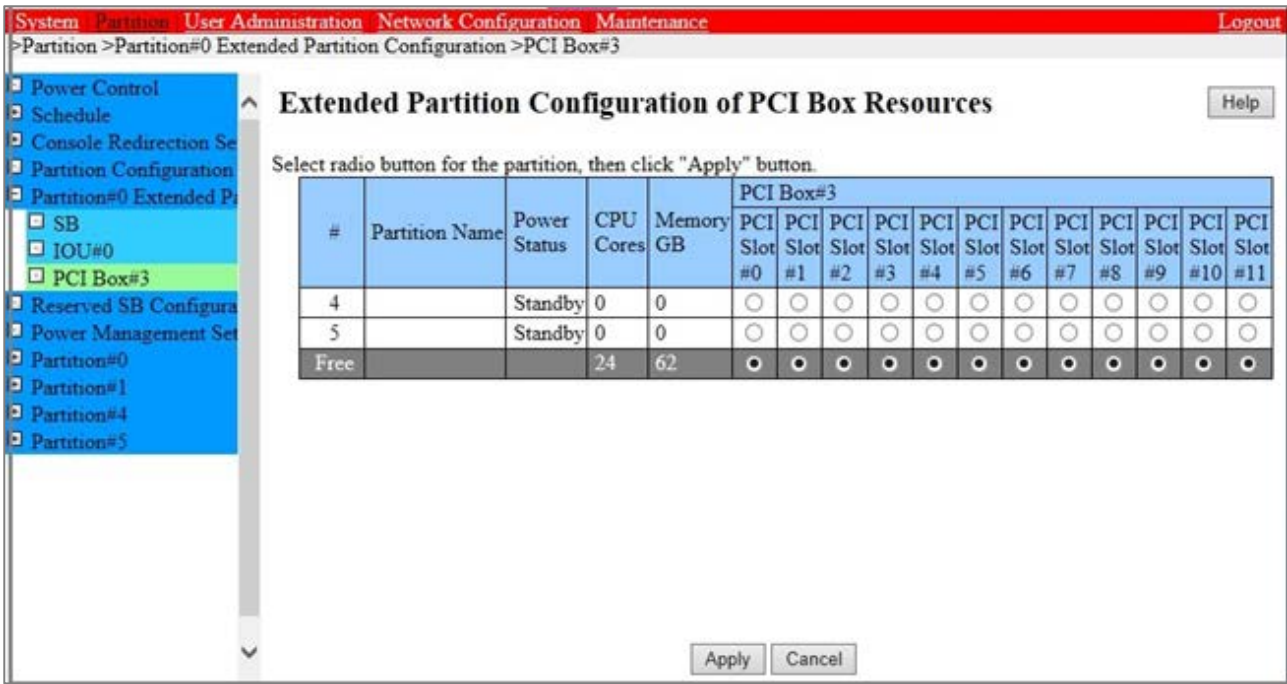

- 2. Select [PCI Slot and click [Apply] button.

3.5.6 Various mode settings

Each mode of the Extended Partition is set.

Setting items of based on physical partition are shown below.

Although mode settings are shown in table below, some of the items cannot be done for each Extended Partition and they are taken over by settings of relevant Physical Partitions. While items in this table can be set per Extended Partition, some items have limitations for their setting. For details, please refer to remarks in this table.

Item unremarked in "Setting item" column is configurable item for Extended Partition.

For details on the respective settings in MMB, see "■ [Mode] window" of "1.3.9 [Partition#x] menu" of PRIMEQUEST 2000 series Tool Reference (CA92344-0539)

For details on the respective settings in UEFI, see "3.4 [Device Manager] menu" of PRIMEQUEST 2000 series Tool Reference (CA92344-0539)

Note

Confirm the I/O space is allocated in the SAS device (SAS card, RAID card, RAID card in DU or RAID card in SB) of a relevant partition.

Further, also confirm the allocation of the I/O space to the FC card, onboard LAN and LAN Card (Only the card for the boot passing), while installing on the SAN storage device.

SAS device is displayed as "Device: SAS", and the FC device is displayed as "Device: Fibre". When I/O space is not allocated, operate [I/O Space Assignment Configuration] menu and remove the allocation of LAN and fibre channel.

However, do not remove the allocation of I/O space for the FC card onboard LAN and LAN Card used for installation, when the operating system is installed for the storage in SAN environment.

3.5.7 Settings of Console Redirection

When operating system is installed to Extended Partition, it is necessary to assign VGA/USB2/rKVMs of SB resource and set Console Redirection.

Set the Console Redirection to the subnet same as management LAN.

Remark

If VGA/USB2/rKVMs of SB resource is not assigned Console Redirection cannot be set.

[IPv4 Console Redirection Setup] window

- Click [Partition] - [Console Redirection Setup] - [IPv4 Console Redirection Setup] window.
→ [IPv4 Console Redirection Setup] window is displayed. For details on window, see “1.3.3 [Console Redirection Setup] window” of PRIMEQUEST 2000 series Tool Reference (CA92344-0539).

FIGURE 3.40 Example of [IPv4 Console Redirection Setup] Window

#	Partition Name	IP Address	Subnet Mask	Video Redirection	Virtual Media
1	PPAR-RORST	10 . 125 . 61 . 15	255 . 255 . 255 . 0	<input type="radio"/> Enable <input checked="" type="radio"/> Disable	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
2	PPAR-RHEL-RORST	10 . 125 . 61 . 17	255 . 255 . 255 . 0	<input type="radio"/> Enable <input checked="" type="radio"/> Disable	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
3	PPAR-KVM-RORST	10 . 125 . 61 . 19	255 . 255 . 255 . 0	<input type="radio"/> Enable <input checked="" type="radio"/> Disable	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
4	xPAR-RORST	10 . 125 . 61 . 23	255 . 255 . 255 . 0	<input checked="" type="radio"/> Enable <input type="radio"/> Disable	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
10		10 . 125 . 61 . 25	255 . 255 . 255 . 0	<input checked="" type="radio"/> Enable <input type="radio"/> Disable	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
11	X11	10 . 125 . 61 . 20	255 . 255 . 255 . 0	<input checked="" type="radio"/> Enable <input type="radio"/> Disable	<input checked="" type="radio"/> Enable <input type="radio"/> Disable

- Set IP address and subnet mask to access Console Redirection LAN for IPv4
- Enable video redirection and virtual media respectively.
- Click [Apply] button.

Note

After installation, disable the functions not used.

[IPv6 Console Redirection Setup] window

1. Click [Partition] - [Console Redirection Setup] - [IPv6 Console Redirection Setup] window.
→ [IPv6 Console Redirection Setup] window is displayed. For details on window, see “1.3.3 [Console Redirection Setup] window” of PRIMEQUEST 2000 series Tool Reference (CA92344-0539).

FIGURE 3.41 Example of [IPv6 Console Redirection Setup] Window

IPv6 Console Redirection Setup

Click the Apply Button to apply all changes.
Note: For using Video Redirection and Virtual Media in Extended Partitioning, VGA/USB2/rKVMs must be connected to the partition.

#	Partition Name	IP Address	Prefix Length	Video Redirection	Virtual Media
1	PPAR-RORST	:	0	<input type="radio"/> Enable <input type="radio"/> Disable	<input type="radio"/> Enable <input type="radio"/> Disable
2	PPAR-RHEL-RORST	:	0	<input type="radio"/> Enable <input type="radio"/> Disable	<input type="radio"/> Enable <input type="radio"/> Disable
3	PPAR-KVM-RORST	:	0	<input type="radio"/> Enable <input type="radio"/> Disable	<input type="radio"/> Enable <input type="radio"/> Disable
4	xPAR-RORST	:	0	<input type="radio"/> Enable <input checked="" type="radio"/> Disable	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
10		:	0	<input type="radio"/> Enable <input checked="" type="radio"/> Disable	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
11	X11	:	0	<input type="radio"/> Enable <input checked="" type="radio"/> Disable	<input type="radio"/> Enable <input checked="" type="radio"/> Disable

Automatic Acquisition:

2. Set IP address and the prefix length to access Console Redirection LAN for IPv6. When it is set automatically, IP address and the prefix length is acquired by clicking on [Auto] button.
3. Enable video redirection and virtual media respectively.
4. Click [Apply] button.

3.5.8 Setting of Extended Socket

This section describes the setting of Extended Socket.
Enabling of Extended Socket function and setting of Zoning are needed.


Remark

- Do not start two or more MMB Web-UI screens when you change the setting of Extended Socket function and change on a single MMB Web-UI screen.
- The added procedure is necessary for changing the Zoning setting of Extended Partition which power has already been turned on. For more detail, see “3.2.2 Extended Socket” of PRIMEQUEST 2000 series Administration manual (CA92344-0537).

Enabling of Extended Socket

1. Click [Partition]-[Partition#x]-[Mode].
→[Mode] window is displayed. For details on [Mode] window, see “■ [Mode] window” of “1.3.9 [Partition#x] menu” of PRIMEQUEST 2000 series Tool Reference (CA92344-0539).

FIGURE 3.42 Example of [Mode] Window

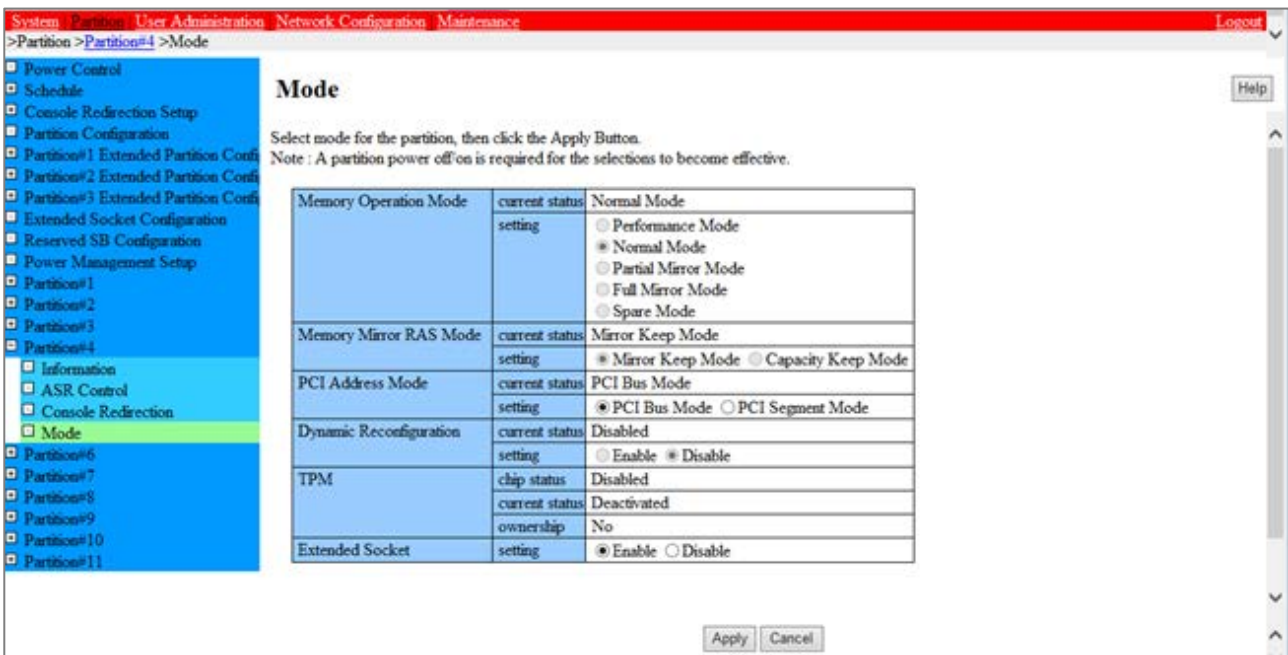


2. Select [Enable] of setting of Extended Socket.
3. Click [Apply] button.

Setting of Zoning

- 1. Click [Partition]-[Extended Socket Configuration].
→[Extended Socket Configuration] window is displayed. For details on [Extended Socket Configuration] window, see of “1.3.6 [Extended Socket Configuration] menu” of PRIMEQUEST 2000 series Tool Reference (CA92344-0539).

FIGURE 3.43 Example of [Extended Socket Configuration] Window

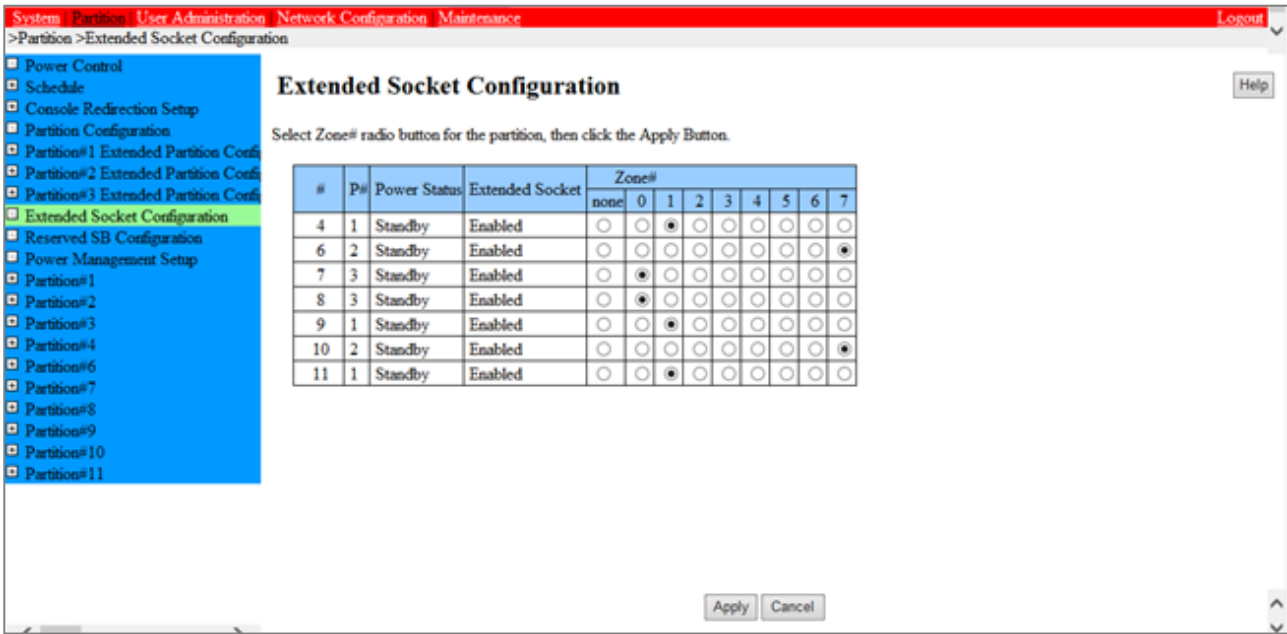

- 2. Select [Zone#] for each Extended Partition.
Zone which configured by FIGURE 3.43 Example of [Extended Socket Configuration] Window is displayed below.

TABLE 3.8 Example for Extended Socket (Zone) configuration

Zone#	Extended Partition included in Zone
0	Partition#7 Partition#8
1	Partition#4 Partition#9 Partition#11
7	Partition#6 Partition#10

- 3. Click [Apply] button.

3.5.9 Power OFF and ON of the Extended Partition

Power OFF and power ON are required for each Extended Partition to reflect the configuration change in the Extended Partition. For the details of Power OFF and power ON, see "CHAPTER 7 Power ON and OFF of the partition".


3.5.10 Confirmation of Extended Partition information

The status of the partition and the partition related information is displayed.
The partition configuration of the entire system of PRIMEQUEST 2000 series can be confirmed even by the [Partition Configuration] window.

Operations

1. Click [Partition]-[Partition#x]-[Information].
→[Information] window is displayed. For details on [Information] window, see "■ [Information] window" of "1.3.9 [Partition#x] menu" of PRIMEQUEST 2000 series Tool Reference (CA92344-0539).

FIGURE 3.44 Example of [Information] Window

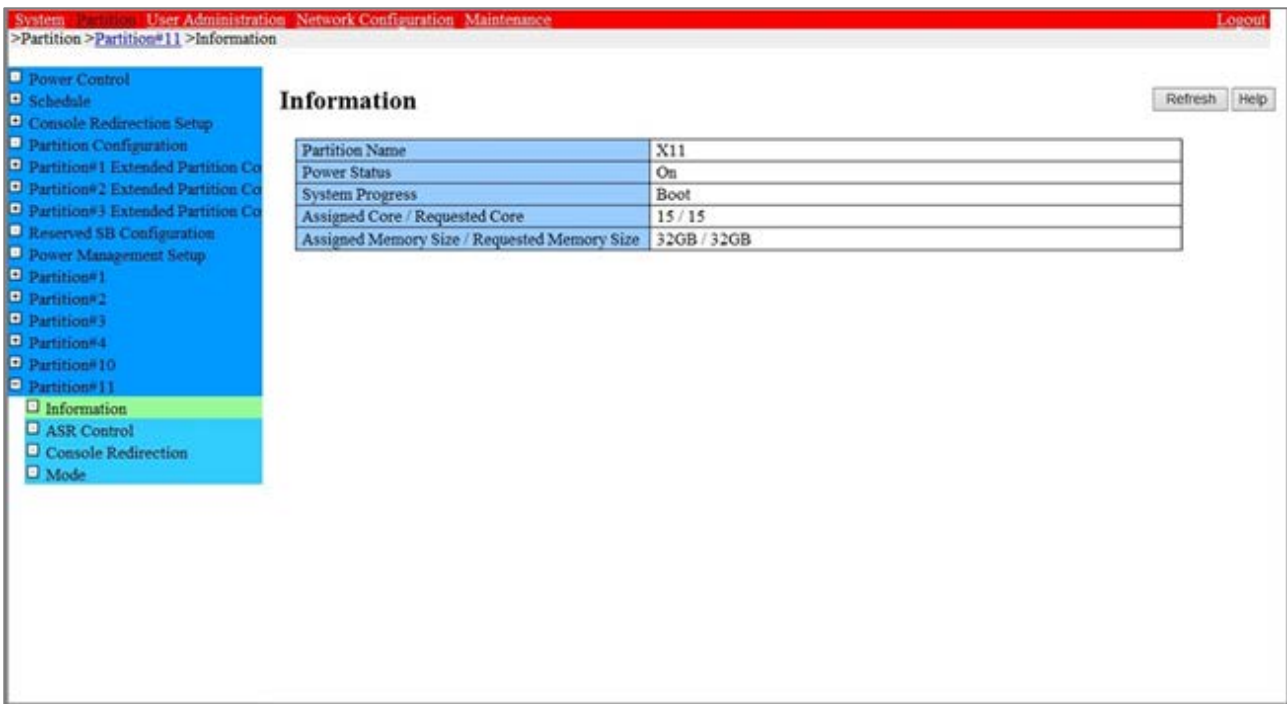


3.6 Setting of LDAP

Here explains the setting of LDAP.

3.6.1 User Management using an LDAP directory service

User Management using an LDAP is shown below.

FIGURE 3.45 User Management using an LDAP

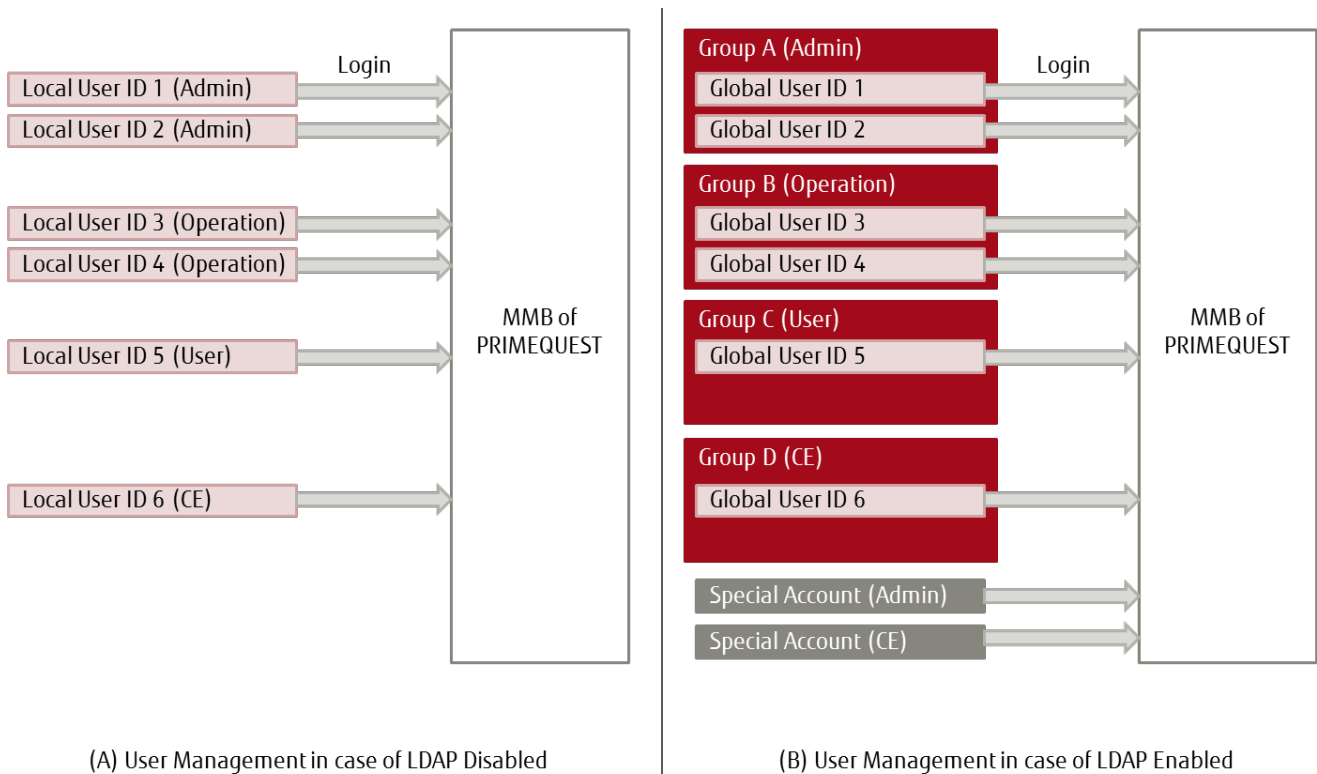

(A): User Management not using an LDAP.

- Local User ID is registered by method shown by “3.3.10 Registration of User Account”. When LDAP is disabled, privilege is assigned to each user ID and MMB are accessed within the authority.

(B): User Management using an LDAP.

- When LDAP is enabled, Global User ID which registered to Directory Service is used to access to MMB. Global User ID is allocated to a Group and the Group is assigned the privilege for access MMB. In above figure, Group A is assigned Administrative privileges. Global Users which included in Group A (i.e. Global User ID 1 and Global User ID 2) have Administrative privilege for access to MMB.
- When LDAP is enabled, Special Accounts are used. Special Accounts are two accounts. One is for Administrator and another is for CE (field engineer).
 - Special Account for Administrator
 - When LDAP has a problem, administrator accesses MMB using this account.

- Special Account for CE
Field engineer use this account for server maintenance. Field engineer accesses MMB using this account or Global User ID for field engineer.


3.6.2 Overview of LDAP settings

Overview of LDAP settings is shown below.

Remark

LDAP settings are required familiarity to directory services. Except the administrator who is familiar with the directory service, do not set up the LDAP.

FIGURE 3.46 Overview of LDAP settings

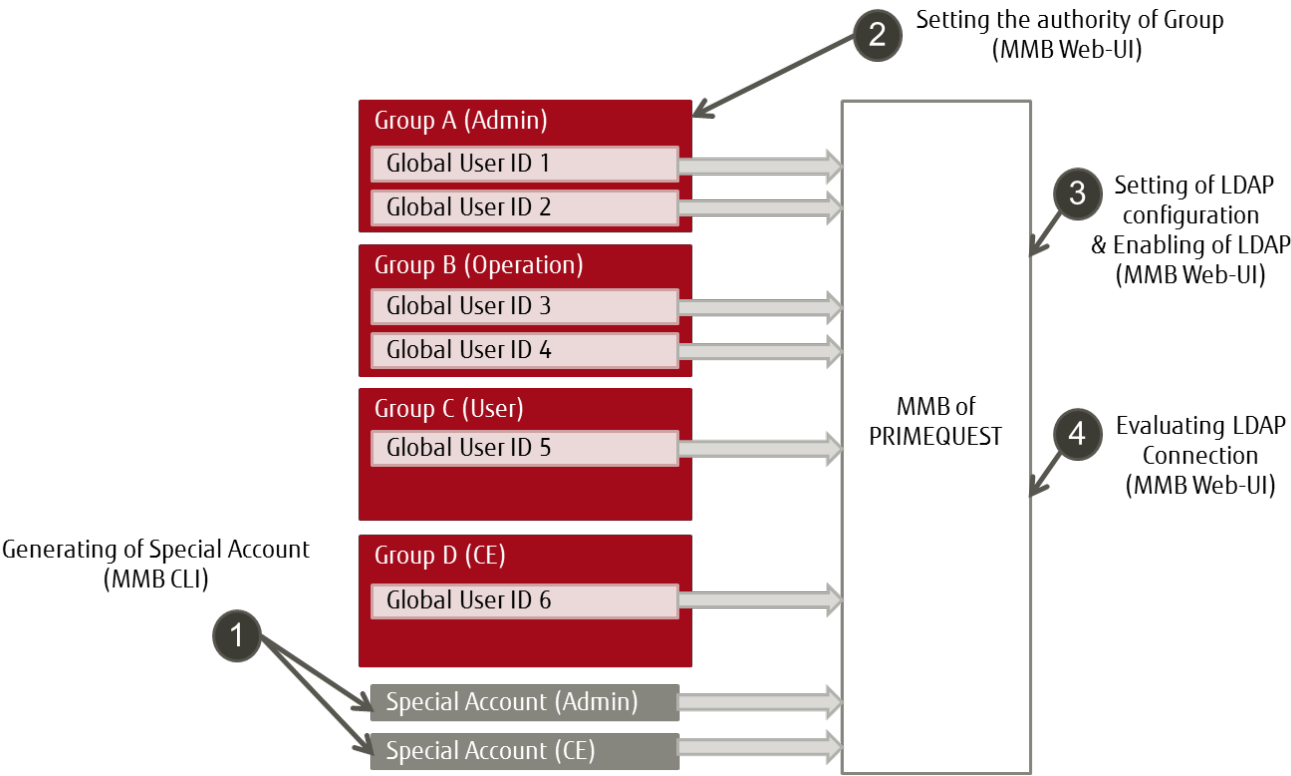

1. Generating of Special Account using CLI of MMB.
2. Setting the authority of Group on MMB Web-UI
3. Setting of LDAP configuration and Enabling of LDAP on MMB Web-UI
4. Evaluating LDAP Connection

3.6.3 Setting procedure of LDAP (Active Directory)

Here explains setting procedure of LDAP (Active Directory).

The procedure which is explained in this section is example for the configuration of Directory Service below.

- Global User to access to MMB is "mmbadmin".
- Group that Global User "mmbadmin" belongs is "MMB_Admin".

Remark

- The following directory configuration is an example. The procedure of setting the directory configuration is not mentioned in this manual. For details of their procedure, refer to the document of Directory Service.
- Global User ID and password on Directory Service follow the setting rule of MMB account. For the detail of the setting rule of MMB account, see 1.4[User Administration] Menu' of PRIMEQUEST 2000 series Tool Reference (CA92344-0539).
- Group name on Directory Service follows the setting rule of User Group of MMB. For the detail of the setting rule of MMB account, see 1.4.4.3 [Add LDAP User Group] Menu' of PRIMEQUEST 2000 series Tool Reference (CA92344-0539).

1. Generating Special Account using CLI of MMB.

- a. A user with Administrator authority logs in to MMB CLI using the terminal software.
- b. Generate Special Account (Admin) and Special Account (CE) using following command.
set special_account <user name> <privilege: [admin | ce] {quiet} <password><confirm password>

Remark

User name and Password of Special Account are conformed to the setting rule of MMB account. For the detail of the setting rule of MMB account, see 1.4[User Administration] Menu' of PRIMEQUEST 2000 series Tool Reference (CA92344-0539).

Example 1: Special Account (Admin)

User name: spadmin

Authority: Administrator

Password: xxxxxxxxx

```
Administrator> set special_account spadmin admin
Are you sure you want to add spadmin? [Y/N]: y
Password:xxxxxxxxxx
Confirm Password:xxxxxxxxxx
Administrator>
```

Example 2: Special Account (CE)

User name: spce


Authority: CE

Password: zzzzzzzzz

```
Administrator> set special_account spce ce
Are you sure you want to add spce? [Y/N]: y
Password:zzzzzzzzzz
Confirm Password:zzzzzzzzzz
Administrator>
```

- c. Confirm logged in MMB by using their special accounts.
2. Setting the privileges of Group on MMB Web-UI.
Generate User Group which name is same as name of Group generated in Directory Server and give the User Group the access privileges to MMB.
 - a. Click a. [User Administration] - [LDAP Configuration] - [LDAP User Group List]
-> [LDAP User Group List] is displayed. For the detail of [LDAP User Group List], see 1.4.4.2 [LDAP User Group List] Menu' of PRIMEQUEST 2000 series Tool Reference (CA92344-0539).

FIGURE 3.47 [LDAP User Group List] Window

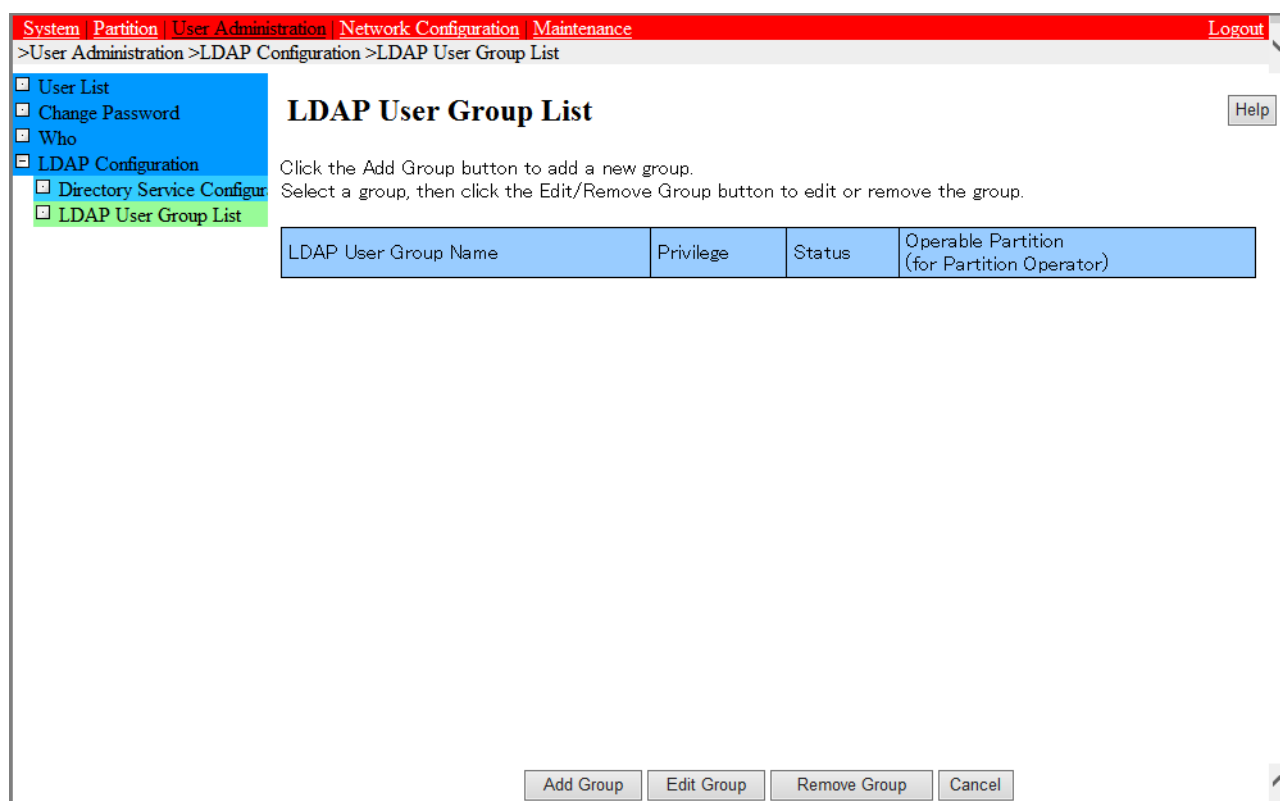

- b. Click a [Add Group] button.
-> [Add LDAP User Group] is displayed. For the detail of [Add LDAP User Group], see 1.4.4.2 [Add LDAP User Group] Menu' of PRIMEQUEST 2000 series Tool Reference (CA92344-0539).

FIGURE 3.48 [Add LDAP User Group] Window

System | Partition | User Administration | Network Configuration | Maintenance Logout

>User Administration >LDAP Configuration >Add LDAP User Group

User List
Change Password
Who
LDAP Configuration
Directory Service Configur
LDAP User Group List

Add LDAP User Group


Click the Apply Button to apply all changes.

LDAP User Group Name	MMB_Admin											
Privilege	<input checked="" type="radio"/> Admin <input type="radio"/> Operator <input type="radio"/> User <input type="radio"/> CE <input type="radio"/> Partition Operator											
Status	<input checked="" type="radio"/> Enabled <input type="radio"/> Disabled											
Operable Partition (for Partition Operator)	0	1	2	3	4	5	6	7	8	9	10	11
	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Apply Cancel

- c. Input LDAP User Group Name
LDAP User Group Name is same as the name of Group in Directory Service generated by procedure 2.
"MMB_Admin" is input in this example.
- d. Select the privilege for access to MMB.
"Administrator" is selected in this example.
- e. Enable Status
- f. Click a [Apply] button.
-> The dialog box of confirmation is displayed.
- g. Click a [OK] button.
-> The User Group is added. The information of the User Group can be confirmed in [User Group List] Window.

FIGURE 3.49 [LDAP User Group List] Window (after generating User Group)

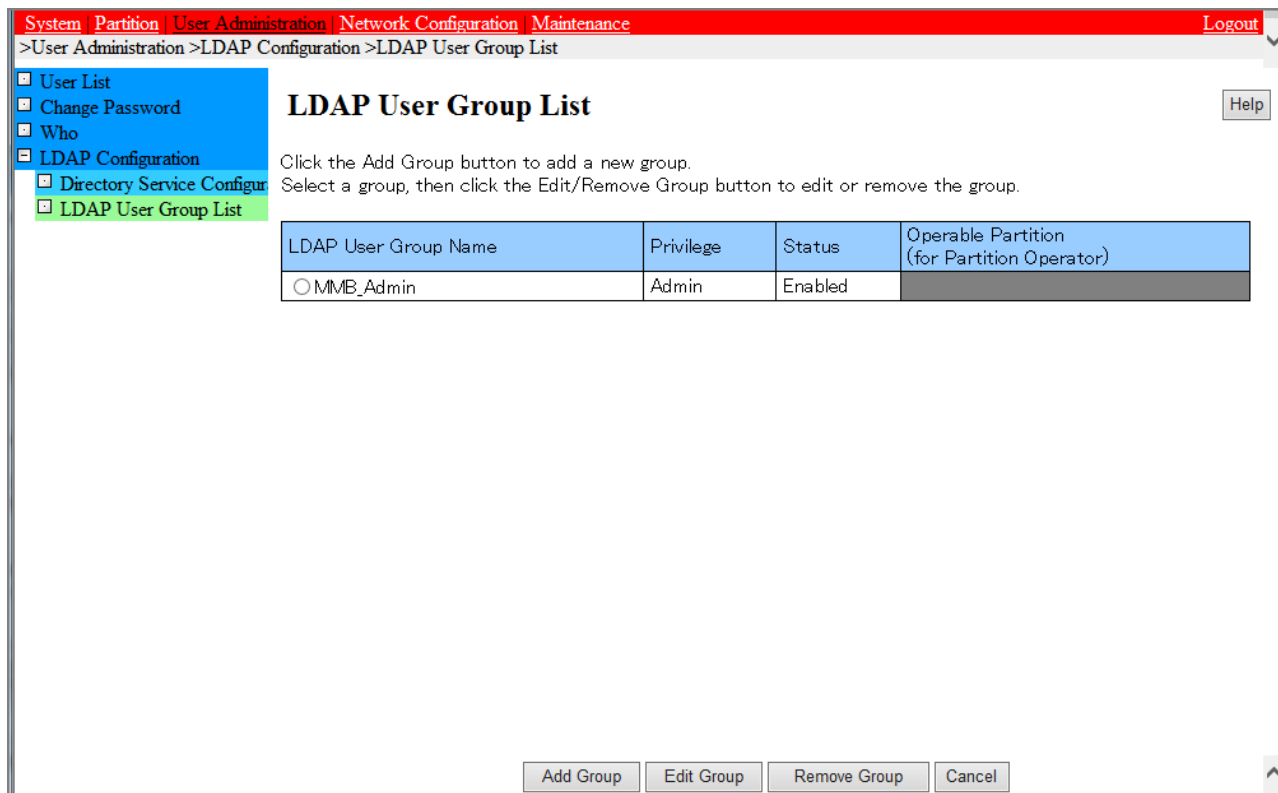

3. Setting of LDAP configuration and Enabling of LDAP on MMB Web-UI.

LDAP configuration is set using [Directory Service Configuration] Window.

Setting items is different from using Directory Service.

Remark

To enable LDAP, the following accounts and LDAP User Group are needed.

- Special Account (Admin)
- Special Account (CE)
- LDAP User Group which has Administrator privilege and is enabled (one group or more).

When LDAP is enabled without these, dialog box is displayed and LDAP is not enabled.

a. Click a [User Administration] - [LDAP Configuration] - [Directory Service Configuration].

-> [Directory Service Configuration] Window is displayed. For the detail of [Directory Service Configuration] Window, see 1.4.4.1 [Directory Service Configuration] Menu' of PRIMEQUEST 2000 series Tool Reference (CA92344-0539).

FIGURE 3.50 [Directory Service Configuration] Window (Active Directory) (1/2)

System Partition User Administration Network Configuration Maintenance Logout

>User Administration >LDAP Configuration >Directory Service Configuration

User List
Change Password
Who
LDAP Configuration
Directory Service Configuration
LDAP User Group List

Directory Service Configuration

Click the Apply Button to apply all changes.

Global Directory Service Configuration

LDAP	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
LDAP SSL	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
Directory Server Type	Active Directory
Primary LDAP Server	LDAP Server
	LDAP Port 389
	LDAP SSL Port 636
Backup LDAP Server	LDAP Server
	LDAP Port 389
	LDAP SSL Port 636
Domain Name	
Base DN	DC=adufjitsu,DC=co,DC=jp
Groups directory as sub-tree from base DN	
User Search Context	
LDAP Group Scheme	group
LDAP Member Scheme	member

Apply Cancel Test LDAP

FIGURE 3.51 [Directory Service Configuration] Window (Active Directory) (2/2)

System Partition User Administration Network Configuration Maintenance Logout

>User Administration >LDAP Configuration >Directory Service Configuration

User List
Change Password
Who
LDAP Configuration
Directory Service Configuration
LDAP User Group List

Directory Service Configuration

Help

Backup LDAP Server	LDAP Port 389
	LDAP SSL Port 636
Domain Name	
Base DN	DC=adufjitsu,DC=co,DC=jp
Groups directory as sub-tree from base DN	
User Search Context	
LDAP Group Scheme	group
LDAP Member Scheme	member

Directory Service Access Configuration

LDAP Auth UserName	
LDAP Auth Password	
Confirm Password	
Principal User DN	
Append Base DN to Principal User DN	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
Bind DN	cn=adminadmin,ou=1-1,ou=fct,DC=adufjitsu,DC=co,DC=jp
Enhanced User Login	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
User Login Search Filter	(&(objectclass=person)(cn=%s))

Apply Cancel Test LDAP

- b. Enter each item in [Directory Service Configuration] Window.

Settings for Active Directory

Select Active Directory to Directory Server Type and set each setting items.

Remark

If other Directory Service of Directory Server Type is selected each setting items are initialized.

TABLE 3.9 Setting item in [Directory Service Configuration] Window (Active Directory)

Item		Setting value and description
Global Directory Service Configuration		
LDAP		The Enabled/Disabled of LDAP.
LDAP SSL		When the transmission of the data between MMB and the directory server is encrypted with SSL, select the "Enabled".
Directory Server Type		Select Directory Service. If other Directory Service of Directory Server Type is selected each setting items are initialized.
Primary LDAP Server	The setting of Directory Server.	
	LDAP Server	IP Address or DNS name of Directory Server
	LDAP Port	LDAP Port of Directory Server (using in SSL Disabled)
	LDAP SSL Port	Secure LDAP Port of Directory Server (using in SSL Enabled)
Backup LDAP Server	LDAP Server	The setting of Backup Directory Server. When Backup Directory Server is not used these items can be omitted.
	LDAP Port	
	LDAP SSL Port	
Domain Name		Full path name of DNS of Backup Directory Server.
Base DN		Setting is not needed. Base DN is generated from Domain Name.
Groups directory as sub-tree from base DN		The path of Organizational Unit (OU) including Group.
User Search Context		Setting is not needed.
LDAP Group Scheme		Setting is not needed.
LDAP Member Scheme		Setting is not needed.
Directory Service Access Configuration		
LDAP Auth UserName		User name to log in LDAP Server
LDAP Auth Password		User password to log in LDAP Server
Confirm Password		User password to reconfirm. (Input the same content as LDAP Auth Password.)
Principal User DN		Setting is not needed.
Append Base DN to Principal User DN		Setting is not needed.
Bind DN		Setting is not needed.
Enhanced User Login		Setting is not needed.
User Login Search Filter		Setting is not needed.

The setting example is shown as follows.

FIGURE 3.52 [Directory Service Configuration] Window (Active Directory) (The setting example 1)

Partition User Administration Network Configuration Maintenance Logout
Administration > LDAP Configuration > Directory Service Configuration

List
Change Password
LDAP Configuration
Directory Service Configuration
LDAP User Group List

Directory Service Configuration

Click the Apply Button to apply all changes.

Global Directory Service Configuration

LDAP	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
LDAP SSL	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Directory Server Type	Active Directory
Primary LDAP Server	LDAP Server
	LDAP Port
	LDAP SSL Port
Backup LDAP Server	LDAP Server
	LDAP Port
	LDAP SSL Port
Domain Name	adfujitsu.co.jp
Base DN	DC=adfujitsu,DC=co,DC=jp
Groups directory as sub-tree from base DN	OU=Groups
User Search Context	CN=Users,DC=adfujitsu,DC=co,DC=jp
LDAP Group Scheme	group
LDAP Member Scheme	member

Apply Cancel Test LDAP

FIGURE 3.53 [Directory Service Configuration] Window (Active Directory) (The setting example 2)

Partition User Administration Network Configuration Maintenance Logout
Administration > LDAP Configuration > Directory Service Configuration

List
Change Password
LDAP Configuration
Directory Service Configuration
LDAP User Group List

Directory Service Configuration

Help

Backup LDAP Server	LDAP Port
	LDAP SSL Port
Domain Name	adfujitsu.co.jp
Base DN	DC=adfujitsu,DC=co,DC=jp
Groups directory as sub-tree from base DN	OU=Groups
User Search Context	CN=Users,DC=adfujitsu,DC=co,DC=jp
LDAP Group Scheme	group
LDAP Member Scheme	member

Directory Service Access Configuration

LDAP Auth UserName	Administrator
LDAP Auth Password
Confirm Password
Principal User DN	
Append Base DN to Principal User DN	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
Bind DN	cn=Administrator,CN=Users,DC=adfujitsu,DC=co,DC=jp
Enhanced User Login	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
User Login Search Filter	(&(objectclass=person)(cn=%s))

Apply Cancel Test LDAP

Settings for Novell eDirectory/OpenLDAP/OpenDS/Open DJ

Select using Directory Service (Novell eDirectory, OpenLDAP, OpenDS/Open DJ) from Directory Server Type and set each setting items.

Remark

If other Directory Service of Directory Server Type is selected each setting items are initialized.

TABLE 3.10 Setting item in [Directory Service Configuration] Window (Novell eDirectory/OpenLDAP/OpenDS/OpenDJ)

Item		Setting value and description
Global Directory Service Configuration		
LDAP		The Enabled/Disabled of LDAP.
LDAP SSL		When the transmission of the data between MMB and the directory server is encrypted with SSL, select the "Enabled".
Directory Server Type		Select Directory Service. If other Directory Service of Directory Server Type is selected each setting items are initialized.
Primary LDAP Server	The setting of Directory Server.	
	LDAP Server	IP Address or DNS name of Directory Server
	LDAP Port	LDAP Port of Directory Server (using in SSL Disabled)
	LDAP SSL Port	Secure LDAP Port of Directory Server (using in SSL Enabled)
Backup LDAP Server	LDAP Server	The setting of Backup Directory Server. When Backup Directory Server is not used these items can be omitted.
	LDAP Port	
	LDAP SSL Port	
Domain Name		Setting is not needed.
Base DN		Specifying of Base DN.
Groups directory as sub-tree from base DN		<p>The path of Organizational Unit (OU) including Group. Specify the path from Base DN.</p> <p>In BA16036, BB16036 or later, this can be omitted. When this item is omitted, value of Base DN is set as search start point.</p> <p>In version before BA16036, BB16036, this cannot be omitted.</p>
User Search Context		<p>In BA16036, BB16036 or later, this can specify the starting position of the user search. When this item is omitted, value of Base DN is set after applying.</p> <p>In version before BA16036, BB16036, setting is not needed.</p>
LDAP Group Scheme		<p>In BA16036, BB16036 or later, this can set LDAP Group Scheme. The initial value is "groopOfNames".</p> <p>Setting value changes by the Directory structure that was built on the directory server.</p> <p>In version before BA16036, BB16036, setting is not needed.</p>
LDAP Member Scheme		<p>In BA16036, BB16036 or later, this can set LDAP Member Scheme.</p> <p>The initial value is "member".</p> <p>Setting value changes by the Directory structure that was built on the directory server.</p> <p>In version before BA16036, BB16036, setting is not needed.</p>

Item	Setting value and description
Directory Service Access Configuration	
LDAP Auth UserName	User name to log in LDAP Server
LDAP Auth Password	User password to log in LDAP Server
Confirm Password	User password to reconfirm. (Input the same content as LDAP Auth Password.)
Principal User DN	Setting of Principal User DN.
Append Base DN to Principal User DN	Specifying of adding Base DN to Principal User DN.
Bind DN	Setting is not needed. Principal User DN using by LDAP authentication is displayed after setting is saved.
Enhanced User Login	In BA16036, BB16036 or later, this can set the Enable/Disable of Enhanced User Login. When enabled, specifying of the user login search filter is available. In version before BA16036, BB16036, setting is not needed.
User Login Search Filter	In BA16036, BB16036 or later, this can set the User Login Search Filter. The standard Search Filter “(&(objectclass=person)(cn=%s))” is displayed. For login, the place holder “%s” is replaced to corresponding Global Login. Setting value changes by the Directory structure that was built on the directory server. In version before BA16036, BB16036, setting is not needed.

The setting example is shown as follows.

FIGURE 3.54 [Directory Service Configuration] Window (OpenLDAP) (The setting example 1)

System **Partition** **User Administration** **Network Configuration** **Maintenance** Logout

>User Administration >LDAP Configuration >Directory Service Configuration

Directory Service Configuration Help

Click the Apply Button to apply all changes.

Global Directory Service Configuration

LDAP	<input checked="" type="radio"/> Enable <input type="radio"/> Disable	
LDAP SSL	<input type="radio"/> Enable <input checked="" type="radio"/> Disable	
Directory Server Type	Open LDAP	
Primary LDAP Server	LDAP Server	10.26.102.197
	LDAP Port	389
	LDAP SSL Port	636
Backup LDAP Server	LDAP Server	
	LDAP Port	389
	LDAP SSL Port	636
Domain Name		
Base DN	dc=CASdomain,dc=local	
Groups directory as sub-tree from base DN	ou=mmbAuth	
User Search Context	ou=mmbUser,dc=CASdomain,dc=local	
LDAP Group Scheme	groupOfNames	
LDAP Member Scheme	member	

Apply Cancel Test LDAP

FIGURE 3.55 [Directory Service Configuration] Window (OpenLDAP) (The setting example 2)

System **Partition** **User Administration** **Network Configuration** **Maintenance** Logout

>User Administration >LDAP Configuration >Directory Service Configuration

Directory Service Configuration Help

Backup LDAP Server

LDAP Port	389
LDAP SSL Port	636

Domain Name

Base DN dc=CASdomain,dc=local

Groups directory as sub-tree from base DN ou=mmbAuth

User Search Context ou=mmbUser,dc=CASdomain,dc=local

LDAP Group Scheme groupOfNames

LDAP Member Scheme member

Directory Service Access Configuration

LDAP Auth UserName	
LDAP Auth Password
Confirm Password
Principal User DN	cn=mmbadmin,ou=mmbUser,dc=CASdomain,dc=local
Append Base DN to Principal User DN	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
Bind DN	cn=mmbadmin,ou=mmbUser,dc=CASdomain,dc=local
Enhanced User Login	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
User Login Search Filter	(&(objectclass=person)(cn=%s))

Apply Cancel Test LDAP

- c. Click [Apply] button after input each setting item.
-> Dialog box of confirming is displayed.
- d. Click [OK] button.
-> The setting is reflected.

4. Evaluating LDAP connection

Remark

- Evaluate LDAP connection before current session of MMB Web-UI is closed.
- When setting of [Directory Service Configuration] Window is changed, click [Apply] button before evaluating LDAP connection. If LDAP connection is evaluated before [Apply] button is clicked, LDAP connection is evaluated at previous setting.
- It becomes impossible to log in MMB by Local User ID and Global User ID when the session of MMB Web-UI is closed while having failed in LDAP connection test or having mistaken a set value of LDAP. In that case, log in by Special Account and correct setting of LDAP.

- a. Click a [Test LDAP] in [Directory Service Configuration] Window.
->Connected test is executed.

FIGURE 3.56 [Directory Service Configuration] Window (Test LDAP)

Administration > LDAP Configuration > Directory Service Configuration

Directory Service Configuration

Click the Apply Button to apply all changes.


Global Directory Service Configuration

LDAP	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
LDAP SSL	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Directory Server Type	Active Directory
Primary LDAP Server	LDAP Server
	LDAP Port
	LDAP SSL Port
Backup LDAP Server	LDAP Server
	LDAP Port
	LDAP SSL Port
Domain Name	adfujitsu.co.jp
Base DN	DC=adfujitsu,DC=co,DC=jp
Groups directory as sub-tree from base DN	OU=Groups
User Search Context	CN=Users,DC=adfujitsu,DC=co,DC=jp
LDAP Group Scheme	group
LDAP Member Scheme	member

Apply Cancel Test LDAP


- b. Check the result of test.
- When connection test is succeeded following dialog box is displayed.

FIGURE 3.57 Dialog box which in case connection test is succeeded.

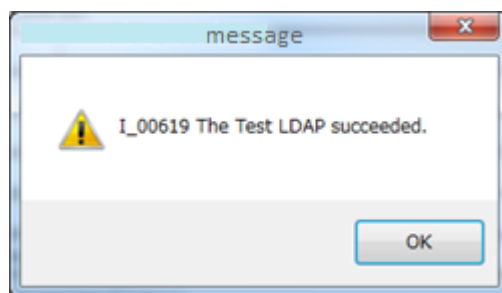

- When connection test is failed following dialog box is displayed.

FIGURE 3.58 Dialog box which in case connection test is failed.

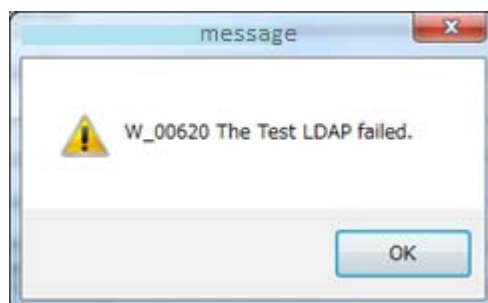

3.7 Storage of the configuration information

Here explains the storage of the information configured at the time of installation. Take the backup of the MMB configuration information.

Remark

Regularly take the backup of the MMB configuration information after the operation begins. All the printed windows are examples of the display. The contents that are displayed by the system configuration are different.

3.7.1 Backup of the MMB configuration information

Here explains the Backup of the MMB configuration information.

Remark

The configuration information is restorable only with the PRIMEQUEST chassis which backed it up. For the details of MMB configuration information restore see "8.12 Backup/Restore of MMB configuration n information" of PRIMEQUEST 2000 Series Administration Manual (CA92344-0537).

Operating principle

1. Click [Maintenance] - [Backup/Restore Configuration] - [Backup/Restore MMB Configuration]
→ The Backup/Restore MMB Configuration window is displayed. For [Backup/Restore MMB Configuration] window see "[Backup/Restore MMB Configuration] window" of "1.6.2 [Backup/Restore Configuration] menu" of PRIMEQUEST 2000 series Tool Reference (CA92344-0539).

FIGURE 3.59 Example of [Backup/Restore MMB Configuration] Window



2. Click the [Backup] button.
→ The storage location dialog box of the browser is displayed.
3. Select the storage path and click the [OK] button.
→ The download of configuration information file begins.

The initial value name of the MMB configuration information file to be backed up is as follows.

```
MMB_(Backup date)_(MMB version).dat
```

CHAPTER 4 Installation of Operating System and bundled software

The installation method of operating system and the bundled software is explained here.

All the inserted windows are examples of display and the contents displayed by the system configuration, etc. are different.

4.1 Installation procedure of Operating System and bundled software

When Boot Watchdog is enabled, during installation operation, partition reset may occur unpredictably by Boot Watchdog function. Therefore, Boot Watchdog is cancelled before operating system is installed. For the cancellation method see "9.4.1 Automatic reboot condition setting of partition" of PRIMEQUEST 2000 series Administration Manual (CA92344-0537). SVIM(ServerView Installation Manager) is used to install operating system in the partition of PRIMEQUEST 2000 series. SVIM is a setup support tool to execute the below mentioned operations.

- Installation of operating system
- Installation of driver necessary for the operating system
- Installation of the bundled software

For the software which is automatically installed by using SVIM see "3.3 Bundled software" of PRIMEQUEST 2000 series General Description (CA92344-0534).

For SVIM outline see ServerView Suite ServerView Installation Manager.

Moreover, there are points to be noted for SVIM. See FUJITSU Server PRIMEQUEST 2000/1000 Series Notes on ServerView Suite(CA92344-0679).

Notes

Confirm the installation of SAN boot environment, installation of VMware as follows.

- Configuration of SAN boot environment
When SAN boot environment is to be installed, the SAN boot environment is configured before the operating system is installed.
For the construction of SAN boot environment, see PRIMEQUEST 2000 Series SAN Boot Environment Configuration Manual.
- When the installation VMware of operating system and the bundled software is to be installed then the procedure is different. For Notes on VMware installation, see "[Appendix D Notes on VMware installation](#)".

Notes

Disable Secure Boot before you install OS.

Secure boot is set by BIOS menu. Initial value of secure boot is "disabled". Please see PRIMEQUEST 2000 Series Tool Reference for setting method of secure boot.

4.2 Install procedure of Operating System to Extended Partition

Here explains the points to be noted for the procedure to install Operating System to Extended Partition.

- Virtual Media is available to only one Extended Partition of PPAR Partition if VGA/USB2 is assigned to the Extended Partition. Therefore, when OS is installed with another Extended Partition on the same Physical Partition after installation of OS, it is necessary to power OFF the Physical Partition and reassignment of VGA/USB2 to the Extended Partition which carries out OS installation.

Please release of VGA/USB2 to the Extended Partition after installation of OS, driver and tool.

- Before installing the OS, assign a VGA/USB2 temporarily to the relevant extended partition.
In the case of the extended partition which is not assigned a VGA, the serial interface is required.

Fixed as follows:

Example

In case of RHEL7

1. Change setting file
Add "console = ttyS0, 115200" in the GRUB_CMDLINE_LINUX of /etc/default/grub
2. Reflect changes
 - In case of UEFI boot
Execute "grub2-mkconfig -o /boot/efi/EFI/redhat/grub.cfg" command.
 - In case of Legacy boot
Execute "grub2-mkconfig -o /boot/grub2/grub.cfg" command.

In case of RHEL6

- Comment out the line of splashimage = (hd0, 1) / grub / splash.xpm.gz in /etc/grub.conf
- Added "console = ttyS0, 19200n8" in the kernel line of /etc/grub.conf in /etc/grub.conf
- In case of RHEL7.1 or RHEL6.6, set "udevtimeout = 3600" to kernel option. If the kernel option was not set, boot time of the Extended Partition with LAN device might extended for ten minutes or more compared with the time that was been set.
- Don't set "notsc" or "clocksource=hpet" kernel option in RHEL7.1 and RHEL6.6.
- When the OS starts "Fast TSC calibration failed" appears in RHEL message.
This message is output when access performance to the PIT (Programmable Interval Timer) is less than the expected value in TSC (Time Stamp Counter) adjustment process of OS boot. This cause is virtualization overhead of PIT, which is performed by the Extended Partitioning Firmware. But in this case, the system does not be affected because the OS switches automatically to the HPET (High Precision Event Timer).
- During booting of RHEL6.6, the messages of "irq NN: nobody cared (try booting with the "irqpoll" option)" and "Disabling IRQ #NN" may be logged. But if NN is from 16 to 19, these messages have no impact to OS's operation.
- Legacy boot from Emulex Single Port Fibre Channel Card or Dual Port Fibre Channel Card are not supported in Extended Partition. The boot from these cards is supported only in UEFI mode.
- If FC Card in PCI_Box is used, installation the module which matches firmware version in hot-plug operation is needed. Get the module in following URL and install the module after OS installation.
<http://support.ts.fujitsu.com/Download/Index.asp>
- Don't redirect kdump to the remote host via Extended Socket. Please use the host which is not routed through Extended Socket.
- In case of RHEL7.1 and RHEL7.2, Check that Extended Socket Driver is installed for using Extended Socket function.
Execute following command after OS installation. RHEL7.3 and later does not need this confirmation.

```
rpm -qa | grep fjexsock
```

If "kmod-fjexsock-X (X depends on OS or Driver version)" is not displayed, the driver is not installed. Download the driver from following URL and install the driver.

<http://support.ts.fujitsu.com/Download/Index.asp>

- > Fujitsu Server PRIMEQUEST
- > PRIMEQUEST 2000 Series
- > PRIMEQUEST 2400E3/2800E3/2400E2/2800E2/2400E/2800E
- > Red Hat Enterprise Linux Server
- > Red Hat Enterprise Linux7 (X86_64)
- > Device Driver
- > RHDUP driver package fjexsock for RHELX.X
- When personality configuration of CNA card or LAN card is changed in BIOS menu, the change is not reflected by rebooting Extended Partition. To reflect the change, reset Physical Partition or change personality configuration on Physical Partition.
- Memory size may be insufficient for kdump execution when Extended Socket is enabled. In this case, please adjust crashkernel parameter in accordance with Linux User's Manual.
- Please use kernel revision of 3.10.0-327.10.1.el7 or later for RHEL7.2.
- If you use hardware RAID, errors like "Adapter PRAID EP 420x: Controller encountered a fatal error and was reset" may be registered at OS startup, however there is no operational problem.
- When activating the RAID software license from ServerViewRAID Manager, turn off / on the physical partition instead of rebooting the extended partition after entering the activation key.

4.3 Procedure to install Windows in SAN/iSCSI storage device

Here explains the procedure to install Windows in SAN storage device. Start the installation after confirming the MMB configuration setting and successful login to the MMB.

4.3.1 Presetting

The following settings are done if necessary.

1. LUN of SAN storage device is set.
2. [PCI ROM Priority] of BIOS is set.
 - For the UEFI Install
 - Set [Device Manager]-[PCI Subsystem Configuration]-[PCI ROM Priority] of BIOS menu to "EFI Compatible ROM".
 - For the Legacy Install:
 - Set [Device Manager]-[PCI Subsystem Configuration]-[PCI ROM Priority] of BIOS menu to "Legacy ROM".
 - Set [Device Manager]-[PCI Subsystem Configuration]-[OpROM Scan Configuration] of BIOS menu to "Enable" only for booting Device.
3. BIOS is set to recognize LUN of FC card.

For the settings of FC card, Converged Network Adapter and NIC for iSCSI Boot, see PRIMEQUEST 2000 Series SAN Boot Environment Configuration Manual.
4. The partition settings in MMB are confirmed after the internal HDD/SDD of PRIMEQUEST is removed.
 - SB/IOU configuration is set
See "[3.4.1 Setting the partition configuration](#)"
 - Console redirection is set
See "[3.4.6 Settings of Console Redirection](#)"
 - Video redirection: Enable
 - Virtual media: Enable
 - Various modes are set
See "[3.4.5 Various mode settings](#)"
5. Only LUN which becomes the installation target of SAN storage device is connected to the partition of PRIMEQUEST.

For the settings of SAN storage device, see "Attached manual in the SAN storage device".
6. I/O space is allocated in PCI Cards. For the allocation of I/O space, see "[3.4.5 Various mode settings](#)" in this document and "3.4.4.2 I/O Space Assignment Configuration" of PRIMEQUEST 2000 series Tool Reference (CA92344-0539).

4.3.2 Preparation for installation

The following preparations are done.

1. The following disk images should be prepared.
Media of Windows operating system
2. FC cable is made a single path (Connection of only 1 FC cable).

4.3.3 Installation of operating system

Operating system installation by SVIM is explained.

There are the following types in the operating system installation by SVIM. For the detailed procedure of the respective modes, see ServerView Suite ServerView Installation Manager.

TABLE 4.1 Operating system installation by SVIM

Mode	Function Overview	Objective
Quick Mode	The operating system can be installed in the state recommended by Fujitsu by only executing the required minimum settings.	This mode is used when operating system is easily installed.
Guide Mode	It is set according to wizard set up information. The information that was set, is saved in a configuration file and can be used at the time of re-install	This mode is used for advanced setting of RAID and operating system.

All the inserted windows are examples of display and the contents displayed by the system configuration, etc. are different.

Operations

1. Make the settings by which the ServerView Suite DVD is booted from the virtual media for the partition.
For settings, see “1.6.2 Remote control operation (BMC)” of PRIMEQUEST 2000 series Administration Manual (CA92344-0537).

2. Connect ServerView Suite DVD 1 by the virtual media, and then turn on the power supply of the partition.

Notes

The UEFI boots or the Legacy boots can be selected in the following procedure.

- a. Select [Force boot into EFI Boot Manager] in MMB Web-UI.
- b. Turn on the power supply of partition
- c. The menu is selected in the following order by the Boot Manger front page. [Boot Maintenance Manager]- [Boot Options]- [Change Boot Order]- [Change the order]
- d. For UEFI aware OS, UEFI: Fujitsu Virtual CDROMx xxx is set at the upper-most step.
For Legacy OS, Fujitsu Virtual CDROMx xxx is set at the upper-most step.
For the Boot order setting method, see “■ Change of priority level (Change Boot Order)” of “3.5.2 [Boot Options] menu” of PRIMEQUEST 2000 series Tool Reference (CA92344-0539).
- e. Select [Commit Changes and Exit].
- f. Return to the front page pushing the escape key twice.
- g. Select [Boot Manager].
- h. For UEFI aware OS, select UEFI: Fujitsu Virtual CDROMx xxx.
For Legacy OS, select Fujitsu Virtual CDROMx xxx.

Warning

In the case of installation to SAN storage device, make sure to select CDROM from [BootManager] manually and boot SVIM. If you boot SVIM from CDROM by Reset or Partition OFF/ON automatically, SAN storage is not detected.

3. Windows Boot Manager is displayed. Select the first menu in Windows Boot Manager.
4. After a period of time, the language selection window is displayed. In case of English, select "English".
5. Click the "Next" button without setting anything on the initial display window.
6. [Deployment] is selected by the [To Welcome ServerView Installation Manager].
7. Installation mode is selected, operating system to be installed is selected and the operating system is set.

Remark

IP address of LAN cannot be set by the setting of operating system. Set the IP address after operating system installation.

8. Click "Installation start-up".
The installation starts.
9. It is replaced to the installation medium of operating system according to the SVIM instruction.

4.3.4 Bundled software setting after installation is completed

Bundled software is set after the completion of operating system installation.

1. OneCommand Manager is installed in the following cases.
 - When the Emulex FC card or Converged Network Adapter Card is mounted.
And
 - When OneCommandManager is not installedThe installation condition of OneCommandManager is determined by the presence of [Emulex] – [OneCommand Manager] under the [start] menu – [all programs].

Note

In Windows Server 2016, Windows Server 2012 R2 or Windows Server 2012, "the [start] menu – [all programs]" should read "the [start] menu – [all apps]".

- a. Driver/Utility of FC Card is downloaded from the following URL.
<http://support.ts.fujitsu.com/>

Note

Driver/ Utility can be used by the PRIMEQUEST 2000 series though PRIMERGY is described in the downloaded binary.

- b. The downloaded file is executed by a double click.
The prompt window of cmd.exe (black window) is displayed for a while and the file is extracted.
- c. The window closes automatically after the extraction is completed.
The download file is extracted and folder or file is newly created.

Remark

If the window does not close even if "Complete" is displayed on the title bar of the window then click the "Close" button and close the window.

- d. Double click and execute "elxocm-windows-x86-XXXXX.exe"(in case of x86, 32-bit OS) or "elxocm-windows-x64-XXXXX.exe"(in case of x64, 64-bit OS) in "FC_vXXXXXX" directory created by extraction.

Remark

"XXXX" shows the version number. Read properly.

2. Qlogic Converge Console (GUI/CLI) is installed in the following cases.

- When the Qlogic FC card is mounted.

And

- When Qlogic Converge Console (GUI/CLI) is not installed

The installation condition of Qlogic Converge Console (GUI) is determined by the presence of [Qlogic Corporation] – [QCC GUI (localhost)] or [QCC GUI(127.0.0.1)] under the [start] menu – [all programs]

The installation condition of Qlogic Converge Console (CLI) is determined by the presence of [Qlogic Management Suite] -[QConvergeConsole CLI] under the [start] menu – [all programs]

Note

In Windows Server 2016, Windows Server 2012 R2 or Windows Server 2012, "the [start] menu – [all programs]" should read "the [start] menu – [all apps]".

- a. Driver/ Utility of FC Card is downloaded from the following URL.

<http://support.ts.fujitsu.com/>

Note

Driver/Utility can be used by the PRIMEQUEST 2000 series though PRIMERGY is described in the downloaded binary.

- b. The downloaded file is executed by a double click.

The prompt window of cmd.exe (black window) is displayed for a while and the file is extracted.

- c. The window closes automatically after the extraction is completed.

The download file is extracted and folder or file is newly created.

Remark

If the window does not close even if "Complete" is displayed on the title bar of the window then click the "Close" button and close the window.

- d. Double click and execute "QConvergeConsole_Installer_Windows_XXXXX.exe" in "QCC_vXXXXXX" directory created by extraction.

Remark

"XXXX" shows the version number. Read properly.

3. When the installation is completed, the partition is rebooted.

4. The setting of management LAN is confirmed.

Confirm STP function for switch is turned off if the switch is connected to management LAN for MMB.

5. The trap destination and mail destination are set through MMB.

Execute the coordination with the management software, etc. only if necessary.

- a. [SNMP settings] is displayed on the MMB window and enable [SNMP] .

- b. The trap destination of SNMP through MMB is set.

["6.5.2 Set up of SNMP"](#)

6. Dump area is set.

Confirm that there is sufficient free space on the hard disk before acquiring the memory dump.

For details, see "11.4.3 Settings of dump environment (Windows)" of PRIMEQUEST 2000 series Administration Manual (CA92344-0537).

7. The management information and configuration information are stored.

For details, see ["5.7 Saving management and configuration information"](#).

8. UPS battery monitor is set.

When the duration of life of the UPS battery is monitored: see "Setting for component replacement alert for PRIMEQUEST ". This document is downloaded from the following URL.

<http://www.fujitsu.com/global/products/computing/servers/mission-critical/primequest/documents/manuals/>

9. Watchdog Timer allows reboot OS in case that OS freezes. Rebooting OS is executed when the set time passes, For details, see “8.4 Automatic Partition Restart Conditions” of PRIMEQUEST 2000 series Administration Manual (CA92344-0537).

4.3.5 Connection of SAN and the internal HDD/SDD after installation

For SAN and the internal HDD/SDD connection after the completion of installation, see PRIMEQUEST 2000 Series SAN Boot Environment Configuration Manual.

1. Change and confirm the settings of the detailed information of the FC card.
For details, see PRIMEQUEST 2000 Series SAN Boot Environment Configuration Manual.
2. OneCommand Manager is started. The following driver parameters are set.
For the details of the set value, see San storage device manual.
 - Topology
 - Queue Depth
 - Queue Target
 - Link Speed
3. Check the registry information.
For details on the checking method, see PRIMEQUEST 2000 Series SAN Boot Environment Creation Manual.
For details on setting value, see Manual of SAN storage device.
 - TimeOutValue

4.4 Procedures to install Windows into internal HDD/SSD

This section briefly describes the procedures by which Windows is installed in the internal HDD/SSD. Start the installation after checking the MMB configuration and successful to log in to the MMB.

4.4.1 Presetting

If necessary, the following settings are done.

1. Remove each built-in HDD that is not the installation destination.
2. The setting of partition is checked by MMB.
 - Setting of configuration of SB/IOU
See “[3.4.1 Setting the partition configuration](#)”
 - Setting of Console Redirection
See “[3.4.6 Settings of Console Redirection](#)”
 - Video redirection: Enable
 - Virtual media: Enable
 - Setting of various modes
See “[3.4.5 Various mode settings](#)”
3. [PCI ROM Priority] of BIOS is set.

- For the UEFI Install
 - Set [Device Manager]-[PCI Subsystem Configuration]-[PCI ROM Priority] of BIOS menu to "EFI Compatible ROM".
 - For the Legacy Install:
 - Set [Device Manager]-[PCI Subsystem Configuration]-[PCI ROM Priority] of BIOS menu to "Legacy ROM".
 - Set [Device Manager]-[PCI Subsystem Configuration]-[OpROM Scan Configuration] of BIOS menu to "Enable" only for booting Device.
4. The I/O space is allocated in the SAS card and in the SAS RAID controller card.
For details on allocation of I/O space, see "3.4.5 Various mode settings" and [Configure I/O Space Assignment menu] of PRIMEQUEST 2000 series Tool Reference (CA92344-0539).

4.4.2 Preparations for installation

The following preparations are done.

1. The following disk images are prepared.
Media of Windows operating system
2. Remove all FC cables.
3. Mount the following disk image by connecting the video redirection.
4. Change the boot order, and set DVD Boot to the top priority of the starting order.
For details, see "1.3.1 [Power Control] window" of PRIMEQUEST 2000 series Tool Reference (CA92344-0539).

4.4.3 Installation of operating system

This section explains the installation of operating system using SVIM.

There are the following types of operating system installations using SVIM.

For the detailed procedures of each mode, see ServerView Suite ServerView Installation Manager.

TABLE 4.2 Operating System Installation using SVIM

Mode	Functional Overview	Purpose
Quick mode	You can simply use the minimum settings necessary for operating system installation. This mode uses Fujitsu's recommended settings.	For easy installation.
Guide mode	You can specify setup information by following the instructions of the wizard. You can save the specified information in a configuration file for use during reinstallation.	For detailed setting of RAID or OS.

All the screenshots are the display examples. Contents displayed may differ depending on system configuration.

Operations

1. If setting is done, you can boot the ServerView Suite DVD from virtual media for the partition.
For details on configuration, see "1.6.2 Remote control operation (BMC)" of PRIMEQUEST 2000 series Administration Manual (CA92344-0537).
2. Connect ServerView Suite DVD 1 by the virtual media, and then turn on the power supply of the partition.

Note

It can be started by selecting "Force boot from DVD" by Boot Selector in MMB Web-UI or it can be started from the virtual media by changing the boot order to DVD by UEFI. If it is started by selecting "Force boot from DVD" by Boot

Selector in MMB Web-UI it is started in Legacy mode.

When operating system corresponds to the UEFI mode, the installation can be done in UEFI mode by changing the boot order according to the following procedure.

- a. After turning on the power supply of the partition, while the FUJITSU logo is displayed, press any key (such as [Space] key) except [Enter] key and the Boot Manager front page is displayed.
 - b. The menu is selected on the Boot Manager front page in the following order. [Boot Maintenance Manager]-[Boot Options]-[Change Boot Order]-[Change the order]
 - c. For UEFI aware OS, UEFI: Fujitsu Virtual CDROMx xxx is set at the upper-most step.
For Legacy OS, Fujitsu Virtual CDROMx xxx is set at the upper-most step.
For details on the setting method of boot order, see "■ Change Boot Order of "3.5.2 [Boot Options] menu" of PRIMEQUEST 2000 series Tool Reference (CA92344-0539).
 - d. [Commit Changes and Exit] - [Reset System] is specified and the partition is rebooted.
3. After a period of time, the language selection window is displayed. In case of English, select "English".
 4. In initial display window, click the [Next] button as follows without setting anything.
 5. Select [Deployment] on the [To Welcome ServerView Installation Manager] window.
 6. Select the installation mode and the operating system to be installed and set the operating system.

Remark

The IP address of LAN cannot be set in the setting of operating system. Set the IP address after installing the operating system.

7. Click [Installation Start].
The installation is started.
8. Replace with the installation medium of the operating system according to the instructions of SVIM.

4.4.4 Setting the bundled software after completion of installation

After completion of operating system installation, set the bundled software.

1. Install OneCommand Manager in the following cases.
 - When the Emulex FC card or Converged Network Adapter Card is mounted and
 - When the OneCommand Manager is not installed.It can be judged whether [Emulex] -[OneCommand Manager] exist under [Start] menu-[All programs] in the installation status of OneCommand Manager.

Note

In Windows Server 2016, Windows Server 2012 R2 or Windows Server 2012, "the [start] menu – [all programs]" should read "the [start] menu – [all apps]".

- a. Download the driver/utility of FC card or Converged Network Adapter Card from the following URL.
<http://support.ts.fujitsu.com/>

Note:

The driver/utility can be used in the PRIMEQUEST 2000 series though PRIMERGY is described in the downloaded binary.

- b. Double click the downloaded file and execute it.
The prompt screen of cmd.exe (black window) is displayed for a while and the file is extracted.

- c. The window is closed automatically when the extraction is completed.
The downloaded file is uncompressed, and the folder or the file is created newly.

Remark

When the window is not closed even if displayed as [Complete] in the title bar of the window, click the [Close] button and close the window.

- d. Double-click the "elxocm-windows-x86-XXXXX.exe"(in case of x86, 32-bit OS) or "elxocm-windows-x64-XXXXX.exe"(in case of x64, 64-bit OS) in the "FC_vXXXXXX" directory created in the decompression, and execute it.

Remark

"XXXXX" shows the version number. Read it in different way properly.

2. Qlogic Converge Console (GUI/CLI) is installed in the following cases.
 - When the Qlogic FC card is mounted.
and
 - When Qlogic Converge Console (GUI/CLI) is not installed
 - The installation condition of Qlogic Converge Console (GUI) is determined by the presence of [Qlogic Corporation] – [QCC GUI(localhost)] or [QCC GUI(127.0.0.1)] under the [start] menu – [all programs]
 - The installation condition of Qlogic Converge Console (CLI) is determined by the presence of [Qlogic Management Suite] –[QConvergeConsole CLI] under the [start] menu – [all programs]

Note

In Windows Server 2016, Windows Server 2012 R2 or Windows Server 2012, "the [start] menu – [all programs]" should read "the [start] menu – [all apps]".

- a. Driver/ Utility of FC Card is downloaded from the following URL.
<http://support.ts.fujitsu.com/>

Note

Driver/Utility can be used by the PRIMEQUEST 2000 series though PRIMERGY is described in the downloaded binary.

- b. The downloaded file is executed by a double click.
The prompt window of cmd.exe (black window) is displayed for a while and the file is extracted.
- c. The window closes automatically after the extraction is completed.
The download file is extracted and folder or file is newly created.

Remark

If the window does not close even if "Complete" is displayed on the title bar of the window then click the "Close" button and close the window.

- d. Double click and execute "QConvergeConsole_Installer_Windows_XXXXX.exe" in "QCC_vXXXXXX" directory created by extraction.

Remark

"XXXXX" shows the version number. Read properly.

3. When the installation is completed, reboot the partition.
4. Check the setting of management LAN.
The STP function of the port to be connected is turned OFF when the management LAN is used for communication with MMB in the switching hub which supports the STP function.
5. Set the trap destination and Mail Sending destination through MMB.
Execute linkage with the operation management software only if necessary.
 - a. The [SNMP setting] is displayed on the MMB screen, and enable the SNMP.

- b. The trap destination of SNMP is set through MMB.
See “6.5.2 Set up of SNMP”
6. Set the dump area.
Check whether there is sufficient free space in the hard disk before acquiring the memory dump. For details, see (“11.4.4 Setting (Windows) of dump environment” of PRIMEQUEST 2000 series Administration Manual (CA92344-0537).
7. Save the management information and configuration information.
For details, see “5.7 Saving management and configuration information”.
8. UPS battery monitor is set.
When the duration of life of the UPS battery is monitored: see “Setting for component replacement alert for PRIMEQUEST “. This document is downloaded from the following URL.
<http://www.fujitsu.com/global/products/computing/servers/mission-critical/primequest/documents/manuals/>
9. Watchdog Timer allows reboot OS in case that OS freezes. Rebooting OS is executed when the set time passes, For details, see “8.4 Automatic Partition Restart Conditions” of PRIMEQUEST 2000 series Administration Manual (CA92344-0537).

4.4.5 After Installation, Connection between SAN and internal HDD/SSD

For SAN and the internal HDD/SDD connection after the completion of installation, see PRIMEQUEST 2000 Series SAN Boot Environment Configuration Manual.

1. Change and confirm the settings of the detailed information of the FC card.
For details, see PRIMEQUEST 2000 Series SAN Boot Environment Configuration Manual.
2. OneCommand Manager is started. The following driver parameters are set.
For the details of the set value, see San storage device manual.
 - Topology
 - Queue Depth
 - Queue Target
 - Link Speed
3. Check the registry information.
For details on the checking method, see PRIMEQUEST 2000 Series SAN Boot Environment Creation Manual.
For details on setting value, see Manual of SAN storage device.
 - TimeOutValue

4.5 Procedures to install RHEL in SAN storage device

This section describes the procedure to install RHEL in SAN storage device.

Start the installation after confirming the MMB configuration and successful to log in to the MMB.

4.5.1 Presetting

Set the following if necessary.

1. Set the LUN of the SAN storage device.
2. [PCI ROM Priority] of BIOS is set.
 - For the UEFI Install
 - Set [Device Manager]-[PCI Subsystem Configuration]-[PCI ROM Priority] of BIOS menu to "EFI Compatible ROM".
 - For the Legacy Install:
 - Set [Device Manager]-[PCI Subsystem Configuration]-[PCI ROM Priority] of BIOS menu to "Legacy ROM".
 - Set [Device Manager]-[PCI Subsystem Configuration]-[OpROM Scan Configuration] of BIOS menu to "Enable" only for booting Device.
3. Set the BIOS to recognize LUN of the FC card, Converged Network Adapter and NIC for iSCSI Boot.
For setting the FC card, Converged Network Adapter and NIC for iSCSI Boot, see "Chapter 2 Setting of fiber channel card (FC card)" of PRIMEQUEST 2000 Series SAN Boot Environment Configuration Manual.
4. Check the setting of the partition by MMB after removing the internal HDD/SSD of PRIMEQUEST.
 - SB/IOU configuration is set
See "[3.4.1 Setting the partition configuration](#)"
 - Console redirection is set
See "[3.4.6 Settings of Console Redirection](#)"
 - Video redirection: Enable
 - Virtual media: Enable
 - Various modes are set
See "[3.4.5 Various mode settings](#)"
5. Connect only the LUN which installs the SAN storage device to the partition of PRIMEQUEST.
For the setting of SAN storage device, see the manual attached with the SAN storage device.
6. Allocate the I/O space in the FC card for boot path and in the SAS RAID controller card.
For details on allocation of the I/O space, see "[3.4.5 Various mode settings](#)" and "[3.4.4.2 I/O Space Assignment Configuration](#)" of PRIMEQUEST 2000 Series Tool Reference (CA92344-0539).

4.5.2 Preparation for installation

No RHEL distribution DVD is available for RHEL installation. Users who have purchased a RHEL subscription will need to create a RHEL distribution DVD.

Customer Portal :

<https://access.redhat.com/home>

Create an image of the RHEL distribution DVD.

Creation of RHEL installation DVD image

The image file of distribution DVD is downloaded by log in to the customer portal (<https://access.redhat.com/>) of Red Hat Company in other systems.

Note

The image file of distribution DVD is different for the minor release and each architecture (for Intel64). Download the targeted DVD image file.

Remark

The subscription registration to the customer portal of the Red Hat Company is required to download the file.

Preparation for boot

The FC cable is made single path (connect only one FC cable).

4.5.3 Execution of installation

The operating system installation with SVIM is explained.

There are the following types for operating system installation with SVIM. For the detailed procedure of each mode, see ServerView Suite ServerView Installation Manager.

TABLE 4.3 Operating system installation with SVIM

Mode	Functional Overview	Purpose
Quick mode	The operating system can be installed with the recommendation of Fujitsu only by setting minimum required limits.	It is used when the operating system is to be readily installed.
Guide mode	The setup information is set following the wizard. The information which is set is saved in the configuration file, and it can be used during reinstallation.	It is used when the details of RAID and the operating system are set.

Operations

1. The settings are done to boot the ServerView Suite DVD from virtual media for the partition.
For details on configuration, see "1.6.2 Remote control operation (BMC)" of PRIMEQUEST 2000 series Administration Manual (CA92344-0537).
2. Connect ServerView Suite DVD 1 by the virtual media, and then turn on the power supply of the partition.

Note:

The UEFI boots or the Legacy boots can be selected in the following procedure.

- a. Select [Force boot into EFI Boot Manager] in MMB Web-UI.
- b. Turn on the power supply of the partition.
- c. The menu is selected on the Boot Manager front page in the following order. [Boot Maintenance Manager]-[Boot Options]-[Change Boot Order]-[Change the order]
- d. For UEFI aware OS, UEFI: Fujitsu Virtual CDROMx xxx is set at the upper-most step.
For Legacy OS, Fujitsu Virtual CDROMx xxx is set at the upper-most step.
For details on the setting method of boot order, see "■ Change Boot Order of "3.5.2 [Boot Options] menu" of PRIMEQUEST 2000 series Tool Reference (CA92344-0539).
- e. Select [Commit Changes and Exit].
- f. Return to the front page pushing the escape key twice.
- g. Select [Boot Manager].

- h. For UEFI aware OS, select UEFI: Fujitsu Virtual CDROMx xxx.
For Legacy OS, select Fujitsu Virtual CDROMx xxx.

Warning

In the case of installation to SAN storage device, make sure to select CDROM from [BootManager] manually and boot SVIM. If you boot SVIM from CDROM by Reset or Partition OFF/ON automatically, SAN storage is not detected.

- 3. Windows Boot Manager is displayed. Select the first menu in Windows Boot Manager.
- 4. After a period of time, the language selection window is displayed.
In case of English, select "English".
- 5. In initial display window, click [Next] button without setting anything.
- 6. Select [Deployment] in [Welcome ServerView Installation Manager] window.
- 7. Select installation mode, select operating system to be installed and set the operating system.

Warning

If you select Guide mode in the environment where Dynamic Reconfiguration will be used, do not select [Minimum Install] on [Package Selection] window. Dynamic Reconfiguration cannot operate properly.

Remark

The IP address of LAN cannot be set in setting operating system. Set IP address after installing the operation system.

- 8. Click [Start installation].
The installation is started.
- 9. Replace with the installation medium of operating system according to the instructions of SVIM.

4.5.4 Configuring Bundled Software after Installation

Bundled software is configured after installing the operating system.

1. The trap destination from the partition is configured.

Remark

Configuring of the trap destination can be checked by using standard trap for SNMP service. For details, see “6.5.2 Set up of SNMP”.

2. The trap destination and Mail destination through MMB are configured.

In linkage with operations management software, it is configured only if necessary.

- Configuring SNMP trap destination through MMB

See “6.5.2 Set up of SNMP”

- The report destination and the filter are set when Alarm E-Mail is configured.

See “3.3.9 Set up of Alarm E-Mail”

3. OneCommand Manager is installed while installing FC card.

- a. By executing the following command, the libnl package information is displayed. Confirm that libnl is installed.

```
# rpm -qi libnl
```

If libnl is not installed, search libnl package in installation media of distribution, and install libnl package by executing the following command.

```
# rpm -ivh libnl-<version>-<release>.<arch>.rpm
```

Remark

Read the part of <version>, <release>, <arch> properly.

- b. Download the driver/utility of FC Card from the following URL.

<http://support.ts.fujitsu.com/Download/Index.asp>

Note

Though PRIMERGY is described in the downloaded binary, driver/utility can be used by the PRIMEQUEST 2000 series.

- c. The file to be downloaded is copied in an arbitrary directory of the PRIMEQUEST 2000 series and then extracted.

```
# tar xvfz F1010350.tar.gz
```


- d. The file given below is extracted.

Remark

For the method of installing “SNIA HBA API library”, see readme.txt extracted under HBA_API_LIB.

- e. Reboot the partition after installation.

FIGURE 4.1 File Structure

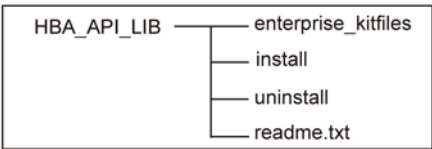

4. The dump area is configured.

Confirm that hard disk has enough free space before collecting the memory dump.

After OS installation, do a setting of kdump as following:

- a. Change the setting of Grub's parameter "crashkernel" to value which match the customer environment (256M is standard).

(example)

Edit the file "/etc/grub.conf" as following:

```
default=0
timeout=5
splashimage=(hd0,0)/grub/splash.xpm.gz
hiddenmenu
title Red Hat Enterprise Linux Server (<kernel revision>.x86_64)
root (hd0,0)
kernel /vmlinuz-<kernel revision>.x86_64 ro root=UUID=xxxxxxxx-xxxxxxxxxx-xxxxxxxxxx ro
rd_NO_LUKS LANG=ja_JP.UTF-8 rd_NO_MD SYSFONT=latacyrhebsun16 KEYBOARDTYPE=pc
KEYTABLE=jp106
rd_NO_LVM rd_NO_DM crashkernel=256M
initrd /initramfs-<kernel revision>.x86_64.img
```

- b. Change setting of kdump to work with small memory

- Case of Red Hat Enterprise Linux 6.4

Add setting of cp command to core_collector of /etc/kdump.conf file

Edit the file "/etc/kdump.conf" as following:

```
core_collector cp --sparse=always
extra_bins /bin/cp
```

[Note] makedumpfile command cannot be used for core_collector because the command uses big memory and system may run out of memory.

- Case of Red Hat Enterprise Linux 6.5

Any changes is not needed for core_collector

[Note] RHEL6.5 improves memory usage of the makedumpfile command.

- c. Reboot

5. Save the management information and configuration.

For details, see "5.7 Saving management and configuration information".

6. UPS battery monitor is set.

When the duration of life of the UPS battery is monitored: see "Setting for component replacement alert for PRIMEQUEST ". This document is downloaded from the following URL.

<http://www.fujitsu.com/global/products/computing/servers/mission-critical/primequest/documents/manuals/>

7. Watchdog Timer allows reboot OS in case that OS freezes. Rebooting OS is executed when the set time passes. For details, see "8.4 Automatic Partition Restart Conditions" of PRIMEQUEST 2000 series Administration Manual (CA92344-0537).

4.5.5 After installation, connecting SAN and internal HDD/SSD

See PRIMEQUEST 2000 Series SAN Boot Environment Configuration Manual , for connecting SAN with internal HDD/SSD, after installation.

Moreover, for details on driver parameter, see readme of the driver supplied.

4.6 Procedure to install RHEL into internal HDD/SSD

This section briefly describes the procedure to install RHEL into internal HDD/SSD.

Start the installation after confirming the MMB configuration and successful to log in to the MMB.

4.6.1 Presetting

If necessary, the following settings are done.

1. Remove each internal HDD that is not the installation destination.
2. The setting of partition is checked by MMB.
 - Setting of configuration of SB/IOU
See “[3.4.1 Setting the partition configuration](#)”
 - Setting of Console Redirection
See “[3.4.6 Settings of Console Redirection](#)”
 - Video redirection: Enable
 - Virtual media: Enable
 - Setting of various modes
See “[3.4.5 Various mode settings](#)”
3. [PCI ROM Priority] of BIOS is set.
 - For the UEFI Install
 - Set [Device Manager]-[PCI Subsystem Configuration]-[PCI ROM Priority] of BIOS menu to “EFI Compatible ROM”.
 - For the Legacy Install:
 - Set [Device Manager]-[PCI Subsystem Configuration]-[PCI ROM Priority] of BIOS menu to “Legacy ROM”.
 - Set [Device Manager]-[PCI Subsystem Configuration]-[OpROM Scan Configuration] of BIOS menu to “Enable” only for booting Device.
4. The I/O space is allocated in the SAS card and in the SAS RAID controller card.

For details on allocation of I/O space, see “[3.4.5 Various mode settings](#)” in this document and “3.4.4.2 I/O Space Assignment Configuration” of PRIMEQUEST 2000 series Tool Reference (CA92344-0539).

4.6.2 Preparing for Installation

As distribution DVD of RHEL is not provided beforehand while installing RHEL, the user who has subscribed the RHEL must create the DVD by himself.

Creating the RHEL Distribution DVD Image

Download the image file of distribution DVD by logging in to customer portal (<https://access.redhat.com/>) of Red Hat, Inc. by using other system.

Note

The image file of the distribution DVD differs with respect of the minor release and architecture (for Intel64). Therefore, download the intended DVD image file.

Remark

It is necessary to register in the customer portal of Red Hat, Inc. for subscription before downloading the file.

Preparing for Boot

All FC cables are removed.

4.6.3 Installation

The operating system installation with SVIM is explained.

There are the following types for operating system installation with SVIM. For the detailed procedure of each mode, see ServerView Suite ServerView Installation Manager.

TABLE 4.4 Operating system installation with SVIM

Mode	Functional Overview	Purpose
Quick mode	You can simply use the minimum settings necessary for operating system installation. This mode uses Fujitsu's recommended settings.	For easy installation.
Guide mode	You can specify setup information by following the instructions of the wizard. You can save the specified information in a configuration file for use during reinstallation.	For detailed setting of RAID or OS.

Operations

1. The settings are done to boot the ServerView Suite DVD from virtual media for the partition.
For details on configuration, see "1.6.2 Remote control operation (BMC)" of PRIMEQUEST 2000 series Administration Manual (CA92344-0537).
2. Connect ServerView Suite DVD 1 by the virtual media, and then turn on the power supply of the partition.

Note:

It can be started by selecting "Force boot from DVD" by Boot Selector in MMB Web-UI or it can be started from the virtual media by changing the boot order to DVD by UEFI. If it is started by selecting "Force boot from DVD" by Boot Selector in MMB Web-UI it is started in Legacy mode.

When operating system corresponds to the UEFI mode, the installation can be done in UEFI mode by changing the boot order according to the following procedure.

- a. After turning on the power supply of the partition, while the FUJITSU logo is displayed, press any key (such as [Space] key) except [Enter] key and the Boot Manager front page is displayed.
- b. The menu is selected on the Boot Manager front page in the following order. [Boot Maintenance Manager]-[Boot Options]-[Change Boot Order]-[Change the order]
- c. For UEFI aware OS, UEFI: Fujitsu Virtual CDROMx xxx is set at the upper-most step.
For Legacy OS, Fujitsu Virtual CDROMx xxx is set at the upper-most step.
For details on the setting method of boot order, see "■ Change Boot Order of "3.5.2 [Boot Options] menu" of PRIMEQUEST 2000 series Tool Reference (CA92344-0539).
- d. [Commit Changes and Exit] - [Reset System] is specified and the partition is rebooted.

3. After a period of time, the language selection window is displayed.
In case of English, select "English".
4. In initial display window, click [Next] button without setting anything.
5. Select [Deployment] in [Welcome ServerView Installation Manager] window.
6. Select installation mode, select operating system to be installed and set the operating system.

Warning

If you select Guide mode in the environment where Dynamic Reconfiguration will be used, do not select [Minimum Install] on [Package Selection] window. Dynamic Reconfiguration cannot operate properly.

Remark

The IP address of LAN cannot be set in setting operating system. Set IP address after installing the operation system.

7. Click [Start installation].
The installation is started.
8. Replace with the installation medium of operating system according to the instructions of SVM.

4.6.4 Configuring Bundled Software after Installation

Bundled software is configured after installing the operating system.

8. The trap destination from the partition is configured.

Remark

Configuring of the trap destination can be checked by using standard trap for SNMP service. For details, see "6.5.2 Configuring SNMP".

9. The trap destination and Mail destination through MMB are configured.

In linkage with operations management software, it is configured only if necessary.

- Configuring SNMP trap destination through MMB
See "6.5.2 Set up of SNMP"
- The report destination and the filter are set when Alarm E-Mail is configured.
See "3.3.9 Set up of Alarm E-Mail"

10. OneCommand Manager is installed while installing FC card.

- a. By executing the following command, the libnl package information is displayed. Confirm that libnl is installed.

```
# rpm -qi libnl
```

If libnl is not installed, search libnl package in installation media of distribution, and install libnl package by executing the following command.

```
# rpm -ivh libnl-<version>-<release>.<arch>.rpm
```

Remark

Read the part of <version>, <release>, <arch> properly.

- b. Download the driver/utility of FC Card from the following URL.

<http://support.ts.fujitsu.com/>

Note

Though PRIMERGY is described in the downloaded binary, driver/utility can be used by the PRIMEQUEST 2000 series.

- c. The file to be downloaded is copied in an arbitrary directory of the PRIMEQUEST 2000 series and then extracted.

```
tar xvzf F1010350.tar.gz
```


- d. The file given below is extracted.

Remark

For the method of installing “SNIA HBA API library”, see readme.txt extracted under HBA_API_LIB.

- e. Reboot the partition after installation.

FIGURE 4.2 File Structure

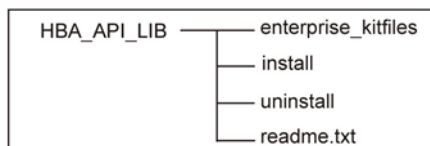

11. The dump area is configured.

Confirm that hard disk has enough free space before collecting the memory dump.

After OS installation, do a setting of kdump as following:

- a. Change the setting of Grub's parameter "crashkernel" to value which match the customer environment (256M is standard)..

(example)

Edit the file "/etc/grub.conf" as following:

```

default=0
timeout=5
splashimage=(hd0,0)/grub/splash.xpm.gz
hiddenmenu
title Red Hat Enterprise Linux Server (<kernel revision>.x86_64)
root (hd0,0)
kernel /vmlinuz-<kernel revision>.x86_64 ro root=UUID=xxxxxxxx-xxxxxxxxxxxx-xxxxxxxxxxxx ro
rd_NO_LUKS LANG=ja_JP.UTF-8 rd_NO_MD SYSFONT=latacyrhebsun16 KEYBOARDTYPE=pc KEYTABLE=jp106
rd_NO_LVM rd_NO_DM crashkernel=256M
initrd /initramfs-<kernel revision>.x86_64.img
  
```

- b. Change setting of kdump to work with small memory

- Case of Red Hat Enterprise Linux 6.4

Add setting of cp command to core_collector of /etc/kdump.conf file

Edit the file "/etc/kdump.conf" as following:

```

core_collector cp --sparse=always
extra_bins /bin/cp
  
```

[Note] makedumpfile command cannot be used for core_collector because the command uses big memory and system may run out of memory.

- Case of Red Hat Enterprise Linux 6.5

Any changes is not needed for core_collector

[Note] RHEL6.5 improves memory usage of the makedumpfile command.

- c. Reboot

12. NTP client is configured.
NTP server on the operating system side is configured.
For details, see “[5.6 Setup of NTP client](#)”.
13. Save the management information and configuration.
For details, see “[5.7 Saving management and configuration information](#)”.
14. UPS battery monitor is set.
When the duration of life of the UPS battery is monitored: see “Setting for component replacement alert for PRIMEQUEST “. This document is downloaded from the following URL.
<http://www.fujitsu.com/global/products/computing/servers/mission-critical/primequest/documents/manuals/>
15. Watchdog Timer allows reboot OS in case that OS freezes. Rebooting OS is executed when the set time passes. For details, see “8.4 Automatic Partition Restart Conditions” of PRIMEQUEST 2000 series Administration Manual (CA92344-0537).

4.6.5 After installation, connecting SAN with internal HDD/SSD

See PRIMEQUEST 2000 Series SAN Boot Environment Configuration Manual, for connecting SAN with internal HDD/SSD, after installation. Moreover, for details on driver parameter, see readme of the driver supplied.

4.7 Procedure to install VMware on the SAN storage device

This section briefly describes the procedure by which VMware is installed on the SAN storage device. Start the installation after confirming the MMB configuration and successful to log in to the MMB.

4.7.1 Presetting

Set the following if necessary.

1. Set the LUN of the SAN storage device.
2. [PCI ROM Priority] of BIOS is set.
 - For the UEFI Install
 - Set [Device Manager]-[PCI Subsystem Configuration]-[PCI ROM Priority] of BIOS menu to "EFI Compatible ROM".
 - For the Legacy Install:
 - Set [Device Manager]-[PCI Subsystem Configuration]-[PCI ROM Priority] of BIOS menu to "Legacy ROM".
 - Set [Device Manager]-[PCI Subsystem Configuration]-[OpROM Scan Configuration] of BIOS menu to "Enable" only for booting Device.
3. Set the BIOS to recognize LUN of the FC card, Converged Network Adapter and NIC for iSCSI Boot.
For setting the FC card, see "Chapter 2 Setting of fiber channel card (FC card)" of PRIMEQUEST 2000 Series SAN Boot Environment Configuration Manual.
4. Check the setting of the partition by MMB after removing the internal HDD/SSD of PRIMEQUEST.
 - SB/IOU configuration is set
See "[3.4.1 Setting the partition configuration](#)"
 - Console redirection is set
See "[3.4.6 Settings of Console Redirection](#)"
 - Video redirection: Enable
 - Virtual media: Enable
 - Various modes are set
See "[3.4.5 Various mode settings](#)"
5. Connect only the LUN which installs the SAN storage device to the partition of PRIMEQUEST.
For the setting of SAN storage device, see the manual attached with the SAN storage device.
6. Allocate the I/O space in the FC card for boot path and in the SAS RAID controller card.
For details on allocation of the I/O space, see "[3.4.5 Various mode settings](#)" in this document and "3.4.4.2 I/O Space Assignment Configuration" of PRIMEQUEST 2000 Series Tool Reference (CA92344-0539).
7. Set PCI Address Mode to PCI Bus Mode by MMB Web-UI.
For details on PCI Address Mode setting, see "1.3.9 [Partition#x] Menu" of PRIMEQUEST 2000 series Tool Reference Manual (CA92344-0539).

Remark

In case of VMware5.x, be sure to set PCI Address Mode to PCI Bus Mode.

In case of using of Vt-d function in VMware6.x, be sure to set PCI Address Mode to PCI Bus Mode.

4.7.2 Preparation of installation

Additionally, see the VMware information, at the time of preparation of the installation.

For the VMware information, contact the distributor where you purchased your product, or your sales representative.

The following preparation is done just before the installation.

1. The following disk image is prepared.
Media of VMware
2. The FC cable is made a single path (wire connection of only 1 FC cable).

4.7.3 Installation of VMware

The operating system installation with SVIM is explained.

There are the following types for operating system installation with SVIM. For the detailed procedure of each mode, see ServerView Suite ServerView Installation Manager.

TABLE 4.5 Operating system installation with SVIM

Mode	Functional Overview	Purpose
Quick mode	You can simply use the minimum settings necessary for operating system installation. This mode uses Fujitsu's recommended settings.	For easy installation.
Guide mode	You can specify setup information by following the instructions of the wizard. You can save the specified information in a configuration file for use during reinstallation.	For detailed setting of RAID or OS.

Operations

1. The settings are done to boot the ServerView Suite DVD from virtual media for the partition.
For details on configuration, see "1.6.2 Remote control operation (BMC)" of PRIMEQUEST 2000 series Administration Manual (CA92344-0537).
2. Connect ServerView Suite DVD 1 by the virtual media, and then turn on the power supply of the partition..

Note:

The UEFI boots or the Legacy boots can be selected in the following procedure.

- a. Select [Force boot into EFI Boot Manager] in MMB Web-UI.
- b. Turn on the power supply of the partition
- c. The menu is selected on the Boot Manager front page in the following order. [Boot Maintenance Manager]-[Boot Options]-[Change Boot Order]-[Change the order]
- d. For UEFI aware OS, UEFI: Fujitsu Virtual CDROMx xxx is set at the upper-most step.
For Legacy OS, Fujitsu Virtual CDROMx xxx is set at the upper-most step.
For details on the setting method of boot order, see "■ Change Boot Order of "3.5.2 [Boot Options] menu" of PRIMEQUEST 2000 series Tool Reference (CA92344-0539).
- e. Select [Commit Changes and Exit]
- f. Return to the front page pushing the escape key twice.
- g. Select [Boot Manager].
- h. For UEFI aware OS, select UEFI: Fujitsu Virtual CDROMx xxx.
For Legacy OS, select Fujitsu Virtual CDROMx xxx.

Warning

In the case of installation to SAN storage device, make sure to select CDROM from [BootManager] manually and boot SVIM. If you boot SVIM from CDROM by Reset or Partition OFF/ON automatically, SAN storage is not detected.

3. After a period of time, the language selection window is displayed.
In case of English, select "English".
4. In initial display window, click [Next] button without setting anything.
5. Select [Deployment] in [Welcome ServerView Installation Manager] window.
6. Select installation mode, select operating system to be installed and set the operating system.

Remark

The IP address of LAN cannot be set in setting operating system. Set IP address after installing the operation system.

7. Click [Start installation].
The installation is started.
8. Replace with the installation medium of operating system according to the instructions of SVIM.

4.7.4 Setting of Software Watchdog.

Watchdog Timer allows reboot OS in case that OS freezes. Rebooting OS is executed when the set time passes, For details, see “8.4 Automatic Partition Restart Conditions” of PRIMEQUEST 2000 series Administration Manual (CA92344-0537).

4.7.5 VMware Installation completion.

Reboot the partition of the PRIMEQUEST 2000 series when the setting is completed.

Warning

In the case of installation of VMware ESXi 5.x or ESXi 6.x in UEFI mode, you have to make and register new boot manager because boot option which is made in installation cannot boot OS automatically. See (12) [PRIMEQUEST 2000/1000 Series] of “7. Notes on ServerView Installation Manager (SVIM) (V11.15.01)” in FUJITSU Server PRIMEQUEST 2000/1000 Series Notes on ServerView Suite(CA92344-0679)

4.7.6 Installation of Bundled Software

For details on bundled software, see [D.2 Installing VMware Bundled Software]

4.8 Procedure to install VMware into internal HDD/SSD

This section describes the procedure of installing internal HDD/SSD for VMware.

Start the installation after confirming the MMB configuration and successful to log in to the MMB.

4.8.1 Presetting

Set the following if necessary.

1. Check the partition settings in the MMB after removing internal HDD/SSD of PRIMEQUEST
 - Setting of configuration of SB/IOU
See [“3.4.1 Setting the partition configuration”](#)
 - Setting of Console Redirection
See [“3.4.6 Settings of Console Redirection”](#)
 - Video redirection: Enable
 - Virtual media: Enable
 - Setting of various modes
See [“3.4.5 Various mode settings”](#)
2. [PCI ROM Priority] of BIOS is set.
 - For the UEFI Install
 - Set [Device Manager]-[PCI Subsystem Configuration]-[PCI ROM Priority] of BIOS menu to "EFI Compatible ROM".
 - For the Legacy Install:
 - Set [Device Manager]-[PCI Subsystem Configuration]-[PCI ROM Priority] of BIOS menu to "Legacy ROM".
 - Set [Device Manager]-[PCI Subsystem Configuration]-[OpROM Scan Configuration] of BIOS menu to "Enable" only for booting Device.
3. The I/O space is allocated in the SAS card and in the SAS RAID controller card.
For details on allocation of I/O space, see [“3.4.5 Various mode settings”](#) in this document and [Configure I/O Space Assignment] menu" of PRIMEQUEST 2000 series Tool Reference (CA92344-0539).
4. Set PCI Address Mode to PCI Bus Mode through MMB Web-UI.
For details on PCI Address Mode setting, see "1.3.9 [Partition#x] Menu" of PRIMEQUEST 2000 series Tool Reference Manual (CA92344-0539).

Remark

In case of VMware5.x, be sure to set PCI Address Mode to PCI Bus Mode.

In case of using of Vt-d function in VMware6.x, be sure to set PCI Address Mode to PCI Bus Mode.

4.8.2 Preparation of installation

See the VMware information thoroughly at the time of installation preparation.

For the VMware product, please contact who you purchased the product from.

Set the following.

1. The following disk images are prepared.
VMware media
2. Remove all FC cables.
3. Mount the following disk image by connecting the video redirection.
4. Change the boot order, and set DVD Boot to the top priority of the starting order.
For details, see "1.3.1 [Power Control] window" of PRIMEQUEST 2000 series Tool Reference (CA92344-0539).

4.8.3 VMware installation

This section describes the installation of the operating system by SVIM.

The type of the operating system installation by SVIM includes the following types. For the detailed procedure of the concerned mode, see ServerView Suite ServerView Installation Manager.

TABLE 4.6 Operating system installation by SVIM

Mode	Functional Overview	Purpose
Quick mode	You can simply use the minimum settings necessary for operating system installation. This mode uses Fujitsu's recommended settings.	For easy installation.
Guide mode	You can specify setup information by following the instructions of the wizard. You can save the specified information in a configuration file for use during reinstallation.	For detailed setting of RAID or OS.

Operations

1. The settings are done to boot the ServerView Suite DVD from virtual media for the partition.
For details on configuration, see "1.6.2 Remote control operation (BMC)" of PRIMEQUEST 2000 series Administration Manual (CA92344-0537).
2. Connect ServerView Suite DVD 1 by the virtual media, and then turn on the power supply of the partition..

Note:

It can be started by selecting "Force boot from DVD" by Boot Selector in MMB Web-UI or it can be started from the virtual media by changing the boot order to DVD by UEFI. If it is started by selecting "Force boot from DVD" by Boot Selector in MMB Web-UI it is started in Legacy mode.

When operating system corresponds to the UEFI mode, the installation can be done in UEFI mode by changing the boot order according to the following procedure.

- a. After turning on the power supply of the partition, while the FUJITSU logo is displayed, press any key (such as [Space] key) except [Enter] key and the Boot Manager front page is displayed.
- b. The menu is selected on the Boot Manager front page in the following order. [Boot Maintenance Manager]-[Boot Options]-[Change Boot Order]-[Change the order]
- c. For UEFI aware OS, UEFI: Fujitsu Virtual CDROMx xxx is set at the upper-most step.
For Legacy OS, Fujitsu Virtual CDROMx xxx is set at the upper-most step.
For details on the setting method of boot order, see "■ Change Boot Order of "3.5.2 [Boot Options] menu" of PRIMEQUEST 2000 series Tool Reference (CA92344-0539).
- d. [Commit Changes and Exit] - [Reset System] is specified and the partition is rebooted.

3. After a period of time, the language selection window is displayed.
In case of English, select "English".
4. In initial display window, click [Next] button without setting anything.
5. Select [Deployment] in [Welcome ServerView Installation Manager] window.
6. Select installation mode, select operating system to be installed and set the operating system.

Remark

The IP address of LAN cannot be set in setting operating system. Set IP address after installing the operation system.

7. Click [Start installation].
The installation is started.
8. Replace with the installation medium of operating system according to the instructions of SVIM.

4.8.4 Setting of notification in case that OS freezes

Watchdog Timer allows notification in case that OS freezes. When the set time passes MMB System Event Log is logged and the notification is executed. For details, see "8.4 Automatic Partition Restart Conditions" of PRIMEQUEST 2000 series Administration Manual (CA92344-0537).

4.8.5 Completion of VMware installation

Reboot the partition of PRIMEQUEST 2000 series after the completion of setting.

Warning

In the case of installation of VMware ESXi 5.x or ESXi 6.x in UEFI mode, you have to make and register new boot manager because boot option which is made in installation cannot boot OS automatically. See (12) [PRIMEQUEST 2000/1000 Series] of "7. Notes on ServerView Installation Manager (SVIM) (V11.15.01)" in FUJITSU Server PRIMEQUEST 2000/1000 Series Notes on ServerView Suite(CA92344-0679)

4.8.6 Installation of the bundled software

For the installation of bundled software, see "[D.2 Installing VMware Bundled Software](#)".

4.9 Procedure of Hyper-V installation

Install Hyper-V after installing the operating system (Windows Server 2016, Windows Server 2012 R2, Windows Server 2012 or Windows Server 2008 R2).

4.10 Procedure of KVM installation

Install KVM after installing the operating system (Linux RHEL6).

See the following for the installation procedure of KVM.

RHEL7

- Red Hat Enterprise Linux 7 Virtualization Deployment and Administration Guide
- Red Hat Enterprise Linux 7 Virtualization Getting Started Guide
- Virtualization Security Guide

RHEL6

- Red Hat Enterprise Linux 6 Virtualization Administration Guide
- Red Hat Enterprise Linux 6 Virtualization Getting Started Guide
- Red Hat Enterprise Linux 6 Virtualization Host Configuration and Guest Installation Guide
- Virtualization Security Guide

Note

[PRIMEQUEST2400E3/2800E3/2400E2/2800E2/2400E/2800E only]

For RHEL6 KVM, Raid Controller Card/HDD/SSD on Non Home SB can't assign to KVM guest using PCI passthrough function.

4.11 Procedure to install SUSE Linux Enterprise Server into the SAN Storage Unit

This section describes the procedures for installing SUSE Linux Enterprise Server on the SAN storage unit. Confirm the MMB configuration and successful login to the MMB before starting the installation.

4.11.1 Presetting

Set the following if necessary.

1. Set the LUN of the SAN storage device.
2. [PCI ROM Priority] of BIOS is set.
 - For the UEFI Install
 - Set [Device Manager]-[PCI Subsystem Configuration]-[PCI ROM Priority] of BIOS menu to "EFI Compatible ROM".
 - For the UEFI Install:
 - Set [Device Manager]-[PCI Subsystem Configuration]-[PCI ROM Priority] of BIOS menu to "Legacy ROM".
 - Set [Device Manager]-[PCI Subsystem Configuration]-[OpROM Scan Configuration] of BIOS menu to "Enable" only for booting Device.
3. Set the BIOS to recognize LUN of the FC card, Converged Network Adapter and NIC for iSCSI Boot.
For setting the FC card, Converged Network Adapter and NIC for iSCSI Boot, see PRIMEQUEST 2000 Series SAN Boot Environment Configuration Manual .
4. Check the setting of the partition by MMB after removing the internal HDD/SSD of PRIMEQUEST.
 - SB/IOU configuration is set
See ["3.4.1 Setting the partition configuration"](#)
 - Console redirection is set
See ["3.4.6 Settings of Console Redirection"](#)
 - Video redirection: Enable
 - Virtual media: Enable
 - Various modes are set
See ["3.4.5 Various mode settings"](#)
5. Connect only the LUN which installs the SAN storage device to the partition of PRIMEQUEST.
For the setting of SAN storage device, see the manual attached with the SAN storage device.
6. Allocate the I/O space in the FC card for boot path and in the SAS RAID controller card.
For details on allocation of the I/O space, see ["3.4.5 Various mode settings"](#) in this document and ["3.4.4.2 I/O Space Assignment Configuration"](#) of PRIMEQUEST 2000 Series Tool Reference (CA92344-0539).

4.11.2 Preparation of installation

Prepare the SLES installation DVD.

Preparation for boot

The FC cable is made single path (connect only one FC cable).

4.11.3 Installation

The operating system installation with SVIM is explained.

There are the following types for operating system installation with SVIM. For the detailed procedure of each mode, see ServerView Suite ServerView Installation Manager.

TABLE 4.7 Operating system installation with SVIM

Mode	Functional Overview	Purpose
Quick mode	You can simply use the minimum settings necessary for operating system installation. This mode uses Fujitsu's recommended settings.	For easy installation.
Guide mode	You can specify setup information by following the instructions of the wizard. You can save the specified information in a configuration file for use during reinstallation.	For detailed setting of RAID or OS.

Operations

- The settings are done to boot the ServerView Suite DVD from virtual media for the partition.
For details on configuration, see "1.6.2 Remote control operation (BMC)" of PRIMEQUEST 2000 series Administration Manual (CA92344-0537).
- Connect ServerView Suite DVD 1 by the virtual media, and then turn on the power supply of the partition.
Note:
The UEFI boots or the Legacy boots can be selected in the following procedure.
 - Select [Force boot into EFI Boot Manager] in MMB Web-UI.
 - Turn on the power supply of the partition.
 - The menu is selected on the Boot Manager front page in the following order. [Boot Maintenance Manager]-[Boot Options]-[Change Boot Order]-[Change the order]
 - For UEFI aware OS, UEFI: Fujitsu Virtual CDROMx xxx is set at the upper-most step.
For Legacy OS, Fujitsu Virtual CDROMx xxx is set at the upper-most step.
For details on the setting method of boot order, see "■ Change Boot Order of "3.5.2 [Boot Options] menu" of PRIMEQUEST 2000 series Tool Reference (CA92344-0539).
 - Select [Commit Changes and Exit].
 - Return to the front page pushing the escape key twice.
 - Select [Boot Manager].
 - For UEFI aware OS, select UEFI: Fujitsu Virtual CDROMx xxx.
For Legacy OS, select Fujitsu Virtual CDROMx xxx.
- Windows Boot Manager is displayed. Select the first menu in Windows Boot Manager.
- After a period of time, the language selection window is displayed.
In case of English, select "English".

5. In initial display window, click [Next] button without setting anything.
6. Select [Deployment] in [Welcome ServerView Installation Manager] window.
7. Select installation mode, select operating system to be installed and set the operating system.

Warning

If you select Guide mode in the environment where Dynamic Reconfiguration will be used, do not select [Minimum Install] on [Package Selection] window. Dynamic Reconfiguration cannot operate properly.

Remark

The IP address of LAN cannot be set in setting operating system. Set IP address after installing the operation system.

8. Click [Start installation].
The installation is started.
9. Replace with the installation medium of operating system according to the instructions of SVIM.

4.11.4 Configuring Bundled Software after Installation

After completing OS installation, configure the bundled software.

4.11.5 After installation, connecting SAN and internal HDD/SSD

For details on connecting the SAN and internal HDD after the installation, see the *PRIMEQUEST 2000 Series SAN Boot Environment Configuration Manual*. Also, for details on driver parameters, see the readme file that comes with the driver.

4.12 Procedure to install SUSE Linux Enterprise Server into the Internal HDD

This section concisely describes the procedures for installing SUSE Linux Enterprise Server on the internal HDD. Confirm the MMB configuration and successful login to the MMB before starting the installation.

4.12.1 Presetting

If necessary, the following settings are done.

1. Remove each internal HDD that is not the installation destination.
2. The setting of partition is checked by MMB.
 - Setting of configuration of SB/IOU
See [“3.4.1 Setting the partition configuration”](#)
 - Setting of Console Redirection
See [“3.4.6 Settings of Console Redirection”](#)
 - Video redirection: Enable
 - Virtual media: Enable
 - Setting of various modes
See [“3.4.5 Various mode settings”](#)
3. [PCI ROM Priority] of BIOS is set.
 - For the UEFI Install
 - Set [Device Manager]-[PCI Subsystem Configuration]-[PCI ROM Priority] of BIOS menu to "EFI Compatible ROM".
 - For the UEFI Install:
 - Set [Device Manager]-[PCI Subsystem Configuration]-[PCI ROM Priority] of BIOS menu to "Legacy ROM".
 - Set [Device Manager]-[PCI Subsystem Configuration]-[OpROM Scan Configuration] of BIOS menu to "Enable" only for booting Device.
4. The I/O space is allocated in the SAS card and in the SAS RAID controller card.
For details on allocation of I/O space, see [“3.4.5 Various mode settings” in this document](#) and [“3.4.4.2 I/O Space Assignment Configuration”](#) of PRIMEQUEST 2000 series Tool Reference (CA92344-0539).

4.12.2 Preparing for Installation

Prepare the SLES installation DVD.

4.12.3 Installation

The operating system installation with SVIM is explained.

There are the following types for operating system installation with SVIM. For the detailed procedure of each mode, see ServerView Suite ServerView Installation Manager.

TABLE 4.8 Operating system installation with SVIM

Mode	Functional Overview	Purpose
Quick mode	The operating system can be installed with the recommendation of Fujitsu only by setting minimum required limits.	It is used when the operating system is to be readily installed.
Guide mode	The setup information is set following the wizard. The information which is set is saved in the configuration file, and it can be used during reinstallation.	It is used when the details of RAID and the operating system are set.

Operations

- The settings are done to boot the ServerView Suite DVD from virtual media for the partition.
For details on configuration, see “1.6.2 Remote control operation (BMC)” of PRIMEQUEST 2000 series Administration Manual (CA92344-0537).
- Connect ServerView Suite DVD 1 by the virtual media, and then turn on the power supply of the partition.
Note:
“Force boot from DVD” can be selected by the Boot Selector and can be activated from DVD or it can be activated from the DVD drive by changing the boot order into DVD with UEFI.
When operating system corresponds to the UEFI mode, the installation can be done in UEFI mode by changing the boot order according to the following procedure.
 - After turning on the power supply of the partition, while the FUJITSU logo is displayed, press any key (such as [Space] key) except [Enter] key and the Boot Manager front page is displayed.
 - The menu is selected on the Boot Manager front page in the following order. [Boot Maintenance Manager]-[Boot Options]-[Change Boot Order]-[Change the order]
 - For UEFI aware OS, UEFI: Fujitsu Virtual CDROMx xxx is set at the upper-most step.
For Legacy OS, Fujitsu Virtual CDROMx xxx is set at the upper-most step.
For details on the setting method of boot order, see “■ Change Boot Order of “3.5.2 [Boot Options] menu” of PRIMEQUEST 2000 series Tool Reference (CA92344-0539).
 - [Commit Changes and Exit] - [Reset System] is specified and the partition is rebooted.
- After a period of time, the language selection window is displayed.
In case of English, select “English”.
- In initial display window, click [Next] button without setting anything.
- Select [Deployment] in [Welcome ServerView Installation Manager] window.
- Select installation mode, select operating system to be installed and set the operating system.

Warning

If you select Guide mode in the environment where Dynamic Reconfiguration will be used, do not select [Minimum Install] on [Package Selection] window. Dynamic Reconfiguration cannot operate properly.

Remark

The IP address of LAN cannot be set in setting operating system. Set IP address after installing the operation system.

7. Click [Start installation].
The installation is started.
8. Replace with the installation medium of operating system according to the instructions of SVIM.

4.12.4 Configuring Bundled Software after Installation

4.12.5 After completing OS installation, configure the bundled software. After installation, connecting SAN and internal HDD/SSD

See PRIMEQUEST 2000 Series SAN Boot Environment Configuration Manual , for connecting SAN with internal HDD/SSD, after installation.

Moreover, for details on driver parameter, see readme of the driver supplied.

CHAPTER 5 Work after Operating System installation

This chapter describes every setting that is required after installation of the operating system of PRIMEQUEST 2000 Series.

5.1 Types of work

Content and type of operations that are to be implemented after installation of the operating system are given below.

TABLE 5.1 Type of operations

Task	Installed operating system	See
Setting of SVAgent	Linux, Windows	5.2 Setting of SVS (SVagent/SVAgentless Service/SVmco)
Setting of sadump	Linux	0 Setting of sadump
Setting of Dump environment	Windows	5.4 Setup of dump environment (Windows)
Setting of Dump environment	Linux	5.5 Setup of dump environment (Linux)
Setting of NTP client	Linux	5.6 Setup of NTP client
Management information of MMB / Save configuration information of BIOS	Linux, Windows	5.7 Saving management and configuration information
Setting of Write Policy of SAS array controller card.	Linux, Windows	"Write Policy" recommended setting of SAS array controller card"
Setting of Serial Port	Linux	5.9 Setup of Serial Port

5.2 Setting of SVS (SVagent/SVAgentless Service/SVmco)

If SVS installation was selected settings for following products must be done after installation of OS. See the following manuals for the details of the settings of SVagent/SVmco.

SVmco is necessary, only when you use PRIMECLUSTER linkage

- SVagent:
ServerView Operations Manager Installation ServerView Agents for Linux
ServerView Operations Manager Installation ServerView Agents for Windows
- SVmco:
ServerView Mission Critical Option User Manual.
- SVAgentless Service on SUSE Linux Enterprise Server
In case of SUSE Linux Enterprise Server, it is necessary to extend the syslog-ng configuration file

1. Insert the following lines into the file `/etc/syslog-ng/syslog-ng.conf`:
`destination hwlog { pipe("/dev/HWLog/syslog_fifo"); };`
`log { source(src); destination(hwlog); };`
2. Start YaST and select Novell AppArmor – Edit Profile.
3. Choose the name of the active syslog daemon (`/sbin/syslog-ng` or `/sbin/syslogd`) and click Next.
4. Enter `/dev/HWLog/syslog_fifo` in the Enter or modify File-name field.
5. Under Permissions activate the Read and Write option.
6. Save this entry.
7. Restart AppArmor by:
`/etc/init.d/boot.apparmor restart`
Due to a bug in SLES it is possible, that the AppArmor profile `/etc/apparmor.d/sbin.syslog-ng` contains an invalid statement. The following line
`@{CHROOT_BASE} =`
has to be changed to
`@{CHROOT_BASE} = ""`
AppArmor has to restart after this change.
8. Restart syslog services by:
`/etc/init.d/syslog restart`

5.2.1 Management LAN setting for SVagent

In the following cases, management LAN (for communicating Operations Manager) setting is required.

1. ServerView Agent initial installation
2. The Partition is configured with disks which is replicated by the other Partition.
3. IP address of Management LAN is changed.

Windows

1. Confirm if a "ServerView Server Control" service is running.
Then, if the service is NOT running, start the service.
How to start a "ServerView Server Control" service
 - a. Click the [Start menu] -> [Control Panel] -> [Service].
 - b. Select the "ServerView Service Control" in the right side view.
 - c. Click the [Operation] -> [Start] in the menu bar, then a "ServerView Server Control" is started.
2. Copy a "MgmtIP.exe", which is included in the following directory of SVS DVD media, to an arbitrary folder on the target Windows OS.
`¥SVSLocalTools¥Japanese¥Svmanage¥Tools¥MgmtIP¥`
3. Execute the following command on the Command Prompt.
<IP Address> below is IP Address of OS side of Management LAN.
* For IPv4 configuration
`C:¥Temp¥MgmtIP.exe -i <IP Address>`
* For IPv6 configuration
`C:¥Temp¥MgmtIP.exe -k <IP Address>`
4. The command is succeeded if the following message is shown.
MgmtIP:new management IP address \$IP Address\$ stored

Linux

1. Confirm if eecd process is running or not.

```
#ps ax |grep eecd
```

Then, if eecd is NOT running, start ServerView Agent.

```
#!/usr/sbin/srvmagt start
```

2. Execute the following command for setting OS IP address.

```
#!/usr/sbin/eecdcp -c oc=E002 oe=000C ¥'$IPADDRESS¥'
```

e.g.)

```
#!/usr/sbin/eecdcp -c oc=E002 oe=000C ¥'192.168.0.1¥'
```

5.3 Setting of sadump

In sadump, the following items are set for each partition.

- Validation of sadump
- Collection address of dump
- Compression at the time of dump collection
- Movement after dump collection
- Re-use of dump collection address.

The sadump setting is executed on the BIOS set-up menu. Before the setting is executed, it is necessary to reserve the area of the dump device which becomes the collection address of dump. When there is a system fault, the register information and memory contents are output to the dump device. Due to this reason, the capacity of the device that performs dump output is determined, so as to match the memory size. The required area is obtained by the estimation given below and it is reserved.

Amount of installed memory + FIXED VALUE (*)

(*) In PRIMEQUEST 2400E/2800E/2800B/2400E2/2800E2/2800B2,
 when amount of installed memory is less than 6 TB, FIXED VALUE is 512 MB.
 When amount of installed memory is 6 TB or more, FIXED VALUE is 2150 MB.
 When Dynamic Reconfiguration is enabled,
 FIXED VALUE is always 2150 MB even if the amount of installed memory is less than 6 TB.

In PRIMEQUEST 2400E3/2800E3/2800B3,
 when amount of installed memory is less than 6 TB, FIXED VALUE is 1280 MB.
 When amount of installed memory is 6 TB or more, FIXED VALUE is 2920 MB.
 When Dynamic Reconfiguration is enabled,
 FIXED VALUE is always 2920 MB even if the amount of installed memory is less than 6 TB.

The dump device can use the disk and the disk partition. In case of dump device created for the disk partition, create the disk partition when installing the operating system. In case of setting the device on ETERNUS to dump device, it is necessary to execute UEFI driver setting in advance.

For the details of setting procedure see, PRIMEQUEST 2000 Series SAN Boot Environment Configuration Manual.

All the screenshots are display examples. The display contents differ according to the system configuration.

For the details of sadump settings, see "Chapter 6 Setting of sadump environment" of PRIMEQUEST 2000 series Tool Reference (CA92344-0539).

All the windows given here are display examples. The display contents differ according to the system configuration.

Remarks

Sadump supports only UEFI OS. Check OS installation mode.

Operations


- 1. Device Manager menu of UEFI is displayed.
For the details of device manager menu display, see, “Chapter 3 UEFI Menu Operations” of PRIMEQUEST 2000 series Tool Reference (CA92344-0539)

FIGURE 5.1 Example of Device Manager Menu




- 2. Select [sadump Configuration] and press [Enter] key
→Main menu (sadump) is displayed

FIGURE 5.2 Main menu (sadump)

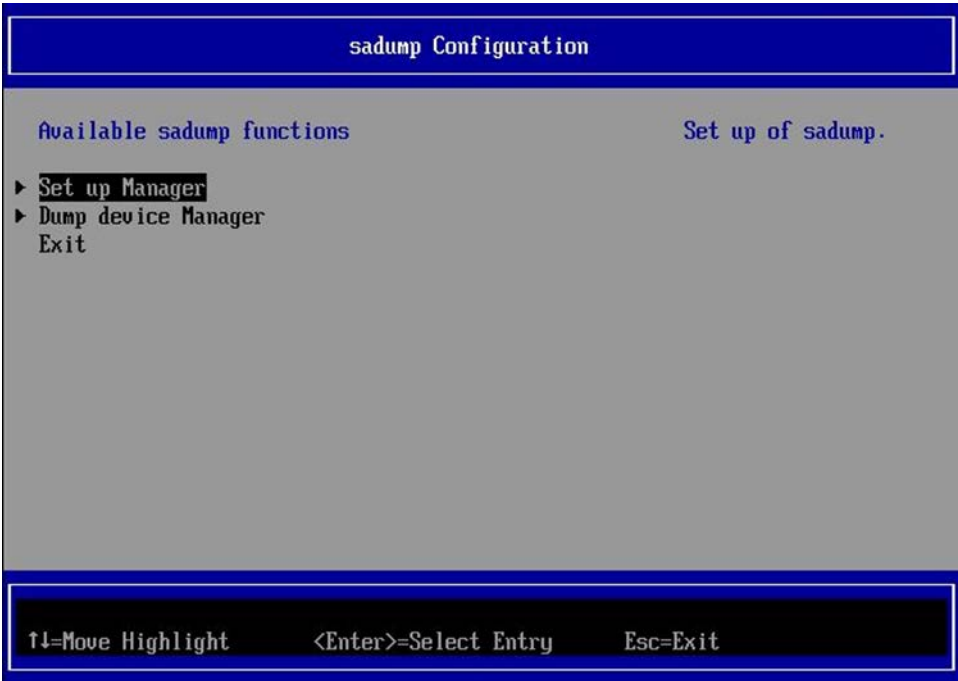


- 3. Select [Set-up Manager] and press [Enter] key
→sadump set-up menu is displayed.

FIGURE 5.3 sadump set-up menu

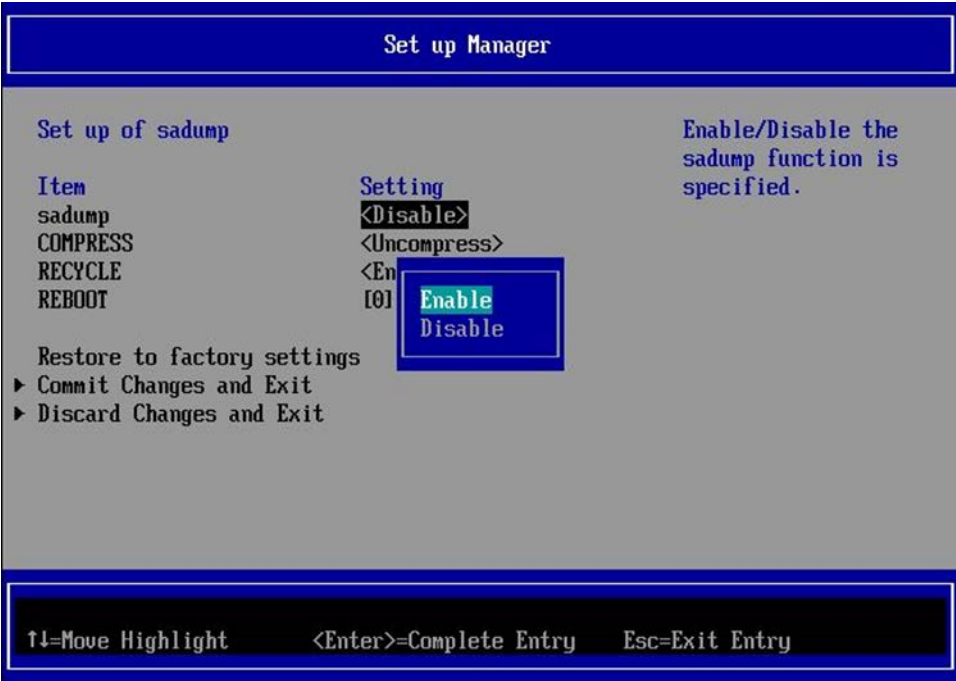


- 4. Select [Enabled] on [sadump].

FIGURE 5.4 sadump set-up menu

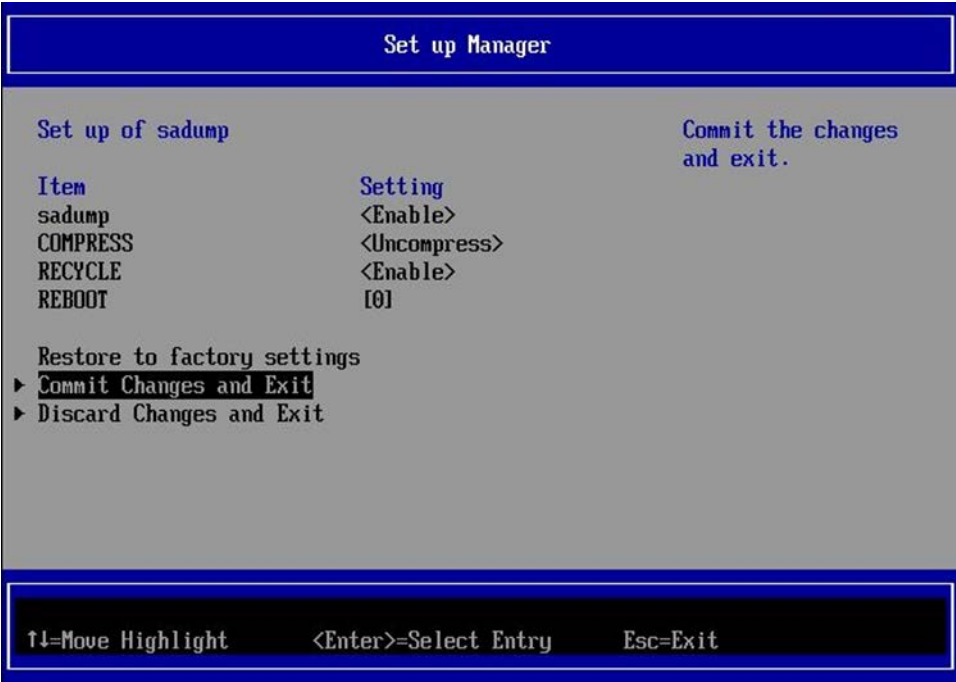


5. Select [Commit Changes and Exit] and press [Enter].
→ Return to the main menu (sadump) after the settings are reflected.

FIGURE 5.5 Main menu (sadump)

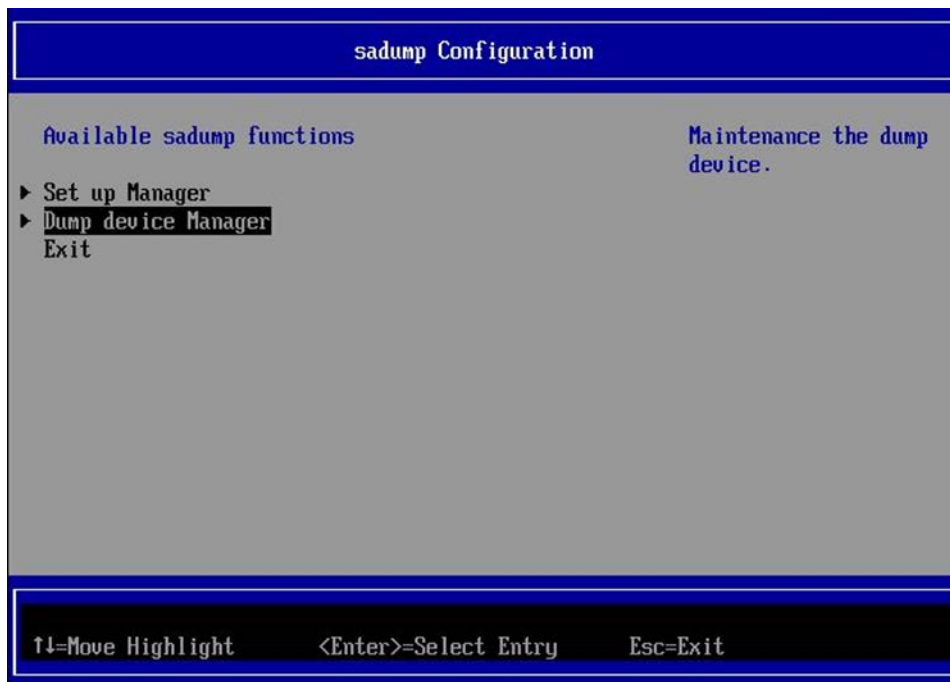

6. Select [Dump device Manager] on main menu (sadump), and press [Enter] key.
→ The dump device maintenance menu is displayed.

FIGURE 5.6 Dump Device Maintenance Menu

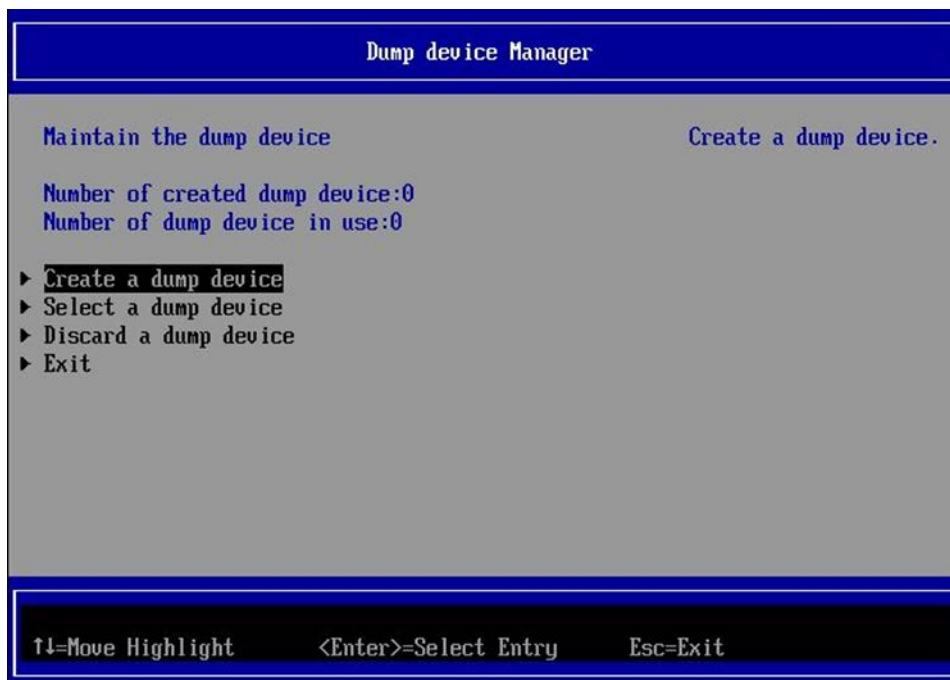


7. Select [Create a dump device], and press [Enter] key.
→The dump device configuration menu is displayed.

FIGURE 5.7 Dump Device Structure Menu



8. Select [Disk selection], and press [Enter] key.
→The dump device selection menu is displayed.

FIGURE 5.8 Dump Device Selection Menu

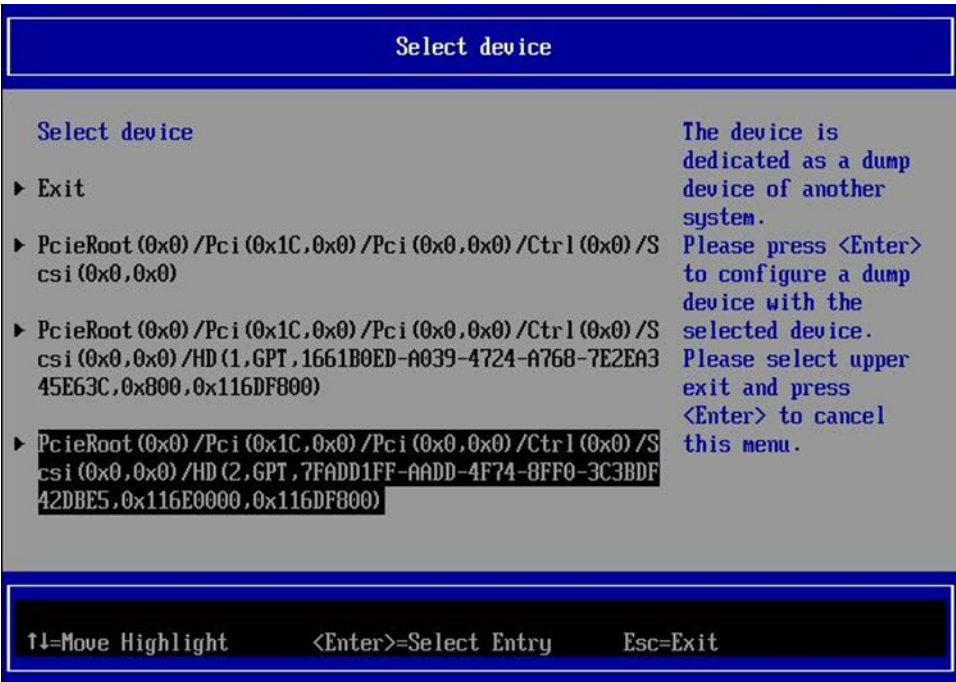

9. Select the disk or the disk partition, and set the disk or the disk partition where the dump device is to be configured.
→The dump device selection menu is displayed.




(Data corruption)

When the dump device is selected, reconfirm whether the selection of disk is correct. If the operation is executed with an incorrect disk selection, data would be corrupted.

Remark

For the ACPI name that shows the disk or the disk partition, see "3.6 Device Path" of PRIMEQUEST 2000 series Tool Reference (CA92344-0539).

FIGURE 5.9 Dump Device Selection Menu

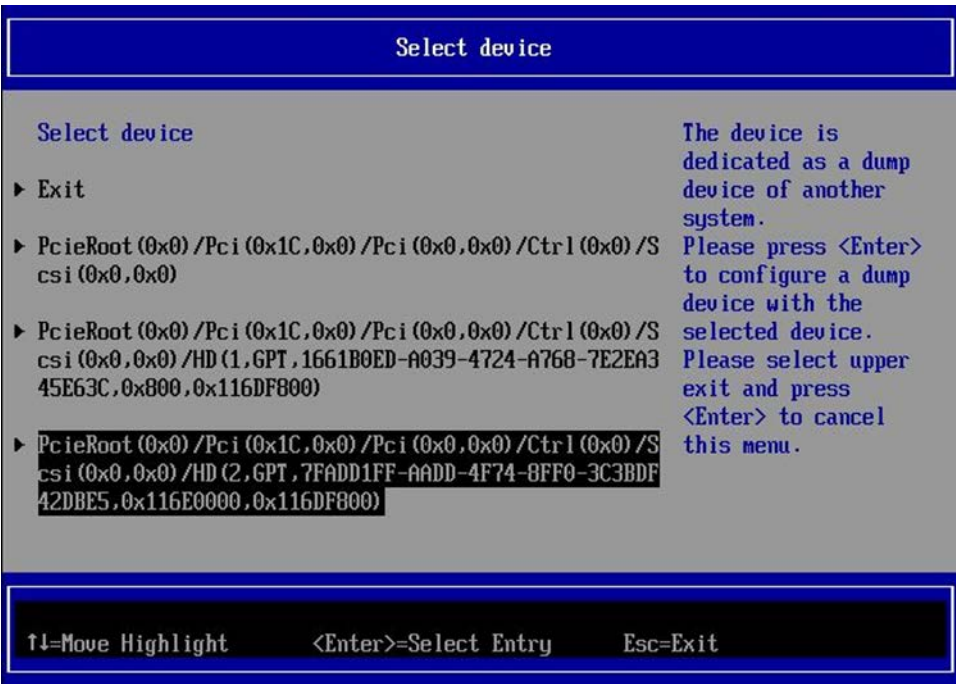


10. Press [Enter] key.
→The dump device is created. Return to dump device configuration menu.

Warning

When the dump device is created it is initialized. Depending on the size of the selected disk or that of the disk partition, the time required for initialization would be different. In some cases, it takes time for initialization, and then it takes a few minutes or more to change to the next window.

FIGURE 5.10 Dump Device Structure Menu

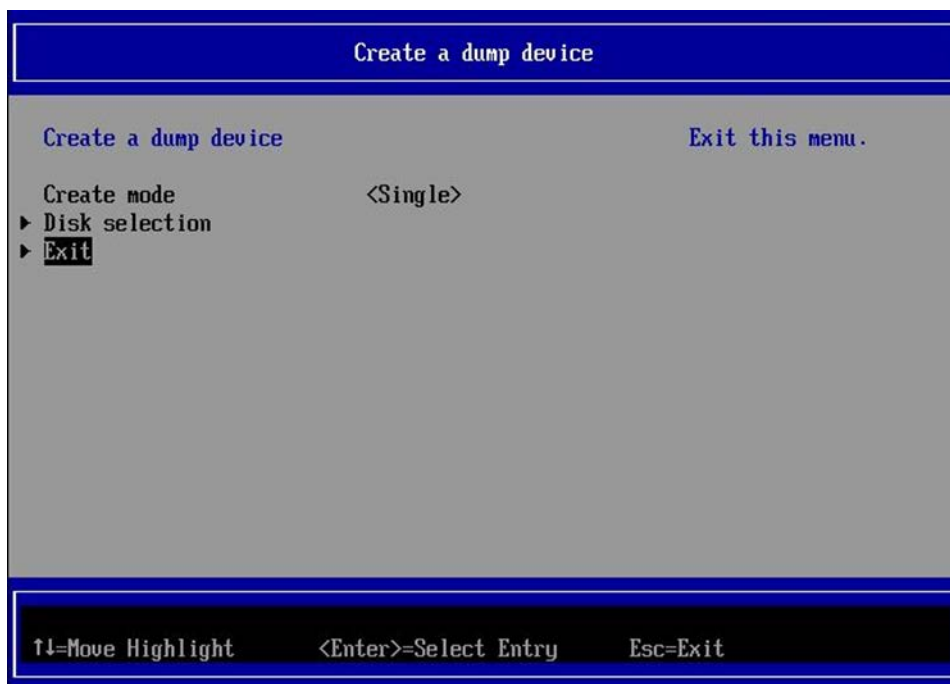

11. Select [Exit] and press [Enter] key.
→ Return to the dump device maintenance menu.

FIGURE 5.11 Dump Device Maintenance Menu




12. Select [Select a dump device] on the dump device maintenance menu and press [Enter] key.
→ The dump device set up menu is displayed.

FIGURE 5.12 Dump Device Setting Menu




13. Select the first dump device is specified. [1] and press [Enter] key.
→ The dump device list menu is displayed.

FIGURE 5.13 Dump Device List Menu

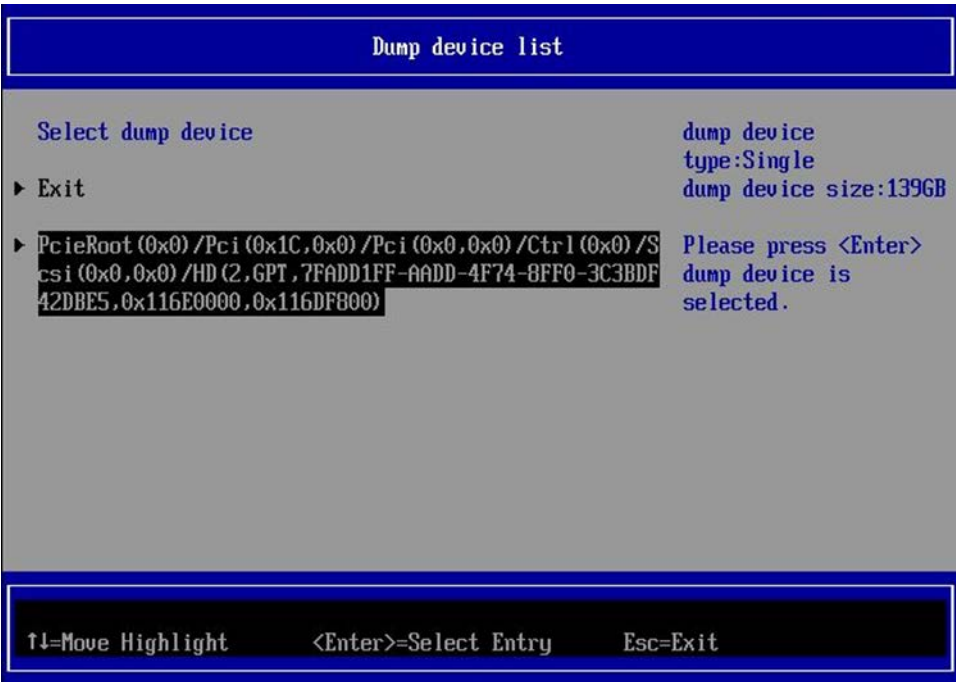

14. Select the disk used for the dump device or the disk partition and press [Enter] key.
→ The dump device is decided, and the action returns to the dump device set menu.

FIGURE 5.14 Dump Device Setting Menu

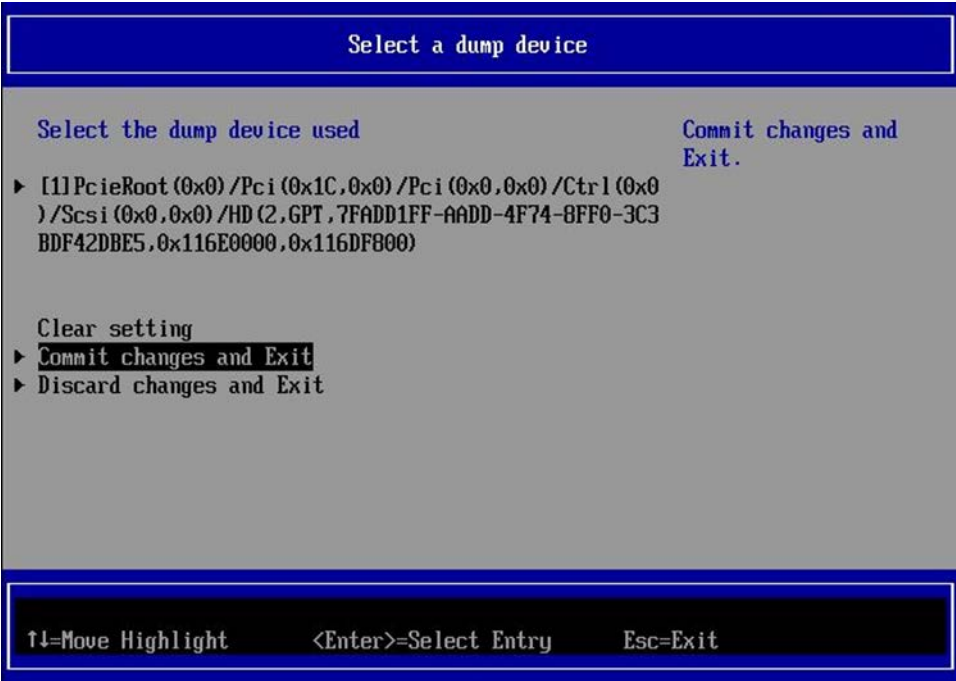

15. Select [Commit Changes and Exit] and press [Enter] key.
→ The dump device is decided, and the action returns to the dump device maintenance menu.

FIGURE 5.15 Dump Device Maintenance Menu



16. Select [Exit], and press [Enter] key
→ The action returns to the main menu (sadump)

FIGURE 5.16 Main Menu (sadump)



17. Select [Exit], and press [Enter] key
→ Setting of sadump Configuration is completed.
18. When the HDD which is installed under SAS array controller card is set as a dump device, advance next. When the HDD on ETERNUS is set as a dump device, it is end here.
19. After confirming the following condition, change "Write Cache Policy" of SAS array controller card connecting a dump device to "Force Write Back". It is possible to get dump faster by this setting (dump time becomes about 1/4 in comparison with before setting change). However don't change the setting when the condition is not met. Data destruction which operational system does not expect may occur.

Condition

- HDD for operational system and HDD for dump device are installed under different SAS array controller cards.
or
- HDD for operational system and HDD for dump device are installed under same SAS array controller card, and flash backup unit is installed on the SAS array controller card.

For details on building a RAID configuration using internal hard disks, see the SAS RAID controller Guide below.

- 12Gb/s MegaRAID SAS Software

5.4 Setup of dump environment (Windows)

Windows OS provides memory dump function as standard. For obtaining the dump, it is necessary to secure the disc area in advance. For details regarding the setup of dump environment, see “11.4.3.Setup of dump environment (Windows)” of PRIMEQUEST 2000 Series Administration Manual (CA92344-0537).

5.4.1 About memory dump file/paging file

Memory dump file stores the debug information when STOP error (Fatal system error) occurs in the system. Settings for obtaining the memory dump are done after installing the operating system to be used in the operation or after installing the application.

The paging file is created in the hard disk to temporarily secure the memory area which has not been used. Paging file is also used at the time of creating the memory dump file. At the time of creating the memory dump file, entire memory dump information is stored temporarily in the paging file.

For the details regarding the memory dump file and paging file, see “11.4.3.Setup of dump environment (Windows)” of PRIMEQUEST 2000 Series Administration Manual (CA92344-0537).

5.5 Setup of dump environment (Linux)

In RHEL, the environment which can acquire the dump most reliably can be prepared by combining the kdump function which is a standard function of the operating system and the sadump function of hardware.

5.5.1 How to use sadump (Linux)

This section explains steps for sadump. Sadump allows you to store memory dump under the situation like below while kdump, the standard Red Hat Linux function does not allow this.

- OS panic or hang up before Kdump service starts
- Error while Kdump is working

1. Preparation

Install the following two packages corresponded the kernel version in use .

- kernel-debuginfo-common
- kernel-debuginfo

2. Configuring UEFI

Read “5.3 Setting of sadump” to configure UEFI for sadump. **Note** the following points.

- Set “RECYCLE” in Set up Manager to “<Enable>”. If it is not “<Enable>”, configuring dump devices is needed every time after taking a memory dump by sadump.
- Select “Create a dump device” in Dump device Manager, and set “Create mode” to “<Single>”. “<Multiple>” is not supported.

3. Configuring OS

Kdump need to be set up beforehand to use sadump. After configuring Kdump, the additional configuration is needed as follows.

- Configuration not to reboot after panic

Set kernel parameter “kernel.panic” to 0 (default is 0). If not set, system reboot automatically after panic and the chance to start sadump is missed. Configure /etc/sysctl.conf as follows.

```
kernel.panic=0
```

- Configuration to stop system after Kdump

In /etc/kdump.conf, set “default” to “halt” or “shell”. If not set, system reboot automatically when Kdump fails and the chance to start sadump is missed.

- Configuration to start sadump

Set “blacklist kvm-intel” in /etc/kdump.conf. If not set, SMI is blocked and sadump cannot start.

Example of /etc/kdump.conf

```
ext4 LABEL=/dump
path /
core_collector cp --sparse=always
extra_bins /bin/cp
disk_timeout 60
default shell
blacklist kvm-intel
```

- Configuration to start Kdump by NMI

As a procedure to start sadump, starting Kdump by NMI is needed at first. Configure /etc/sysctl.conf as follows.

```
kernel.unknown_nmi_panic=1
```

4. Start sadump and confirmation

Start sadump as follows.

- Send NMI to start Kdump

In MMB WebUI, Select [Partition], and select [NMI] in [Power Control], and click [Apply]

- If Kdump does not start, then start sadump

In MMB WebUI, Select [Partition], and select [sadump] in [Power Control], and click [Apply]

When memory dumping by sadump starts, the following message is displayed in console screen, and the number is counted up gradually.

```
[ 0.0%].
```

The number becomes 100 and the following message is displayed when memory dump is finished.

```
Dumping Complete
```

After memory dump is finished and OS is rebooted, confirm memory dump by using crash command.

This is an example to check memory dump which is saved on /dev/sdb1. The “DATE” means the date and time when memory dump was captured.

```
# crash /usr/lib/debug/lib/modules/2.6.32-358.el6.x86_64/vmlinux /dev/sdb1
```

```
(snip)
KERNEL: /usr/lib/debug/lib/modules/2.6.32-358.el6.x86_64/vmlinux
DUMPFILE: /dev/sdb1
CPUS: 2
DATE: Fri Oct 11 09:10:39 2013
UPTIME: 00:19:04
LOAD AVERAGE: 0.14, 0.03, 0.01
TASKS: 125
NODENAME: localhost
RELEASE: 2.6.32-358.el6.x86_64
VERSION: #1 SMP Tue Jan 29 11:47:41 EST 2013
MACHINE: x86_64 (1861 Mhz)
MEMORY: 4 GB
PANIC: "Oops: 0002 [#1] SMP " (check log for details)
PID: 7866
COMMAND: "bash"
TASK: ffff8801387c8aa0 [THREAD_INFO: ffff8801394e2000]
CPU: 0
STATE: TASK_RUNNING (PANIC)
```

5. Send memory dump to vendor

Send memory dump to vendor who supports RHEL. makedumpfile command can be used to convert memory dump to a normal file. makedumpfile can generate small dump file by compression or filtering. Read man manual of makedumpfile for details. This is an example of saving memory dump on /dev/sdb1 to a vmcore file using compression and filtering out memory region except kernel memory(Write following command in one line).

```
# makedumpfile -c -d 31 -x  
/usr/lib/debug/lib/modules/2.6.32-358.el6.x86_64/vmlinux /dev/sdb1 vmcore
```

5.6 Setup of NTP client

See “6.2NTP Configuration”, for the setup of the NTP client.

5.7 Saving management and configuration information

This explains about how to save the following information. Be sure to save the UEFI configuration information.

- 5.7.1 Saving MMB configuration information
- 5.7.2 Saving BIOS configuration information

Remark

Save the UEFI configuration information regularly after starting the operation. For saving EFI configuration information, see “5.7.2 Saving BIOS configuration information”

All the screenshots are display examples. The contents displayed may differ depending on the system configuration.

5.7.1 Storage of MMB configuration information

This explains the method to take back-up of the MMB configuration information on remote PC.

[Maintenance] menu in MMB Web-UI is used, for storing the MMB configuration information.

Operations

1. Select the [Maintenance]-[Backup/Restore Configuration]-[Backup/Restore MMB Configuration]
→ [Backup/Restore MMB Configuration] window is displayed.

FIGURE 5.17 Example of [Backup/Restore MMB Configuration] Window



2. Click [Backup] button
→ Storage location dialogue box of browser is displayed.
 3. Select the storage pass and click the [OK] button
→ Downloading of configuration information file is started.
- Initial file of the MMB configuration information for back-up is as follows.
MMB_ (Date on which the backup of the file taken)(MMB version).dat


5.7.2 Storage of BIOS configuration information

This section describes the method for taking the backup of the BIOS configuration information on a remote PC. [Maintenance] menu in MMB Web-UI is used for storing the BIOS configuration information.

Operations

1. Select the [Maintenance]-[Backup/Restore Configuration]-[Backup BIOS Configuration]
→ [Backup BIOS Configuration] window is displayed.

FIGURE 5.18 Example of [Backup BIOS Configuration]

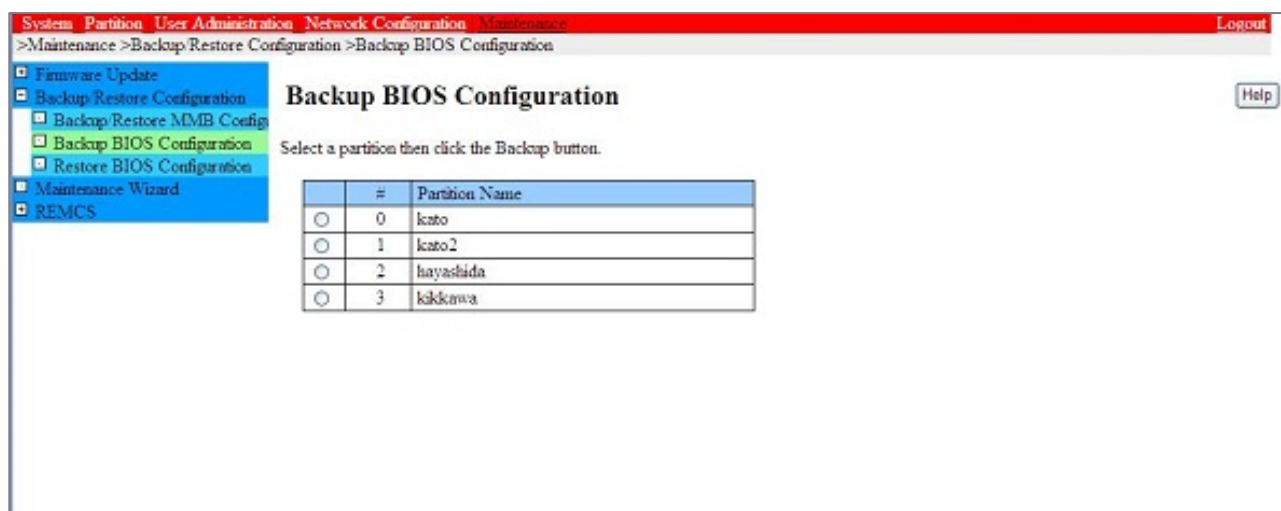

2. Select the radio button of partition which takes the backup of configuration information, and click [Backup] button.
→ Dialogue box which specifies the storage location, is displayed.
3. Select the storage pass and click [OK] button.
Initial file name of the BIOS configuration for back-up is as follows.
Partition number_ Date on which the backup of the file is taken_(BIOS version).dat

5.7.3 Storage of LAN card and CNA card configuration information

When configuring Option ROM functions(*) of PCIe card, write down the settings you have done in a configuration sheet for each card and keep it as a backup if needed.

You may be required to re-configure the settings after replacing a faulty card to a spare part.

The configuration sheets for PCIe cards are listed and downloadable in the following site:

<http://www.fujitsu.com/global/services/computing/server/primequest/>

* Functions of option ROM

SR-IOV setting, UMC(Universal Multi-Channel), Boot setting, etc.

5.8 “Write Policy” recommended setting of SAS array controller card

You can attach a flash backup unit to SAS array controller card (including dual channel).

The recommended setting of Write Policy is as follows. It is different whether SAS array controller card has a flash backup unit or not. Please refer to "LSI MegaRAID(R)SAS Software" for the detailed function and the setting method.

Flash backup unit	Write Policy recommended setting
Without flash backup unit	Write Through
With flash backup unit	Write Back

5.9 Setup of Serial Port

Serial port (/dev/ttyS1) is set as 115200 bps.

5.9.1 Setup of Serial Port (Red Hat Enterprise Linux 7.x)

1. Login as root account.
2. Add the following sentence to /etc/rc.d/rc.local.

```
setserial /dev/ttyS1 baud_base 115200  
stty -F /dev/ttyS1 115200
```

3. Add the execution right to /etc/rc.d/rc.local by executing the following command.

```
# chmod u+x /etc/rc.d/rc.local
```

4. Boot rc-local service by executing the following command.

```
# systemctl start rc-local
```

5. Reboot OS

5.9.2 Setup of Serial Port (Red Hat Enterprise Linux 6.x)

1. Login as root account.
2. Add the following sentence to /etc/rc.d/rc.local.

```
setserial /dev/ttyS1 baud_base 115200  
stty -F /dev/ttyS1 115200
```

3. Reboot OS

5.9.3 Setup of Serial Port (SUSE (R) Linux Enterprise Server 12)

1. Login as root account.
2. Install setserial package when it is not installed.
3. Add the following sentence to /etc/init.d/boot.local.

```
setserial /dev/ttyS1 baud_base 115200
```

4. Reboot OS

CHAPTER 6 Work after installation

This chapter explains the operation which is to be implemented after introducing the PRIMEQUEST 2000 series, such as setting of NTP or setting of security.

6.1 Redundant configuration of network adaptor


For establishing the network after installation, following teaming (multi-pass) is set by using the utility corresponding to each network adaptor.

Setup of network adaptor (Intel Gigabit Ethernet (GbE))

For management LAN and operation LAN, redundant setting of network is done. Network to be targeted is (2) in the following Figure.

- Windows: Configure the teaming by using the Intel PROSet (R) (*1). For details, see help of IntelPROSet (R).
*1: In Windows Server 2012 or later, NIC teaming of standard function of the operating system, can also be used.

FIGURE 6.1 External network configuration

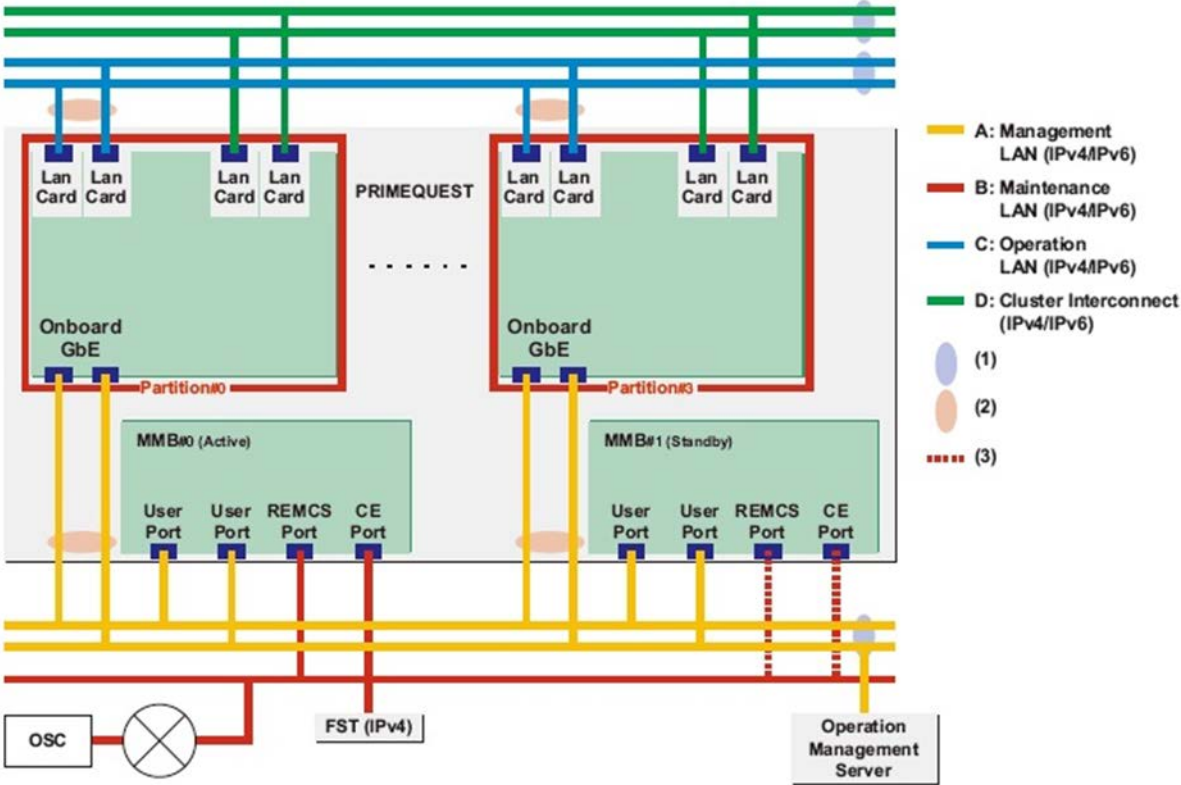

Number	Description
(1)	Switching Hub redundancy
(2)	redundancy by teaming (such as GLS)
(3)	Standby side is disabled

Note

There are some notes on teaming with IntelPROSet (R).

For the details on the notes, see “G.9 NIC (Network Interface Code)” of PRIMEQUEST 2000 Series Administration Manual (CA92344-0537)

6.2 NTP Configuration

This section describes the operation method in the PRIMEQUEST 2000 series, regarding the operation of time correction wherein Network Time Protocol (NTP) is used.

NTP is the protocol which provides the method by which time information is exchanged between the computers of same type. The time correction function references the correct time on another system at system startup. Then, it sets the time and keeps it within the specified error range.

At that time, system with original time is called as NTP server and the reference system is called as NTP client. In the NTP server, it is necessary to activate the NTP service, for responding to the request from the NTP client.

In case of the operation of time correction which is used in NTP, when the operating system is Windows, see “Appendix E Specifications and setting of NTP server (Windows)”

For usage conditions and notes of Extended Partitioning function, see “3.2.1 Extended Partitioning” of PRIMEQUEST 2000 Series Administration Manual (CA92344-0537)”.

All the windows given here are the display examples. Contents displayed according to system configuration are different.

6.2.1 Method of operating NTP in PRIMEQUEST 2000 series

This explains the method of time correction of each partition where NTP in the PRIMEQUEST 2000 series is used.

In the PRIMEQUEST 2000 series, there are two types of objects which set the time.

- MMB
- Each partition

For the details regarding the NTP client of MMB, see “6.2.2. Specification of NTP server”

Time of each partition is corrected by setting the NTP client of the operating system which is installed.


For the stable NTP operation, specify multiple (In case of RHEL, three servers or more) NTP servers from each NTP client.

Schematic diagram of operation when NTP server other than MMB is used is shown in “Figure 7.2 Operation diagram when external NTP server is used (Case when 3 NTP servers are used).”

Note

Match the stratum (Stratum) while using multiple NTP servers.

FIGURE 6.2 Operation Diagram when External NTP Server is used (When three NTP servers are used)

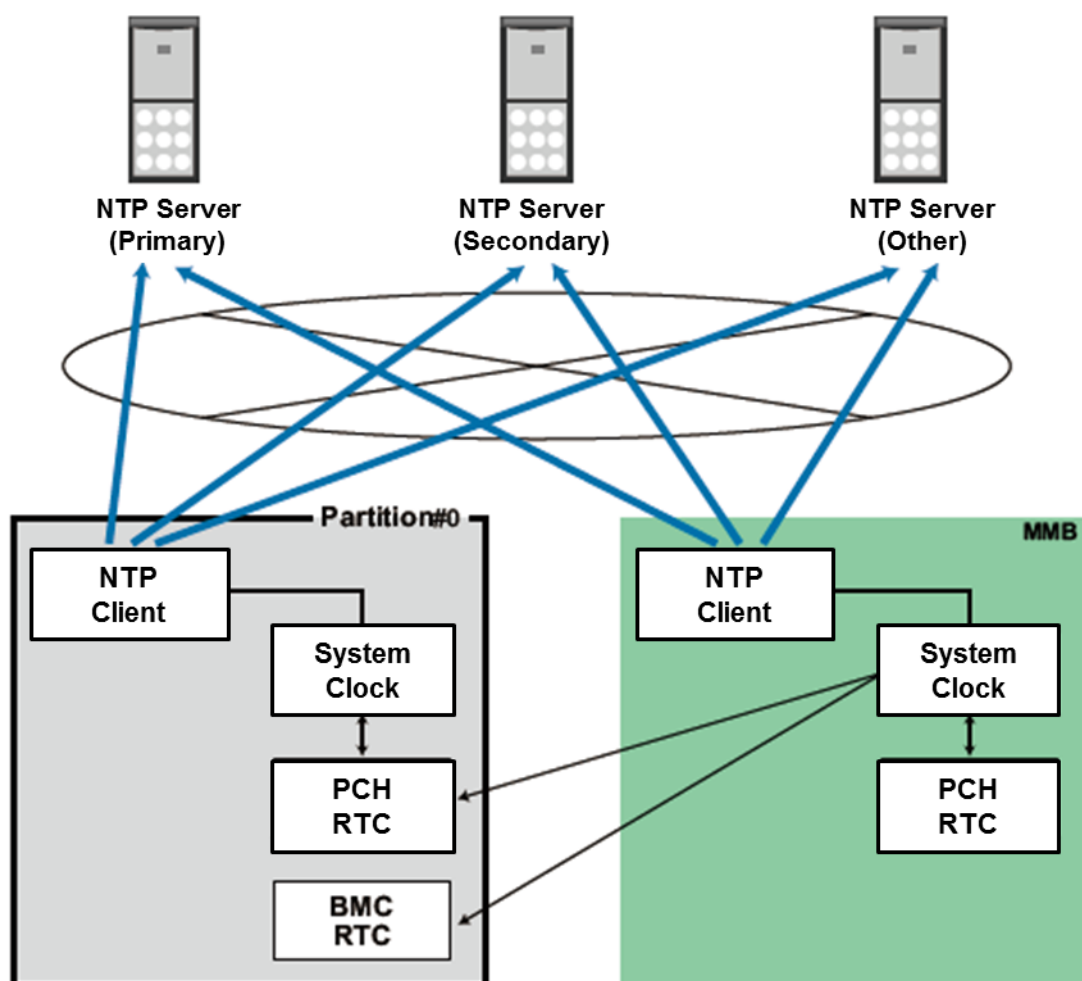

Only one NTP server is specified: in that case, when it is not possible to communicate with the NTP server which is specified by the NTP client, since other synchronous object does not exist, NTP server is disabled. NTP client cannot do the time correction according to NTP within the period in which communication with the NTP server is restored. As a result, time is recorded with the system clock accuracy. Since there is an individual difference in the accuracy of the system clock, when time correction according to NTP is not possible, time gap between the systems is enlarged, and problems might be caused in the middleware or in the application.

Remark

NTP server 1-NTP server 3 are the NTP servers having high accuracy of time in internet or in intranet.

6.2.2 Setting NTP server

Other NTP server which is time synchronous is specified by using the NTP client function of the MMB.

Note

Time of MMB and time of partition side is controlled by the respective independent clocks. Clock of MMB does not repot and adjust the partition clock. Since the time of MMB and time of partition, are necessary for following responses, keep the MMB time and the partition time the same or at least close.

- At the time of comparing the MMB side log and the operating system side log in partition by the hard failure
- At the time of executing the system inspection or executing the security inspection
- When alarm occurs in the time maintenance battery of the partition side.

Execute any of the following ways to adjust the time.

- Set the time manually from the MMB Web-UI
- Set the time by using the NTP client function of the MMB

Remark

Set the time on Operation System if NTP is not used.

Operations

1. Click [Networking configuration] – [Date/Time].
-> [Date/Time] window is displayed. For the details of [Date/Time] window, see “1.5.1 [Date/Time] window” of PRIMEQUEST 2000 series Tool Reference (CA92344-0539).

FIGURE 6.3 Example of [Date/Time] Window

System Partition User Administration Network Configuration Maintenance Logout

>Network Configuration >Date/Time

Date/Time

Click the Apply Button to apply all changes.

Date	2013 - 4 - 16
Time	<input type="checkbox"/> Modify the Time 9 : 53 : 26
Time zone	Asia / Tokyo
NTP	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
NTP Time Correction Mode	<input checked="" type="radio"/> Step <input type="radio"/> Slew
NTP Server1	::
NTP Server2	::
NTP Server3	::
Current Sync Status	

Apply Cancel

2. Click [Enable] for [NTP].
3. Select [NTP Time Correction Mode].
4. Enter IP address of other NTP server.
NTP Server 1: Specify NTP server.
NTP Server 2: Specify NTP server.
NTP Server 3: Specify Other (Tertiary) NTP server.
5. Click [Apply] button.
MMB synchronizes with NTP server and time set in NTP Server 1 ~ NTP Server 3.
6. After few minutes click [Refresh] button and confirm whether the correct time is displayed.

6.3 Configuring DNS server

See “[3.3.8 Configuration of DNS server](#)”, for configuration of DNS server.

6.4 Set up of SMTP

See “[3.3.9 Set up of Alarm E-Mail](#)” for configuration of SMTP.

6.5 Set up of security

This section describes how to make the necessary settings to ensure security and notification of errors during operation. Configure the security necessary for operation. It is recommended to take the back-up of the set-up information when below mentioned set ups are completed. See “3.5 Save structural information” for the back-up of the set information.

- [6.5.1 Set up of Access Control](#)
- [6.5.2 Set up of SNMP](#)
- [6.5.3 Set up of SSH](#)
- [6.5.4 HTTPS Settings](#)

All the screenshots are display examples and the contents to be displayed differ depending upon the system configuration.

6.5.1 Set up of Access Control

To secure the security of MMB, set up access control according to Network Protocol.
For securing the security, it is recommended to set up access control at the time of installation. Access control can also be set up after the installation.

Selection of Filters of Editing objects

Operations

1. Click [Network Configuration] - [Access Control].
-> [Access Control] window is displayed. See “1.5.10 [Access Control] window” of PRIMEQUEST 2000 series Tool Reference (CA92344-0539) for the details of [Access Control] window.

FIGURE 6.4 Example of [Access Control] Window




2. Filter of editing object is selected by radio button.

Addition and editing of filters

Operations

1. Click [Add Filter] button when filter is to be added and click [Edit Filter] button after selecting the filter when filter is to be edited.
 -> At the time of addition [Add Filter] window and at the time of editing [Edit Filter] is displayed. See PRIMEQUEST 2000 series Tool Reference (CA92344-0539) "[■ Add filter/Edit filter] Window of 1.5.10 [Access Control] window" for the details of [Add Filter] window and [Edit Filter] window.

FIGURE 6.5 Example of [Add Filter] Window

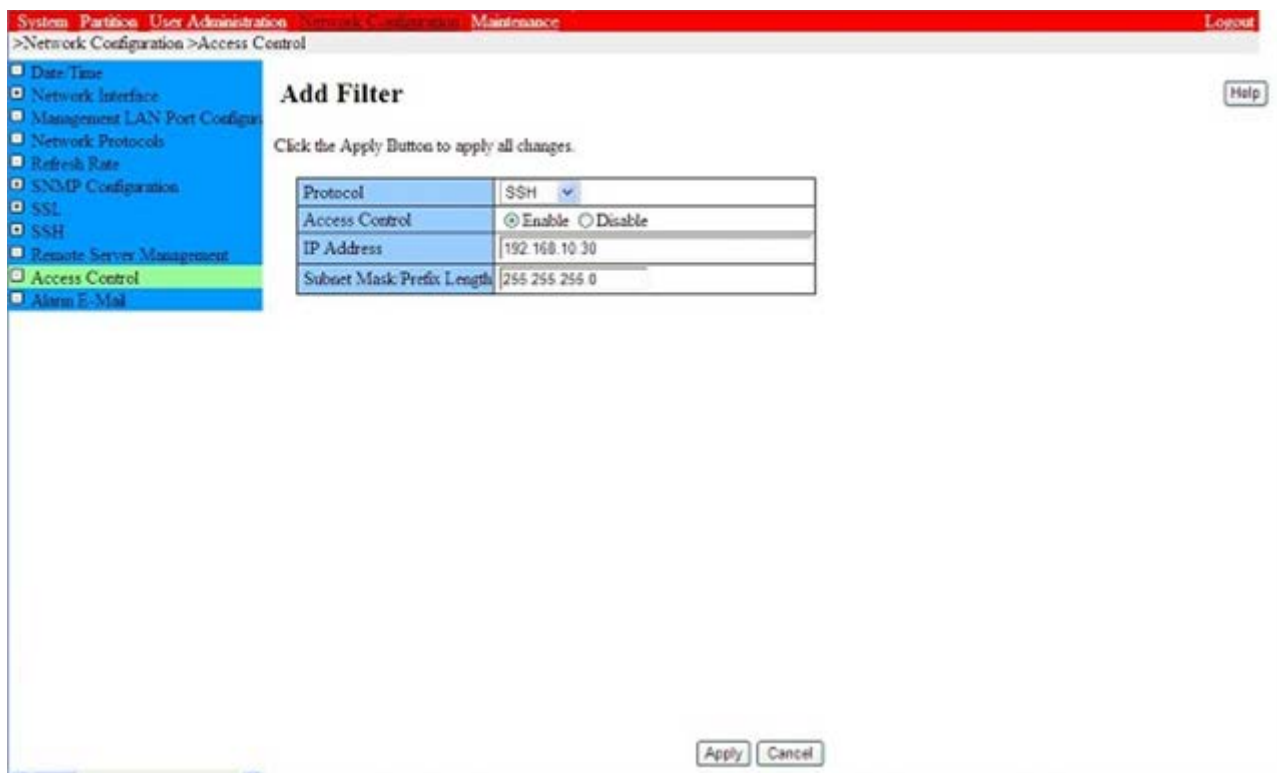

2. Enter required items.
 Maximum 64 filters can be set.

Remark

When there are proxy settings in Web browser of PC and work station, set IP address considering the proxy set up.

3. Click [Apply] button.

Deletion of Filter

Operations

1. After selecting the filter, click [Remove Filter] button.
 -> Window of confirmation of deletion is displayed.
2. At the time of deletion, click [OK] button.
 -> Returns to [Access Control] window. The deletion of filter is confirmed on the list. If the deletion is to be cancelled, click [Cancel] button.

6.5.2 Set up of SNMP

Simple Network Management Protocol (SNMP) is set up. Configure SNMP with the permission of Administrator.
Set whether to report any operational failure to an external destination, the notification destination.

- Enable SNMP
- Set the details of SNMP
- Set up transmission destination of SNMP trap
- Set up SNMP v3

Validate SNMP

Operations

1. Click [Network Configuration] - [Network Protocols].
-> [Network Protocols] window is displayed. See “1.5.4 [Network Protocols] window” of PRIMEQUEST 2000 series Tool Reference (CA92344-0539) for the details of [Network Protocols] window.

FIGURE 6.6 Example of [Network Protocols] Window

Web (HTTP/HTTPS)	
HTTP	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
HTTP Port#[80,1024-65535]	8081
HTTPS	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
HTTPS Port#[432,443,1024-65535]	432
TLS1.0/1.1	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Timeout (sec) [0,60-9999]	600

Telnet	
Telnet	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Telnet Port#[23,1024-65535]	23
Timeout (sec) [0,60-9999]	600

SSH	
SSH	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
SSH Port#[22,1024-65535]	22
Timeout (sec) [0,60-9999]	600

SNMP	
SNMP Agent	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Agent Port#[161,1024-65535]	161
SNMP Trap	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Trap Port#[162,1024-65535]	162

Apply Cancel

2. Enter [SNMP] items.
3. Click [Apply] button.

Set up of SNMP details

Operations

- 1. Click [Network Configuration] - [SNMP Configuration] - [Community].
-> [SNMP Community] window is displayed. For the details on [SNMP Community] window, see "[SNMP Community] window" of 1.5.6 [SNMP Configuration] Menu" of PRIMEQUEST 2000 series Tool Reference (CA92344-0539).

FIGURE 6.7 Example of [SNMP Community] Window

System Information

System Name PRIMEQUEST

System Location

System Contact

Note)System Name can be configured in System->System Information page.

Community

Community/User	IP Address/MASK	SNMP Version	Access	Auth
		1	Read Only	noauth
		1	Read Only	noauth
		1	Read Only	noauth
		1	Read Only	noauth
		1	Read Only	noauth
		1	Read Only	noauth
		1	Read Only	noauth
		1	Read Only	noauth
		1	Read Only	noauth
		1	Read Only	noauth
		1	Read Only	noauth
		1	Read Only	noauth
		1	Read Only	noauth
		1	Read Only	noauth
		1	Read Only	noauth
		1	Read Only	noauth

Apply Cancel

- 2. Enter the required items.
Maximum 16 Communities can be set. The details regarding the community to be set, IP Address where Access is permitted, SNMP version, Access authority and authentication are entered.
At the time of deletion, click the items of [Community] and [IP Address].
- 3. Click [Apply] button.

Set up transmission destination of SNMP trap

Operations

1. Click [Network Configuration] - [SNMP Configuration] - [Trap].
-> [SNMP Trap] window is displayed. See "[■ [SNMP Trap window] window" of 1.5.6 [SNMP Configuration] Menu" of PRIMEQUEST 2000 series Tool Reference (CA92344-0539) for the details of [SNMP Trap] window.

FIGURE 6.8 Example of [SNMP Trap] Window

System Partition User Administration Network Configuration Maintenance Logout

>Network Configuration >SNMP Configuration >Trap

SNMP Trap

Click the Apply Button to apply all changes.

Trap Destination

Community User	IP Address	SNMP Version	Auth	Auth Type	Auth passphrase Priv passphrase
<input type="checkbox"/>		1	noauth	MD5	
<input type="checkbox"/>		1	noauth	MD5	
<input type="checkbox"/>		1	noauth	MD5	
<input type="checkbox"/>		1	noauth	MD5	
<input type="checkbox"/>		1	noauth	MD5	
<input type="checkbox"/>		1	noauth	MD5	
<input type="checkbox"/>		1	noauth	MD5	
<input type="checkbox"/>		1	noauth	MD5	
<input type="checkbox"/>		1	noauth	MD5	
<input type="checkbox"/>		1	noauth	MD5	

Apply Cancel Test Trap

2. Enter the transmission destination.
A maximum of 16 Trap destinations can be set up.
The details regarding community or user name, IP address of trap transmission destination, SNMP version, and authentication level are set up.
3. Click [Apply] button.
When [Test Trap] button is clicked, trap for test for currently set up trap destination can be transmitted.

Set up SNMP v3

Specific engine ID and specific user is set in SNMP v3.

Remark

When an engine ID or IP address is changed, all the users set for SNMP v3 access should be set again. To enable the set users, it is necessary to reboot SNMP service once it is stopped. When [Apply] button is clicked for that, SNMP service gets temporarily stopped.

Operations

- 1. Click [Network Configuration] - [SNMP Configuration] - [SNMP v3 Configuration].
-> [SNMP v3 Configuration] window is displayed. See "[■ [SNMP v3 Configuration] window" of 1.5.6 [SNMP Configuration] Menu" of PRIMEQUEST 2000 series Tool Reference (CA92344-0539) for the details of [SNMP v3 Configuration] window.

FIGURE 6.9 Example of [SNMP v3 Configuration]

User Name	Auth Type	Auth passphrase (confirm)	Priv passphrase (confirm)
<input type="checkbox"/>	<input type="radio"/> MD5 <input type="radio"/> SHA		
<input type="checkbox"/>	<input type="radio"/> MD5 <input type="radio"/> SHA		
<input type="checkbox"/>	<input type="radio"/> MD5 <input type="radio"/> SHA		
<input type="checkbox"/>	<input type="radio"/> MD5 <input type="radio"/> SHA		
<input type="checkbox"/>	<input type="radio"/> MD5 <input type="radio"/> SHA		
<input type="checkbox"/>	<input type="radio"/> MD5 <input type="radio"/> SHA		
<input type="checkbox"/>	<input type="radio"/> MD5 <input type="radio"/> SHA		
<input type="checkbox"/>	<input type="radio"/> MD5 <input type="radio"/> SHA		
<input type="checkbox"/>	<input type="radio"/> MD5 <input type="radio"/> SHA		
<input type="checkbox"/>	<input type="radio"/> MD5 <input type="radio"/> SHA		

- 2. Enter SNMP v3 user.
A maximum of 16 users can be registered.
- 3. Click [Apply] button.
SNMP service is restarted for reflecting the selected user.

6.5.3 Set up of SSH

Configure SSH for the MMB. You can set it with Administrator privileges.

Operations

- 1. Click [Network Configuration] - [Network Protocols].
[Network Protocols] window is displayed. For the details of [Network Protocols] window, see "[1.5.4 [Network Protocols Window] window of PRIMEQUEST 2000 series Tool Reference (CA92344-0539).

FIGURE 6.10 Example of [Network Protocols] Window

Network Protocols

Click the Apply Button to apply all changes.

Web (HTTP/HTTPS)

HTTP	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
HTTP Port#[80,1024-65535]	8081
HTTPS	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
HTTPS Port#[432,443,1024-65535]	432
TLS1.0/1.1	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Timeout (sec) [0,60-9999]	600

Telnet

Telnet	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Telnet Port#[23,1024-65535]	23
Timeout (sec) [0,60-9999]	600

SSH

SSH	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
SSH Port#[22,1024-65535]	22
Timeout (sec) [0,60-9999]	600

SNMP

SNMP Agent	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Agent Port#[161,1024-65535]	161
SNMP Trap	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Trap Port#[162,1024-65535]	162

Apply Cancel

- 2. Set the [SSH] items.
- 3. Click the [Apply] button.

6.5.4 HTTPS Settings

The HTTPS of MMB is set. It can be set by using Administrator privileges.

To [Enable] the HTTPS, it is necessary to register a valid SSL certificate. When the valid SSL certificate is not registered and when it is attempted to [Enable] the HTTPS, error is displayed.

For the valid SSL certificate, specify the “attested certificate” or “self-attested certificate” that is generated on MMB window.

There are cases where HTTPS is already set by our engineers. If the changes are not required, skip the HTTPS settings and proceed to the next settings.

Operations

1. Click [Network Configuration] – [Network Protocols].
→[Network Protocols] window is displayed. For details about the [Network Protocols] window, see “1.5.4 [Network Protocols] window” of the PRIMEQUEST 2000 Series Tool Reference (CA92344-0539).

FIGURE 6.11 Example of [Network Protocols] window

Network Protocols

Click the Apply Button to apply all changes.

Web (HTTP/HTTPS)

HTTP	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
HTTP Port#[80,1024-65535]	8081
HTTPS	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
HTTPS Port#[432,443,1024-65535]	432
TLS1.0/1.1	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Timeout (sec) [0,60-9999]	600

Telnet

Telnet	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Telnet Port#[23,1024-65535]	23
Timeout (sec) [0,60-9999]	600

SSH

SSH	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
SSH Port#[22,1024-65535]	22
Timeout (sec) [0,60-9999]	600

SNMP

SNMP Agent	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Agent Port#[161,1024-65535]	161
SNMP Trap	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Trap Port#[162,1024-65535]	162

Apply Cancel

2. Set the items related to HTTPS and TLS1.0/1.1 of [HTTP].
3. Click the [Apply] button.

6.6 Schedule operations

For details about the schedule operations, see “9.3 Schedule operations” of the PRIMEQUEST 2000 Series Administration Manual (CA92344-0537).

CHAPTER 7 Power ON and OFF of the partition

7.1 Related to the power ON and OFF of the partition

The power ON and OFF of the partition is described.

- 7.1.1 Power ON of the partition
- 7.1.2 Power OFF of the partition

Further, the power ON and OFF of the partition can be operated by a Partition Operator account with Administrator or Operator privileges for the partition.

All the screenshots are display examples and the contents displayed by the system configuration are different.

7.1.1 Power ON of the partition

The procedure of power ON of the partition is explained.

Operations

1. Log-in to MMB Web-UI.
[MMB Web-UI] window is displayed.
2. Click [Partition] – [Power Control].
[Power Control] window is displayed. For details about the [Power Control] window, see “1.3.1 [Power Control] window” of PRIMEQUEST 2000 series Tool Reference (CA92344-0539).

FIGURE 7.1 Example of [Power Control] window

Power Control

Select a Power Control option for one or more partitions, then click the Apply button to take effect.

#	P#	Partition Name	Power Status	System Progress	Power Control	Force Power Off Delay
0	-	free	Standby	Power Off	(Not specified)	<input type="checkbox"/> 1 min No Override
1	-	free	Standby	Power Off	(Not specified)	<input type="checkbox"/> 1 min No Override

3. Select [Power On] for the [Power Control] of the partition number to which power is to be supplied and click the [Apply] button.
4. The dialog box for confirmation is displayed. Click [OK] button to continue the operation and [Cancel] button to cancel the operation.

Remark

- The warning is displayed when 'power is already supplied to the partition' and when 'the control specified for power cut off was failed'.
- After cutting the power of all the partitions, it cannot be supplied for some time.

7.1.2 Power OFF of the partition

The procedure of power OFF of the partition is explained.

In Windows, when the system is to be shut down from MMB Web-UI, SV Agent (ServerView Agent) is necessary.

For the method of setting the SV Agent, see the description of "System shut down" tab of the ServerView Operations Manager Installation ServerView Agents for Windows.


In case of the below-mentioned status, see "11.2.10 Troubles while partition operations" of PRIMEQUEST 2000 Series Administration Manual (CA92344-0537) and confirm the contents.

- The MMB Web-UI displays [Error] for [Status] (information area) because either of the following was executed:
 - [Power Off], [Reset] or [Force Power Off] of the partition
 - Shutdown from the operating system
- "Read Error" is displayed for Part Number, Serial Number if the status of each component is displayed on the [MMB Web-UI] window.

Operations

- 1. Log in to MMB Web-UI.
The [MMB Web-UI] window is displayed.
- 2. Click [Partition] – [Power Control] from the MMB menu.
[Power Control] window is displayed. [#] column is partition number. For details on [Power Control] window, see [1.3.1 [Power Control] window] of PRIMEQUEST 2000 series Tool Reference (CA92344-0539).

FIGURE 7.2 Example of [Power Control] window

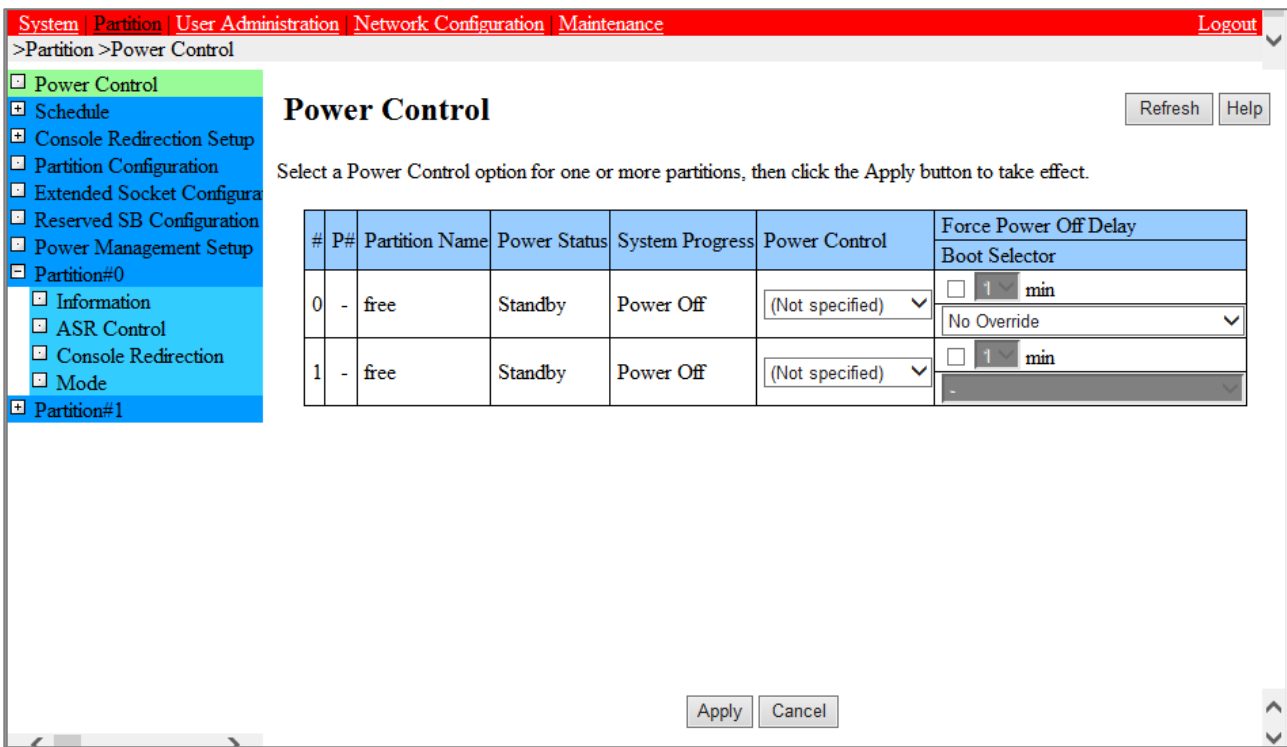

- 3. Select [Power Off] for the [Power Control] for the partition number of which power is to be cut off and click the [Apply] button.
The power supply of the specified partition is cut off.

Remark

If the operating system supports ACPI and [Power Off] is selected, then the power is automatically cut off on shutting down the operating system. However, even if the operating system supports ACPI, you may be unable to power off the partition as long as an application that does not support it is running on the operating system. It depends on the specifications of the operating system and the application. For details, see the manual of the operating system or the application.

If the operating system is not compatible to ACPI, according to the power cut off operations, the power is cut off without shutting down the operating system.

Therefore, due to the above-mentioned reasons, shut down the partition in the operating system

Appendix A List of setting items

See “Appendix A list of setting items” of PRIMEQUEST 2000 series Tool Reference (CA92344-0539).

A.1 Setting items of MMB

See “A.1.Setting items of MMB Web-UI” of PRIMEQUEST 2000 series Tool Reference (CA92344-0539).

A.2 Setting items of UEFI

See “A.2.Setting items of UEFI” of PRIMEQUEST 2000 series Tool Reference (CA92344-0539).

A.3 Setting items of BMC

See “A.3.Setting items of video redirection” of PRIMEQUEST 2000 series Tool Reference (CA92344-0539).

Appendix B About software

For details about the software bundled with the hardware of the PRIMEQUEST 2000 series, see “3.3 Bundled software” of PRIMEQUEST 2000 series General Description (CA92344-0534).

Appendix C Configuring the SAN boot environment

For details on developing the SAN boot environment, see PRIMEQUEST 2000 Series SAN Boot Environment Configuration Manual

Appendix D Notes on VMware installation

This appendix describes how to install VMware vSphere using the RAID environment configured in internal HDD/SSD and it also provides notes on installation.

Hereafter, VMware vSphere is mentioned as VMware.

D.1 Building the RAID environment in the VMware internal disk.

In the PRIMEQUEST 2000 series, RAID 0, RAID1, RAID 1E, RAID 5, RAID 6, RAID 10, RAID 50, RAID 60 are supported in internal HDD/SSD.

For details on building a RAID configuration using internal hard disks, see the SAS RAID controller Guide below.

- 12Gb/s MegaRAID SAS Software

D.2 Installing VMware Bundled Software

The bundled software is stored in ServerView Suite DVD(Tools) . The files are copied from ServerView Suite DVD(Tools) and then used.

Further, the bundled software necessary for VMware vSphere are as mentioned below.

TABLE D.1 Installation of the software attached to VMware

Bundled software	Installation destination
ServerView ESXi CIM Provider	VMware ESXi

D.3 Setting of PCI Bus mode

VMware vSphere 5 does not support segment mode. Set "PCI Address mode" menu in MMB Web-UI to PCI Bus mode.

VMware vSphere 6 supports segment mode, but segment mode and vt-d function cannot be used at the same time for versions earlier than ESXi 6.0.0b.

- If vt-d function is used for versions earlier than ESXi 6.0.0b, set "PCI Address mode" menu in MMB Web-UI to PCI Bus mode. For the detail of setting PCI Address mode, see " [Mode] window" of "1.3.9 [Partition#x] menu" of PRIMEQUEST 2000 series Tool Reference (CA92344-0539).
- If segment mode is used for VMware vSphere 6, disable vt-d function in EFI menu. For the detail of setting PCI Address mode, see " [Mode] window" of "3.4.3 [CPU Configuration] menu" of PRIMEQUEST 2000 series Tool Reference (CA92344-0539).

D.4 Setting of Address Range Mirror

VMware vSphere 6.5 or later supports Address Range Mirror. Address Range Mirror is configured in BIOS menu. For the detail of setting, see “3.4.6 [Memory Configuration] menu” of PRIMEQUEST 2000 series Tool Reference (CA92344-0539).

Appendix E Setting up the NTP Server (Windows)

This appendix describes how to specify and set of an NTP server for a specific Windows operating system.

This appendix is not needed for Active Directory member servers.

Active Directory member servers automatically synchronize the system clock with the domain controller.

E.1 Overview of NTP Client Settings

This appendix describes procedures for settings synchronizing the system clock with an NTP server for operating systems consisting of the following:

- Windows Server 2016
- Windows Server 2012 R2
- Windows Server 2012
- Windows Server 2008 R2

Remark

In the PRIMEQUEST 2000 series, the system time of a partition is kept in the Home SB. Therefore, if the Home SB of a partition is replaced during maintenance or switched by the reserved SB function, the system time of the partition may become incorrect.

In Windows Server 2008 and earlier, time was synchronized at startup, however in Windows Server 2008 R2 and later, time is not synchronized at startup. Please make the following settings so that the time lag is corrected immediately.

In Windows Server 2016, the standard value has been changed so that time synchronization is performed at shorter intervals than conventional OS. However, if you change NTP server which the system uses, the time synchronization interval becomes longer. To shorten the time synchronization interval after changing the setting, it is necessary to set the time synchronization interval when you change the setting of NTP server.

Table E.1 Settings for system clock synchronization

Task name	Task description
Specifying an NTP Server	Specify an NTP server in [Control Panel] - [Date and Time].
Synchronization Interval Setting	Set the following registry value with the Registry Editor to set a synchronization interval of 15 minutes: HKEY_LOCAL_MACHINE\SYSTEM\CurrentControlSet\Services\W32Time\TimeProviders\NtpClient * There is no line feed in the above registry key. name: SpecialPollInterval type: REG_DWORD value: 900 (decimal)
Startup Settings of NTP Service	Set the Windows Time service to start automatically in [Computer Management] - [Services and Applications] - [Services]
Event Task Settings	Register the following in Task Scheduler to synchronize with the System time when the time can be acquired from an NTP server: Log: "System", Source: "Time-Service", ID:37 The "w32tm /resync" command will run.

For detailed procedures, see following chapter:

- E.3 NTP Settings in Windows Server 2012 R2
- E.4 NTP Settings in Windows Server 2008 R2

E.2 NTP Settings in Windows Server 2016


The procedures in this chapter require Administrator privileges.

All screenshots are showing examples, and the actually displayed contents may vary depending on the system configuration and other factors.

E.2.1 Specifying an NTP Server


1. Select [Control Panel] - [Set the time and date]. [Date and Time] dialog box appears.

Figure E.1 [Date and Time] window (1)

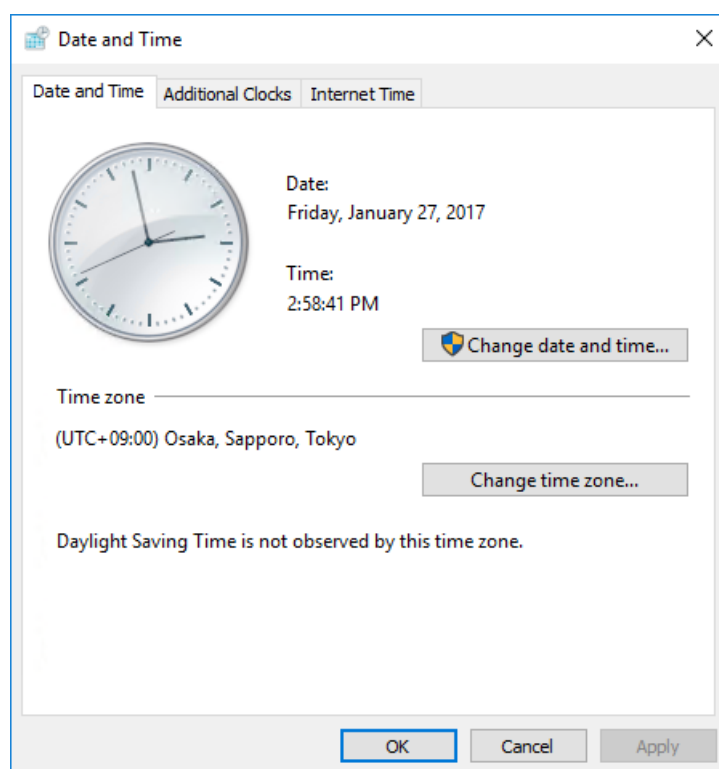


2. Click [Change settings] button on [Internet Time] tab.

Figure E.2 [Date and Time] window (2)

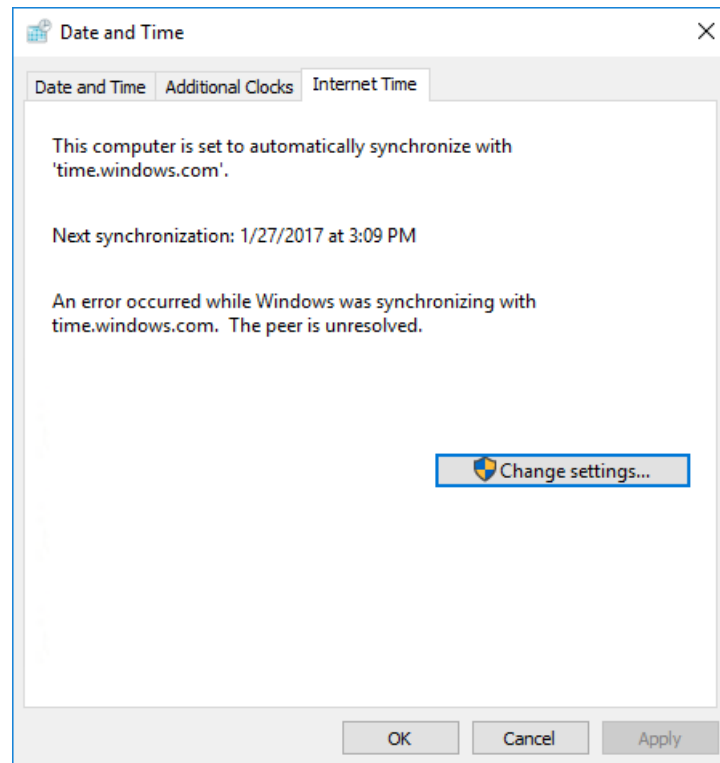

3. Set the following parameters in [Internet Time Settings] dialog box.
 - [Synchronize with an Internet time server]: Check the check box.
 - [Server]: Enter an NTP server name.

Figure E.3 [Internet Time Settings] dialog box

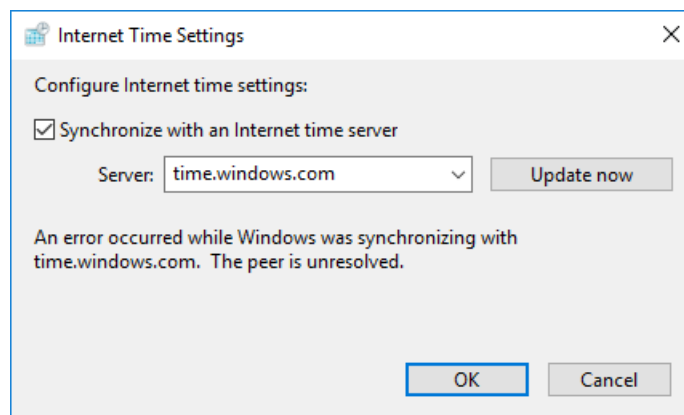

4. Click [OK] button to close [Internet Time Settings] dialog box.
5. Click [OK] button to close [Date and Time] dialog box.

E.2.2 Synchronization Interval and Startup Settings of NTP Service

1. Enter "regedit" in [Search] to start the Registry Editor.

Figure E.4 [Registry Editor] selection window




- Set the following registry value.

HKEY_LOCAL_MACHINE\SYSTEM\CurrentControlSet\Services\W32Time\TimeProviders\NtpClient


Name: SpecialPollInterval, Type: REG_DWORD, Data : 900 (decimal)

Figure E.5 [Registry Editor] window

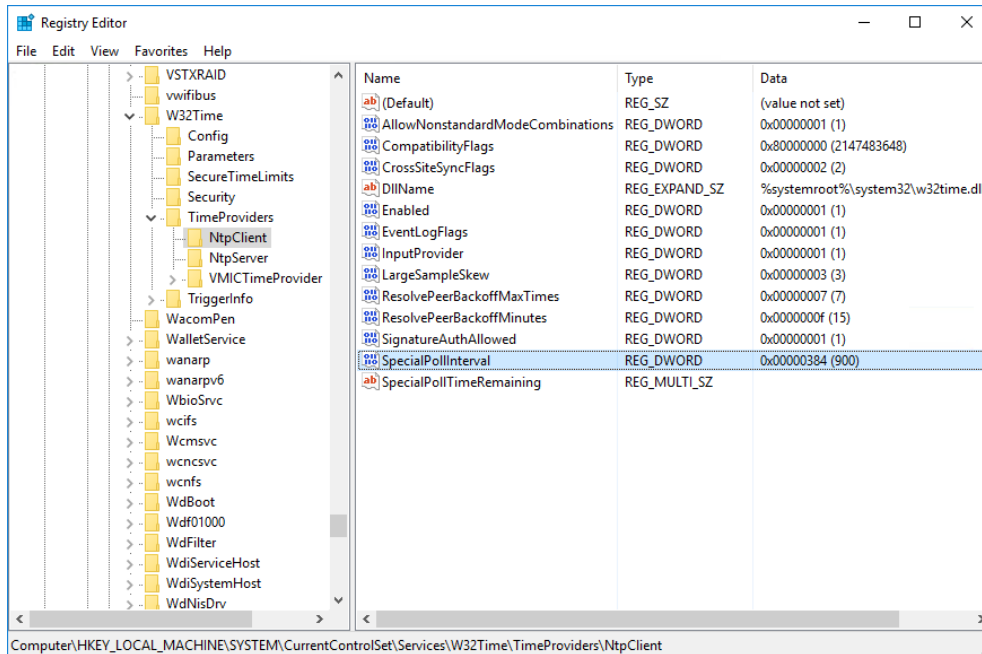


- Close the Registry Editor.
- Open [Start] - [Administrative Tools] - [Services].

Figure E.6 [Services] window

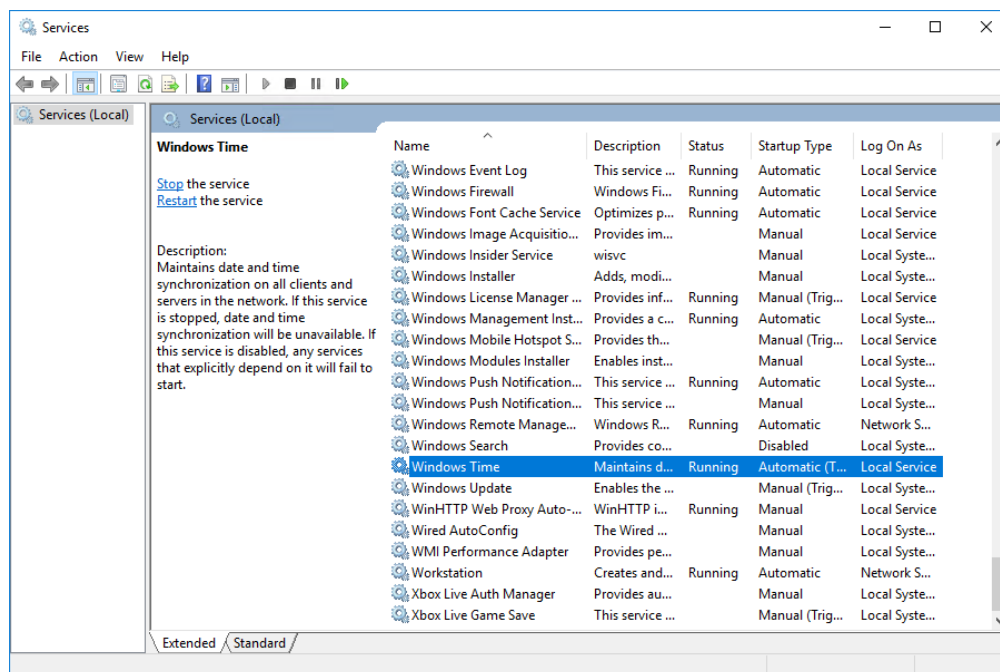

5. Right-click the Windows Time service. Select [Properties] from the context menu.
6. Set "Automatic (Delayed Start)" in [Startup type] in [Windows Time Properties] dialog box.

Figure E.7 [Windows Time Properties] window

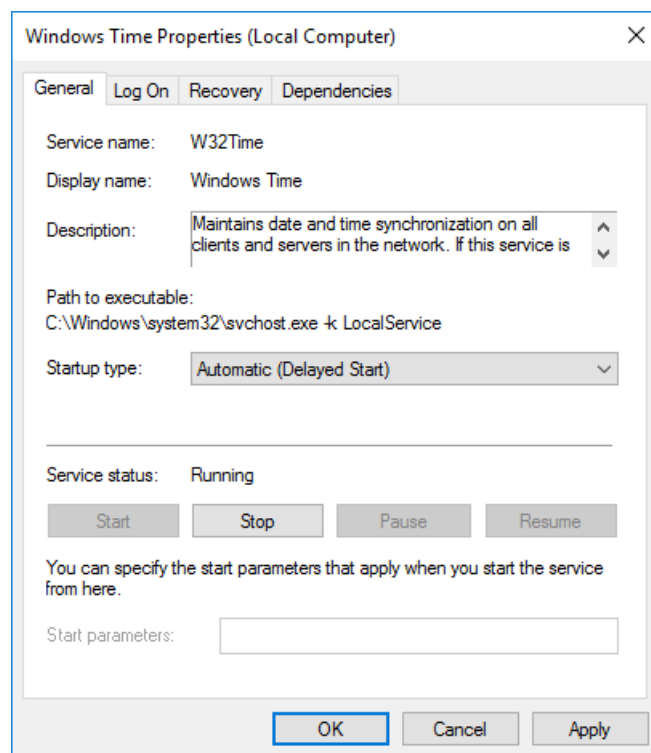


7. If the W32Time service is stopped, click [Start] button. If the W32Time service is running, click [Stop] button to pause in the service, and then click [Start] button.
8. Click [OK] button, and then close [Windows Time Properties] dialog box.

E.2.3 Event Task Settings

1. Open [Start] - [Administrative Tools] - [Task Scheduler].

Figure E.8 [Task Scheduler] window

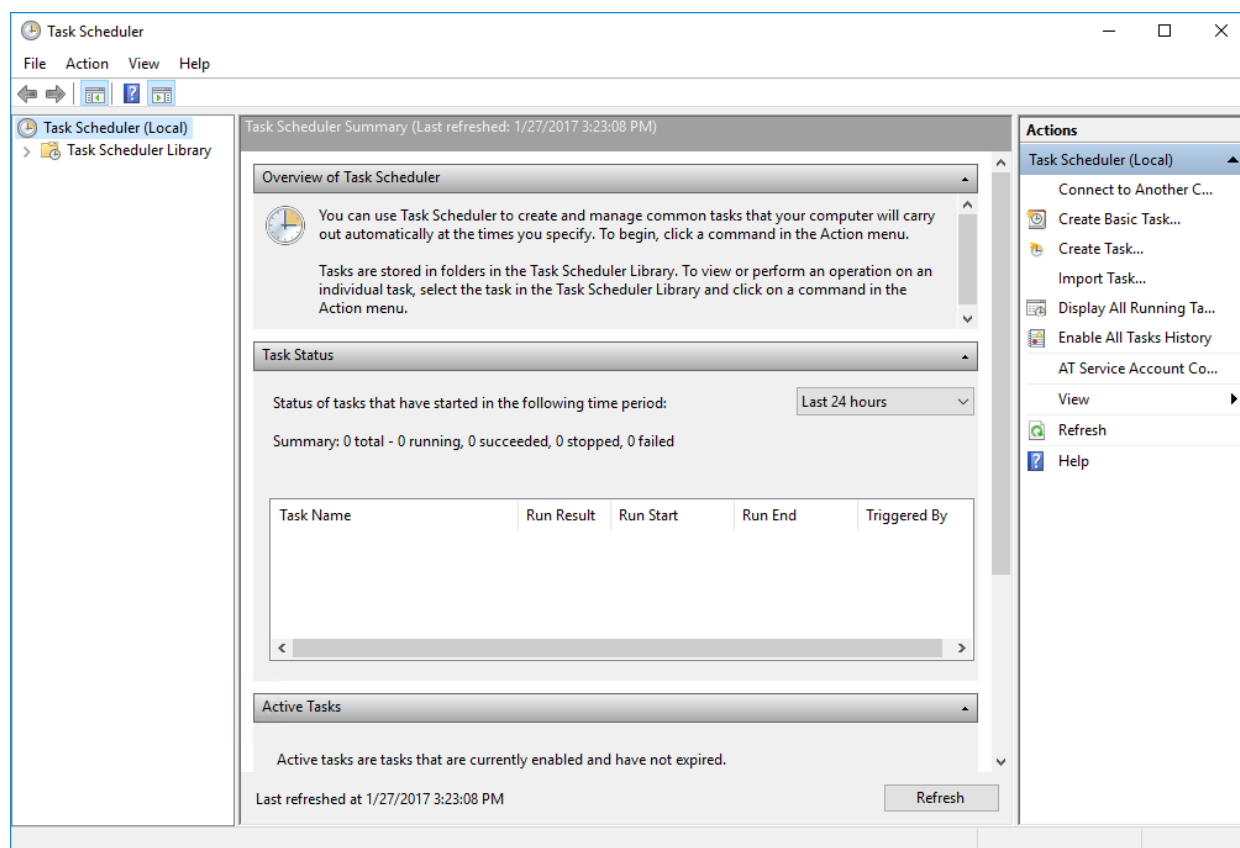

2. Select [Create Basic Task] at the right of the window. [Create Basic Task Wizard] appears.
3. Enter a chosen task name in [Name] on the [Create a Basic Task] screen, and click the [Next] button.
Example: On the screen below, "ntp-sync" is an arbitrary task name.

Figure E.9 [Create Basic Task Wizard] window (Create a Basic Task)

The screenshot shows the 'Create Basic Task Wizard' window with the title bar 'Create Basic Task Wizard' and a close button. The window has a sidebar on the left with a clock icon and the text 'Create a Basic Task'. Below this, there are four items: 'Create a Basic Task' (highlighted), 'Trigger', 'Action', and 'Finish'. The main area contains the text: 'Use this wizard to quickly schedule a common task. For more advanced options or settings such as multiple task actions or triggers, use the Create Task command in the Actions pane.' Below this text, there is a 'Name:' label followed by a text box containing 'ntp-sync'. Below the text box is a 'Description:' label followed by a large empty text area. At the bottom right, there are three buttons: '< Back', 'Next >' (highlighted), and 'Cancel'.

4. Select "When a specific event is logged" on [Task Trigger] screen. Click [Next] button.

Figure E.10 [Create Basic Task Wizard] window (Task Trigger)

The screenshot shows the 'Create Basic Task Wizard' window with the title bar 'Create Basic Task Wizard' and a close button. The window has a sidebar on the left with a clock icon and the text 'Task Trigger'. Below this, there are four items: 'Create a Basic Task', 'Trigger' (highlighted), 'When an Event Is Logged', 'Action', and 'Finish'. The main area contains the text: 'When do you want the task to start?'. Below this text, there are seven radio button options: 'Daily', 'Weekly', 'Monthly', 'One time', 'When the computer starts', 'When I log on', and 'When a specific event is logged' (which is selected with a filled radio button). At the bottom right, there are three buttons: '< Back', 'Next >' (highlighted), and 'Cancel'.

5. [When an Event Is Logged] screen appears. Set the following parameters.
 - [Log]: System, [Source]: Time-Service, [Event ID]: 37

Figure E.11 [Create Basic Task Wizard] window (When an Event Is Logged)

The screenshot shows the 'Create Basic Task Wizard' window with the title bar 'Create Basic Task Wizard' and a close button. The main area has a header 'When a Specific Event Is Logged' with a clock icon. Below this is a section 'Create a Basic Task' with a sidebar on the left containing 'Trigger', 'When an Event Is Logged' (selected), 'Action', and 'Finish'. To the right of the sidebar, there are three fields: 'Log:' with a dropdown menu showing 'System', 'Source:' with a dropdown menu showing 'Time-Service', and 'Event ID:' with a text box containing '37'. At the bottom right, there are three buttons: '< Back', 'Next >' (highlighted with a blue border), and 'Cancel'.

6. Click [Next] button.
7. Select "Start a program" on [Action] screen. Click the [Next] button.


Figure E.12 [Create Basic Task Wizard] window (Action)

The screenshot shows the 'Create Basic Task Wizard' window with the title bar 'Create Basic Task Wizard' and a close button. The main area has a header 'Action' with a clock icon. Below this is a section 'Create a Basic Task' with a sidebar on the left containing 'Trigger', 'When an Event Is Logged', 'Action' (selected), and 'Finish'. To the right of the sidebar, there is a question 'What action do you want the task to perform?' followed by three radio button options: 'Start a program' (selected), 'Send an e-mail (deprecated)', and 'Display a message (deprecated)'. At the bottom right, there are three buttons: '< Back', 'Next >' (highlighted with a blue border), and 'Cancel'.

8. Set the following parameters on [Start a Program] screen.

- [Program/script]: %SystemRoot%\System32\w32tm.exe
- [Add arguments] (optional): /resync


Figure E.13 [Create Basic Task Wizard] window (Start a Program)

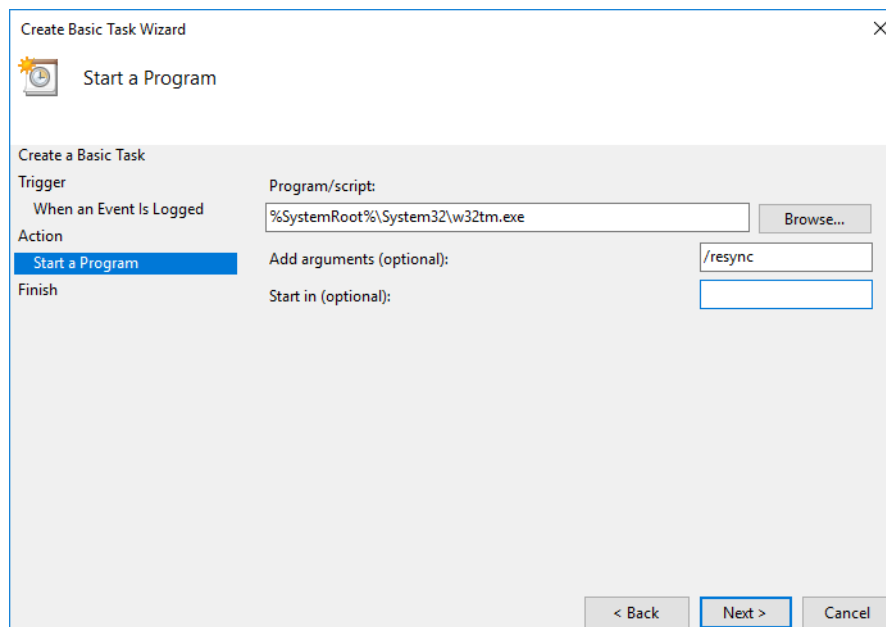

9. Click [Next] button.

10. Check the [Open the Properties dialog for this task when I click Finish] check box on the [Summary] screen.


Figure E.14 [Create Basic Task Wizard] window (Finish)

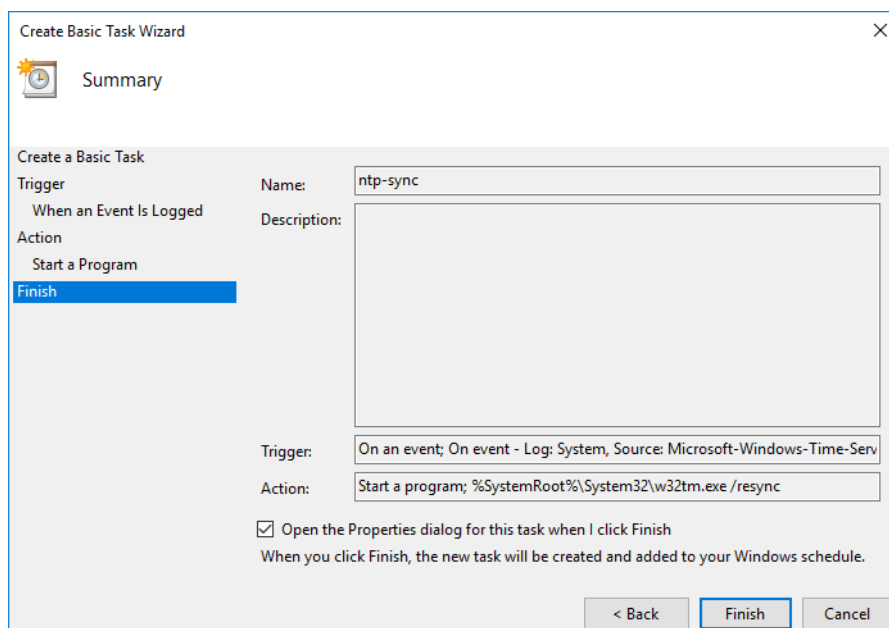

11. Click [Finish] button.


12. Click [Change User or Group] button in the [Properties] dialog box.

Figure E.15 [Properties] dialog box

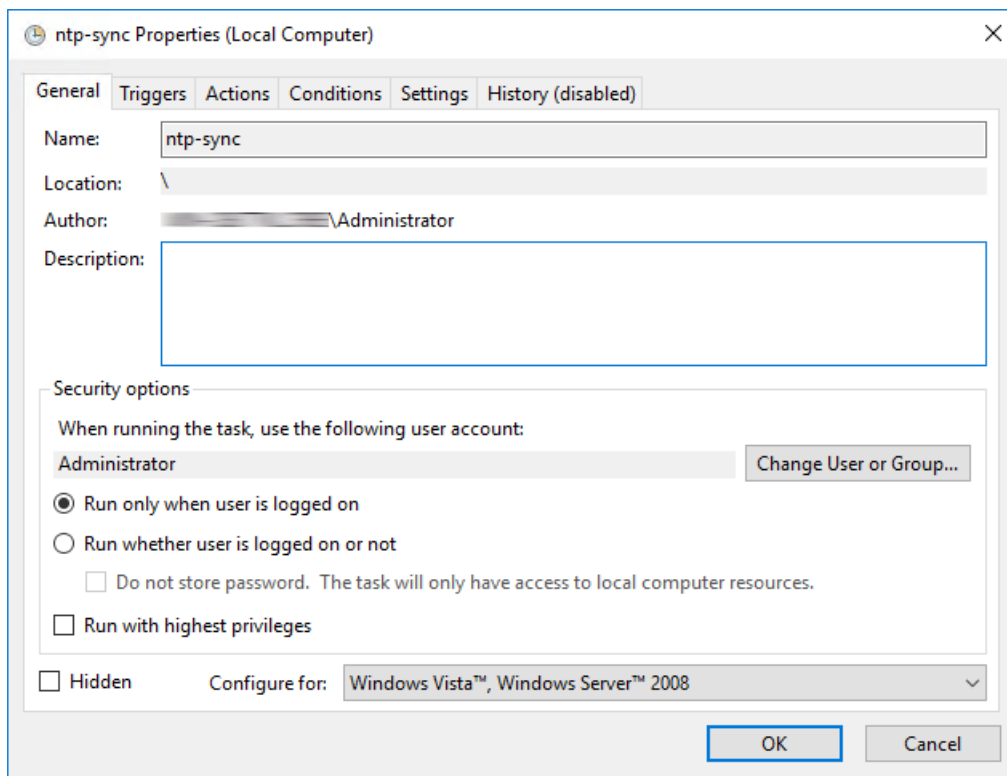

13. [Select User or Group] dialog box appears. Set the following parameter.
[Enter the object name to select]: System

Figure E.16 [Select User or Group] window

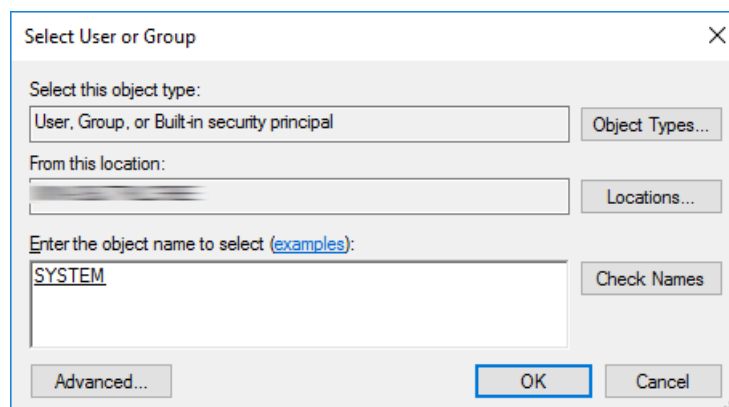

14. Click [OK] button.
15. Click [Change User or Group] button in [Properties] dialog box.

E.3 NTP Settings in Windows Server 2012 R2 and Windows Server 2012


The procedures in this chapter require Administrator privileges.

All screenshots are showing examples, and the actually displayed contents may vary depending on the system configuration and other factors.

E.3.1 Specifying an NTP Server


1. Select [Control Panel] - [Set the time and date]. [Date and Time] dialog box appears.

FIGURE E.0.17 [Date and Time] window (1)

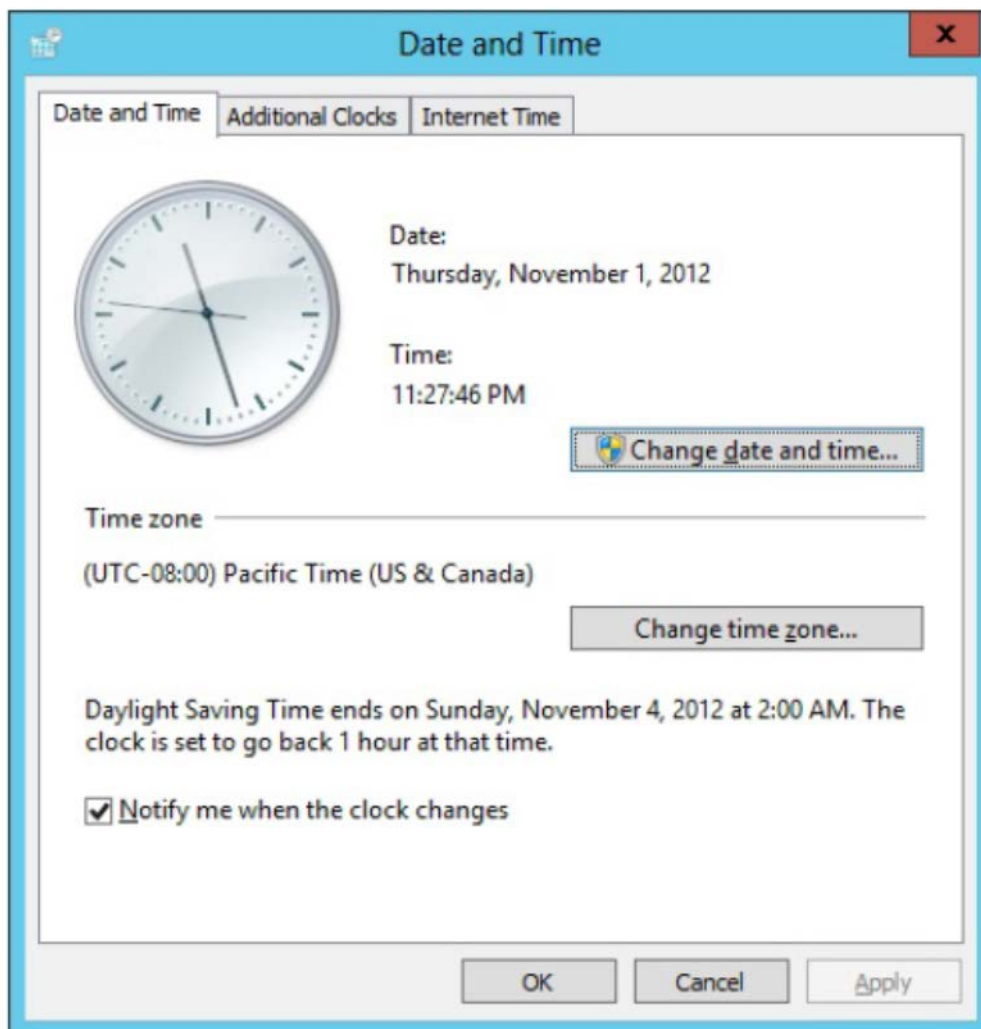


2. Click [Change settings] button on [Internet Time] tab.

FIGURE E.0.18 [Date and Time] window (2)

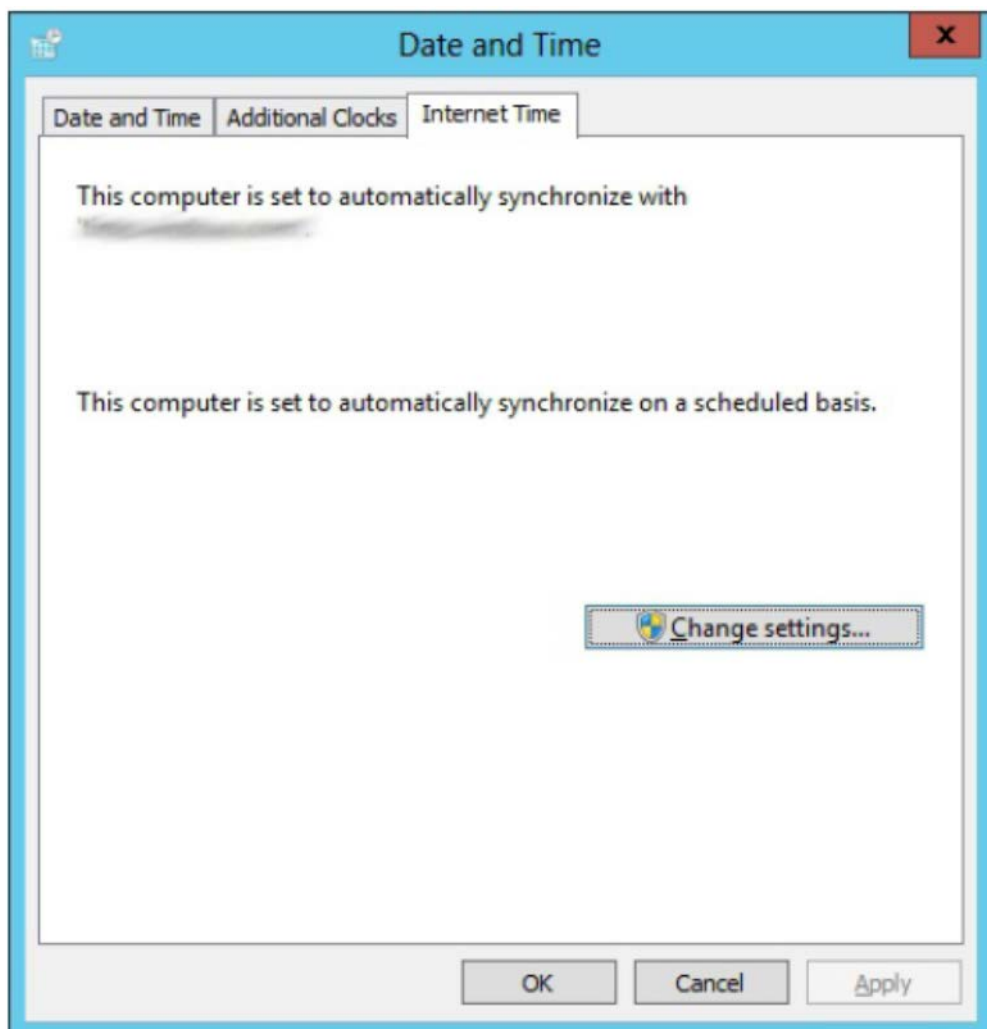

3. Set the following parameters in [Internet Time Settings] dialog box.
 - [Synchronize with an Internet time server]: Check the check box.
 - [Server]: Enter an NTP server name.

FIGURE E.0.19 [Internet Time Settings] window

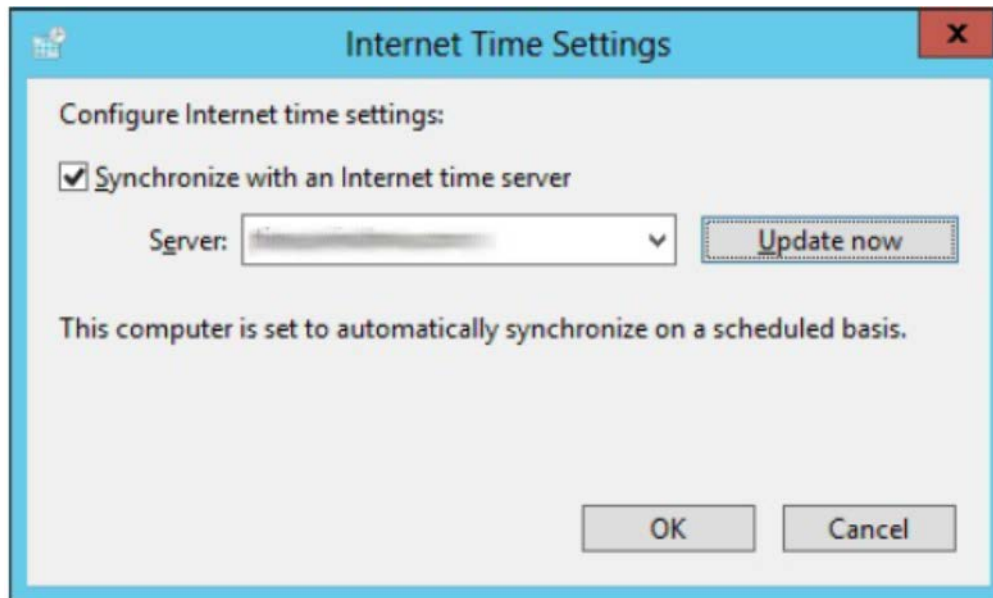


4. Click [OK] button to close [Internet Time Settings] dialog box.
5. Click [OK] button to close [Date and Time] dialog box.

E.3.2 Synchronization Interval and Startup Settings of NTP Service

1. Enter "regedit" in [Search] to start the Registry Editor.

FIGURE E.0.20 [Registry Editor] selection window

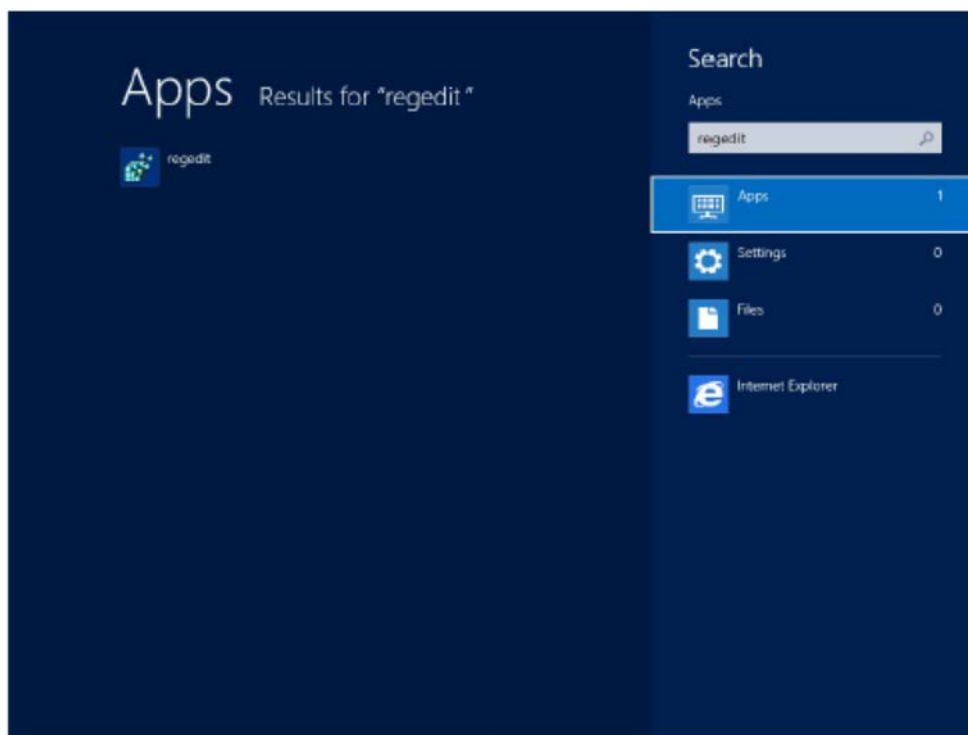


2. Open the following key, and set 900 for the SpecialPollInterval value.

HKEY_LOCAL_MACHINE\SYSTEM\CurrentControlSet\Services\W32Time\TimeProviders\NtpClient


"SpecialPollInterval" Type: REG_DWORD, Data: 900 (decimal)

FIGURE E.0.21 [Registry Editor] window

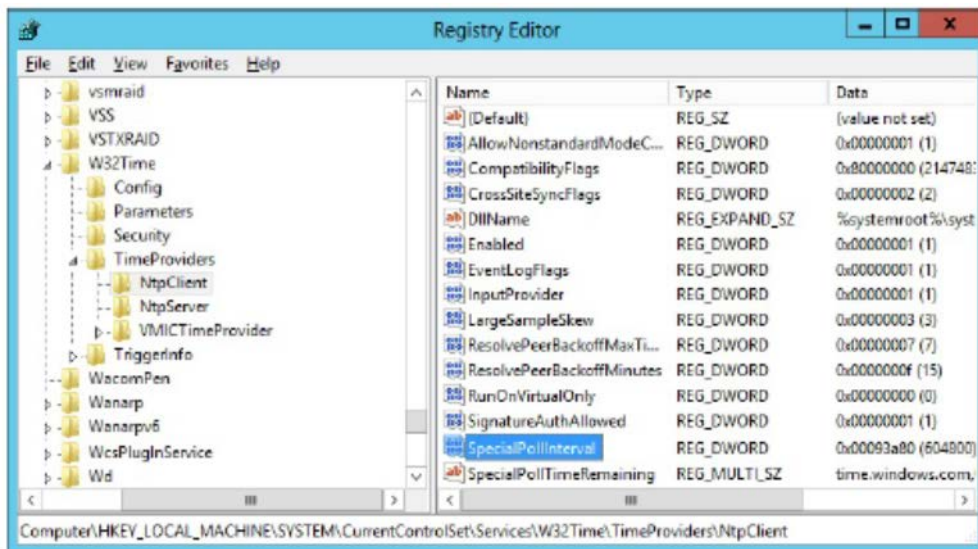


3. Close the Registry Editor.
4. Open [Start] - [Administrative Tools] - [Services].

FIGURE F.6 [Services] window

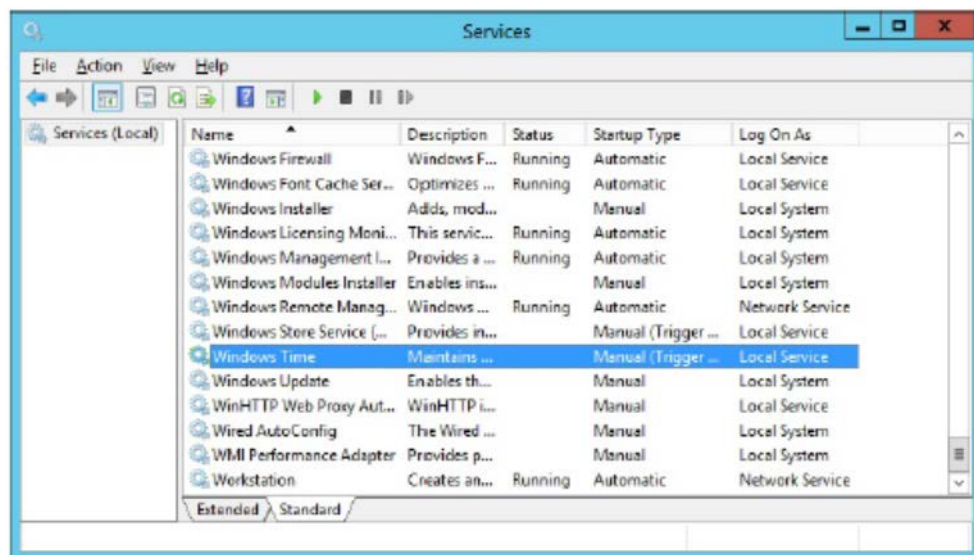

5. Right-click the Windows Time service. Select [Properties] from the context menu.
6. Set "Automatic (Delayed Start)" in [Startup type] in the [Windows Time Properties] dialog box.

FIGURE E.0.22 [Windows Time Properties] window

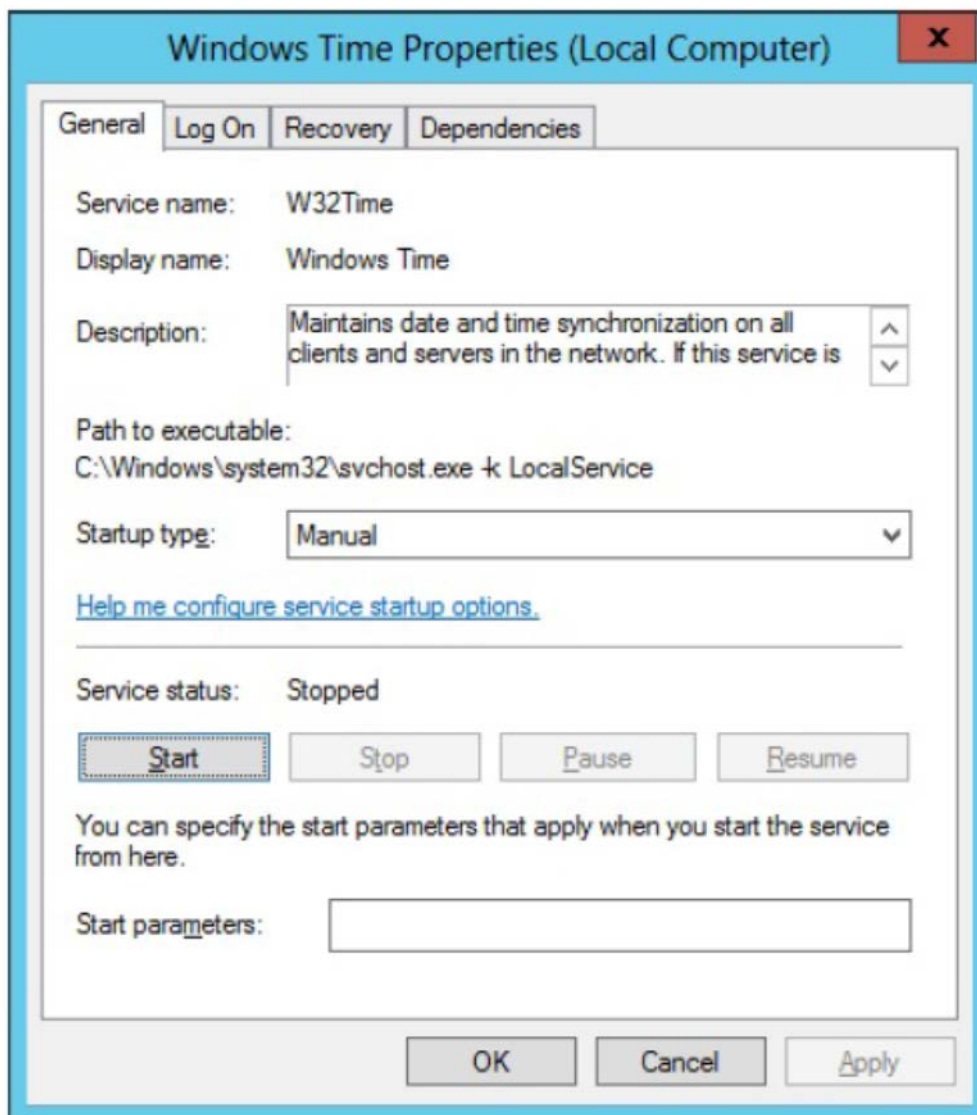


7. If the W32Time service is stopped, click the [Start] button.
8. If the W32Time service is running, click the [Stop] button to pause in the service, and then click the [Start] button.

E.3.3 Event Task Settings

1. Open [Start] - [Administrative Tools] - [Task Scheduler].


FIGURE E.0.23 [Task Scheduler] window

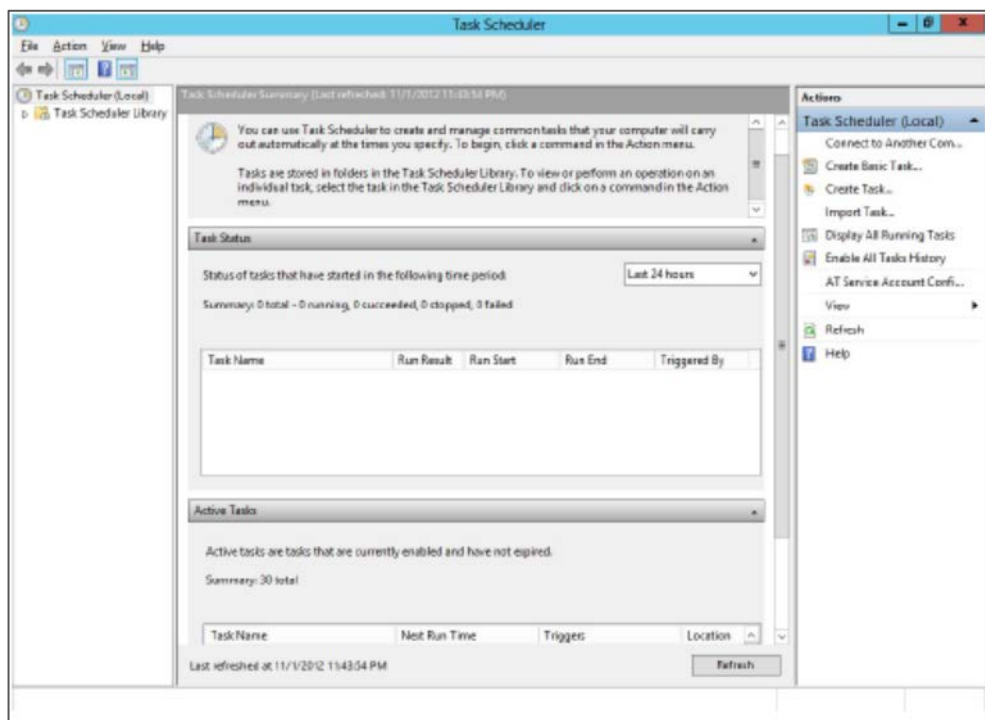

2. Select [Create Basic Task] at the right of the window. [Create Basic Task Wizard] appears.


3. Enter a chosen task name in [Name] on the [Create a Basic Task] screen, and click the [Next] button.
Example: On the screen below, "ntp-sync" is an arbitrary task name.

FIGURE E.0.24 [Create Basic Task Wizard] window (Create a Basic Task)

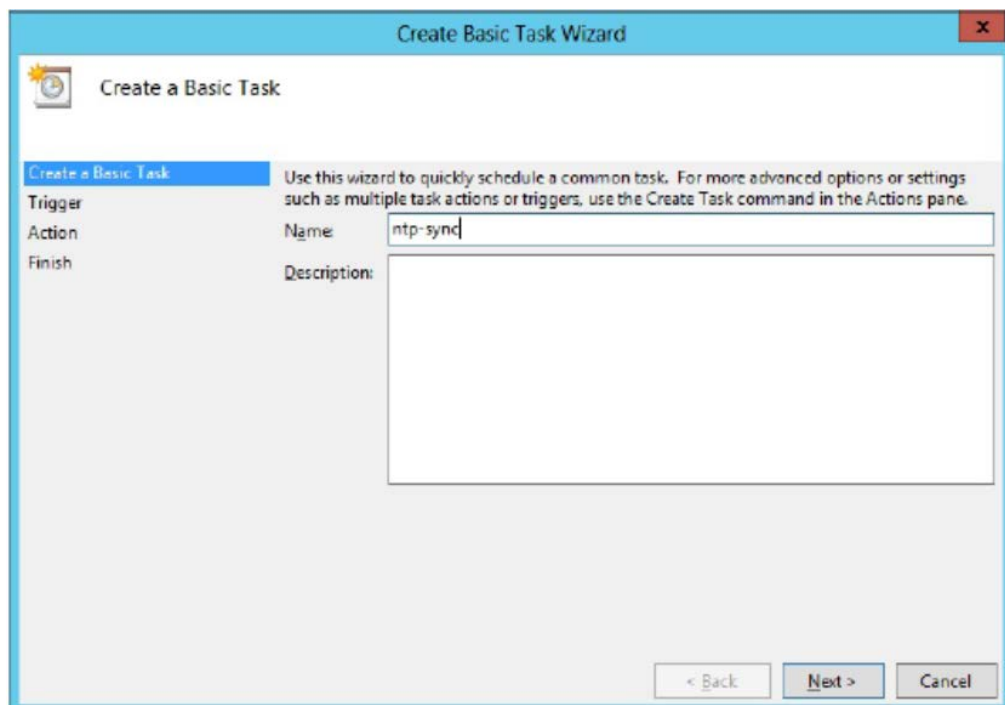


4. Select "When a specific event is logged" on the [Task Trigger] screen. Click the [Next] button.

FIGURE E.0.25 [Create Basic Task Wizard] window (Task Trigger)

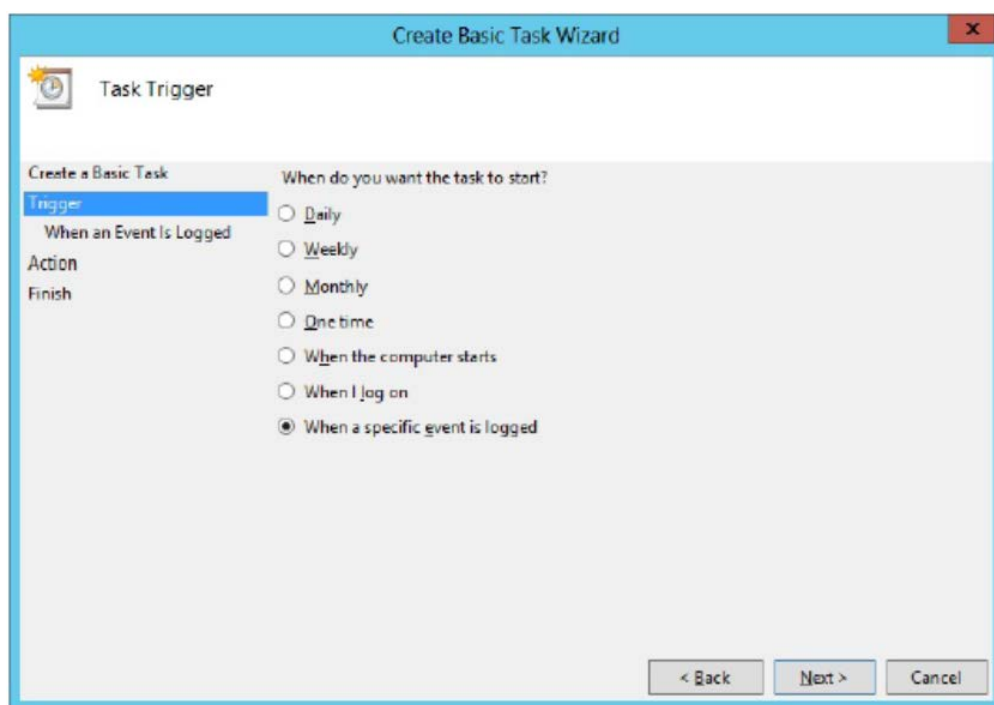

5. [When a Specific Event Is Logged] screen appears. Set the following parameters.
 - Log]: System
 - [Source]: Time-Service
 - [Event ID]: 37


FIGURE E.0.26 [Create Basic Task Wizard] window (When a Specific Event Is Logged)

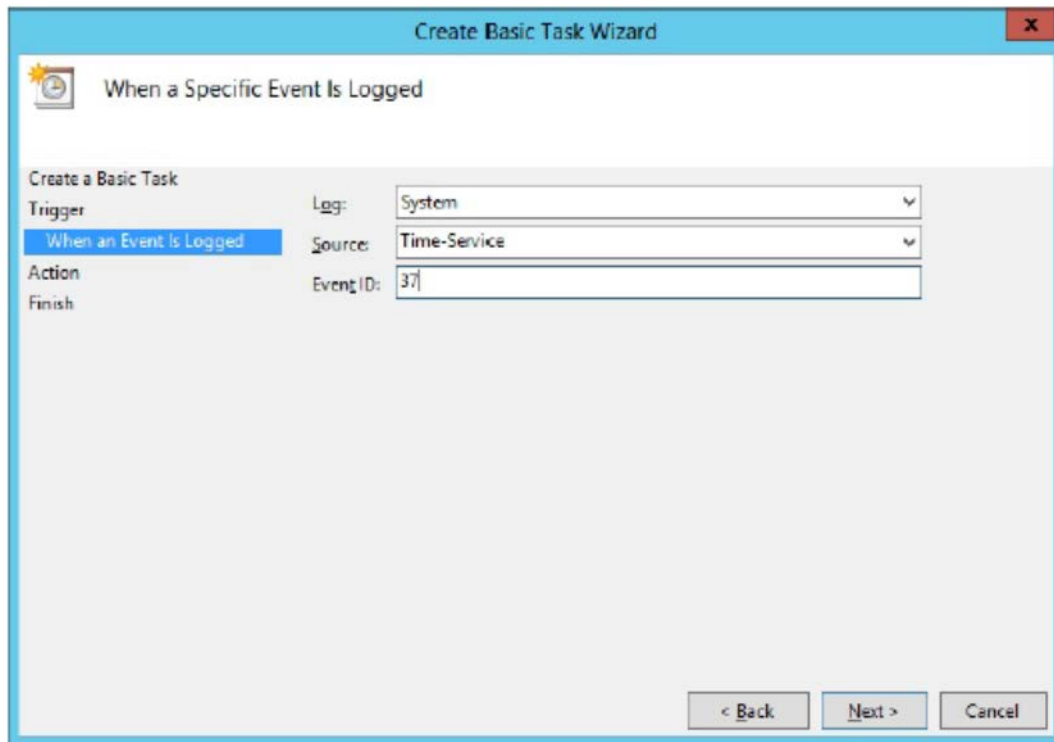

Click the [Next] button.

6. Select "Start a program" on the [Action] screen. Click the [Next] button.


FIGURE E.0.27 [Create Basic Task Wizard] window (Action)

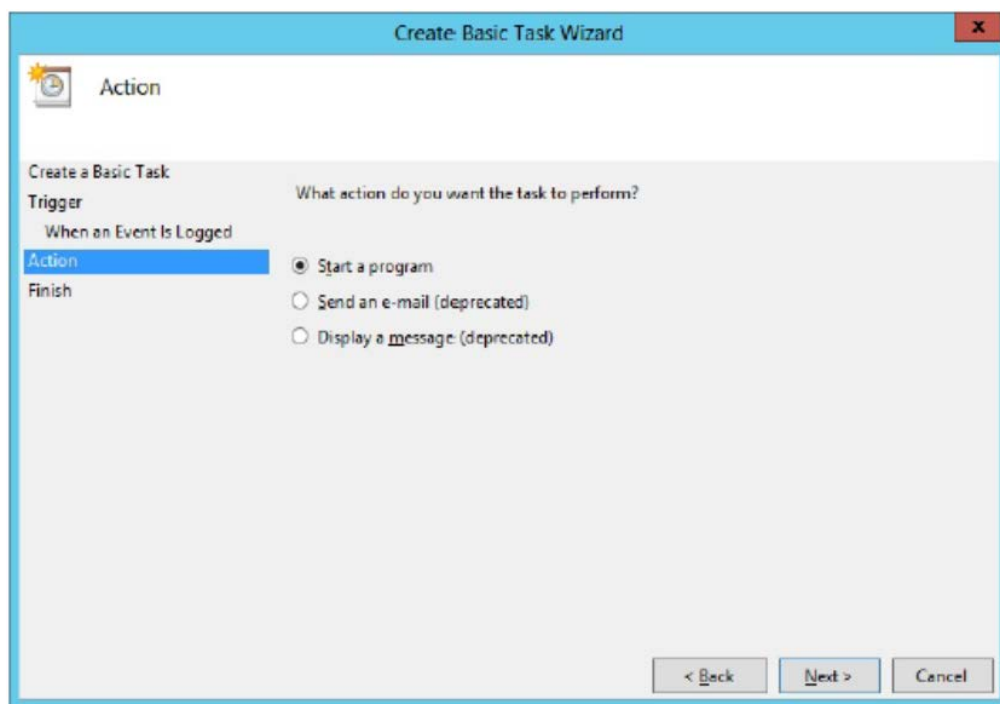

7. Set the following parameters on the [Start a Program] screen.


- [Program/script]: %SystemRoot%\w32tm.exe
- [Add arguments] (optional): /resync

FIGURE E.0.28 [Create Basic Task Wizard] window (Start a Program)

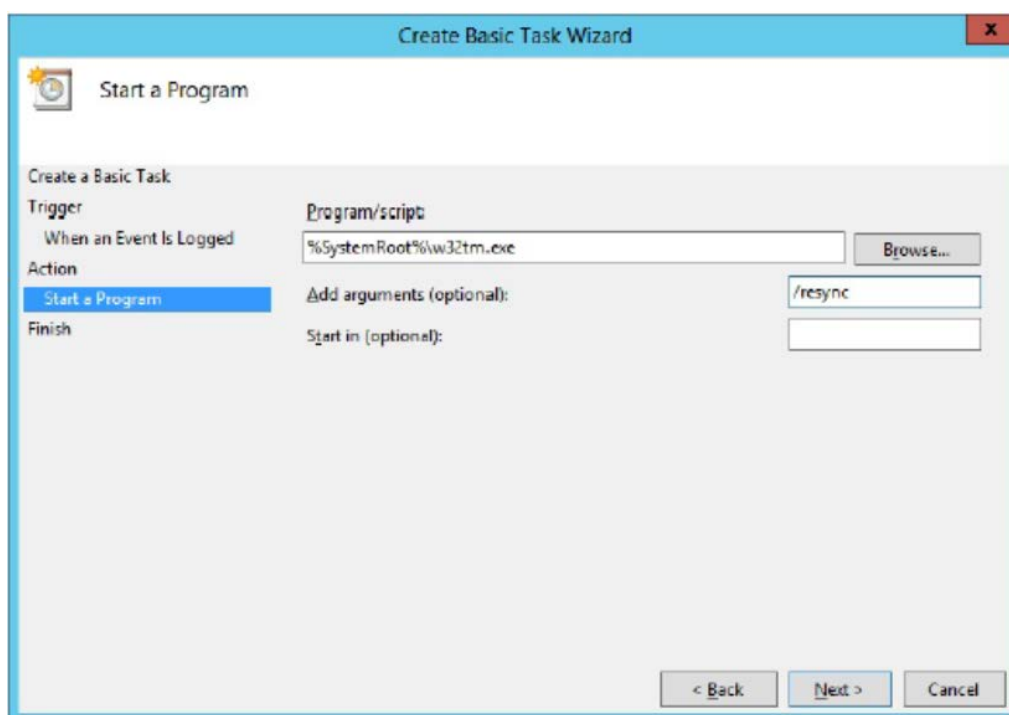

8. Click the [Next] button.
Check the [Open the Properties dialog for this task when I click Finish] check box on the [Summary] screen.


FIGURE E.0.29 [Create Basic Task Wizard] window (Summary)

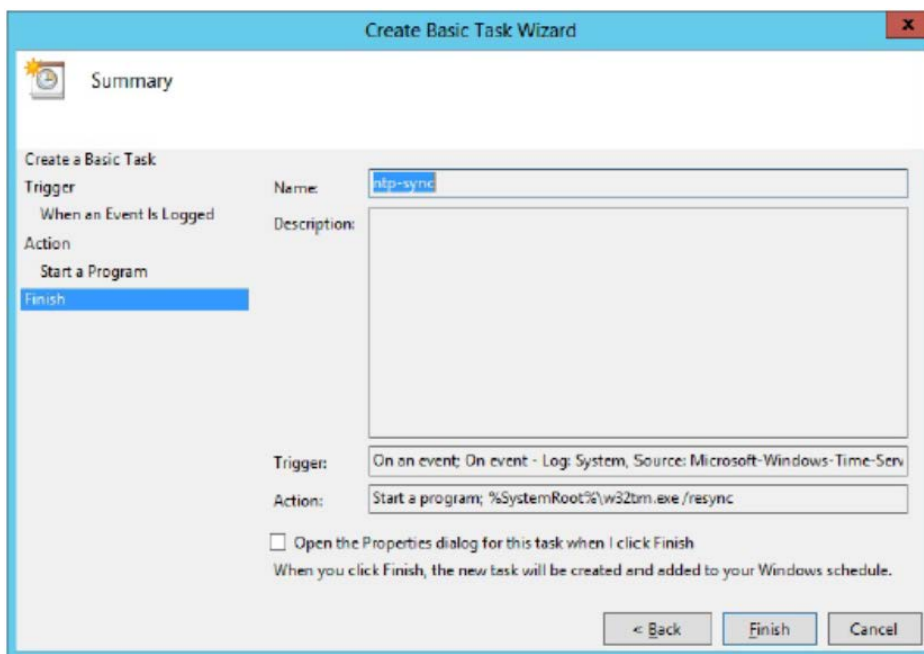

Click the [Finish] button.


9. Click the [Change User or Group] button in the [Properties] dialog box.

FIGURE E.0.30 [Properties] dialog box

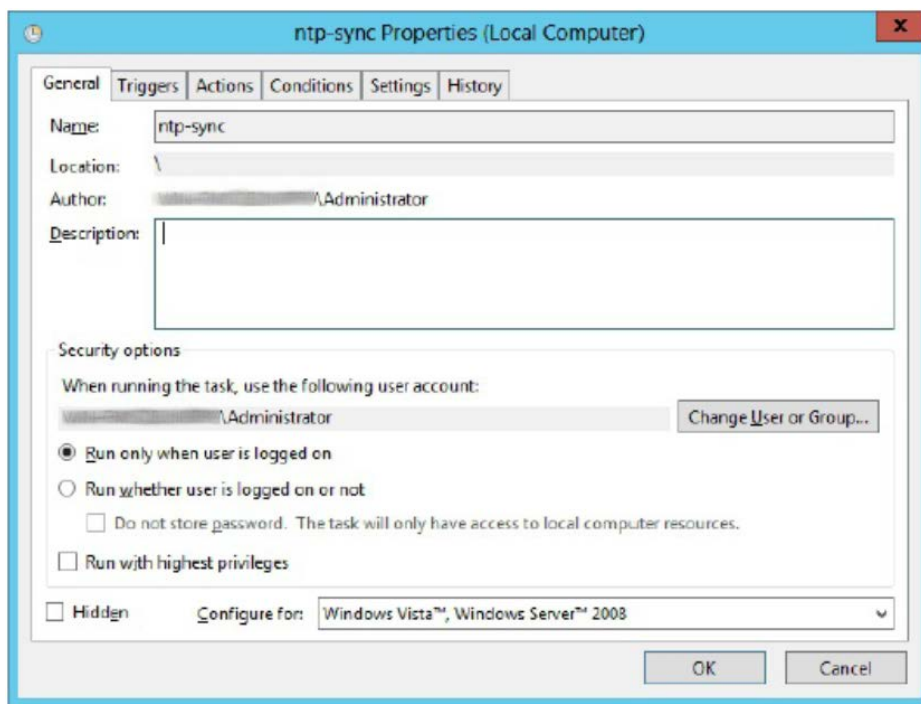

10. [Select User or Group] dialog box appears.
Set the following parameter.
 - [Enter the object name to select]: System

FIGURE E.0.31 [Select User or Group] window

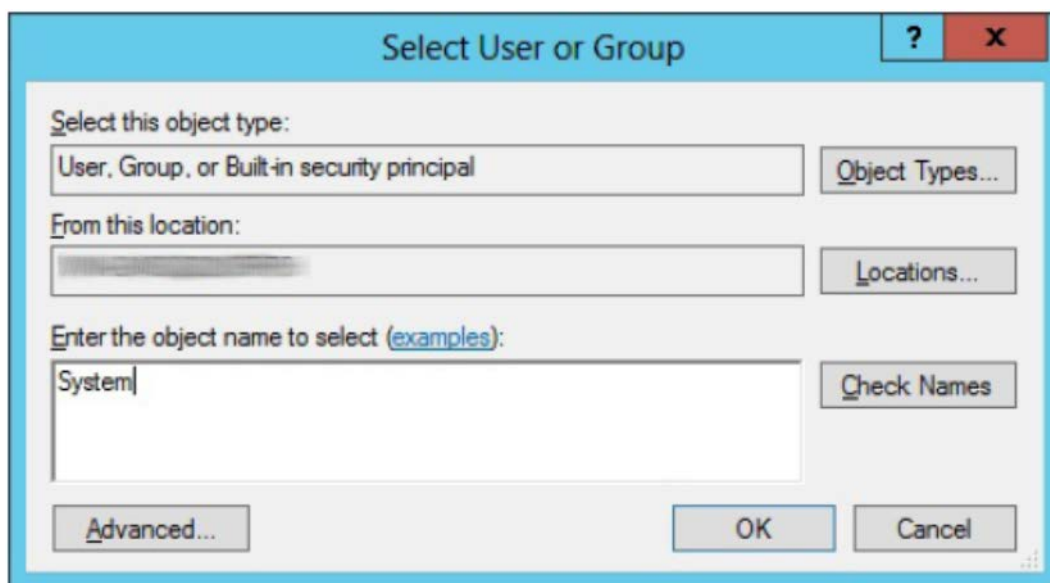

Click [OK] button.

11. Click the [Change User or Group] button in the [Properties] dialog box.

E.4 NTP Settings in Windows Server 2008 R2


The procedures in this chapter require Administrator privileges.

All screenshots are display examples, and the actually displayed contents vary depending on the system configuration and other factors.

E.4.1 Specifying an NTP Server


1. Select [Control Panel] - [Set the time and date]. The [Date and Time] dialog box appears.

FIGURE E.0.32 [Date and Time] window (1)

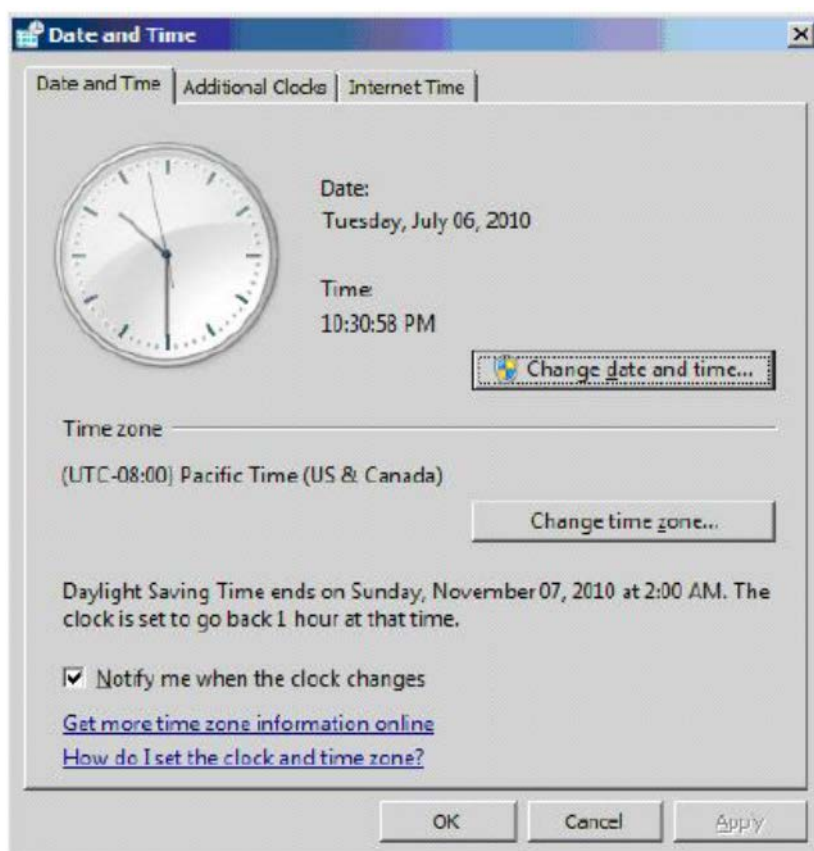


2. Click the [Change settings] button on the [Internet Time] tab

FIGURE E.0.33 [Date and Time] window (2)

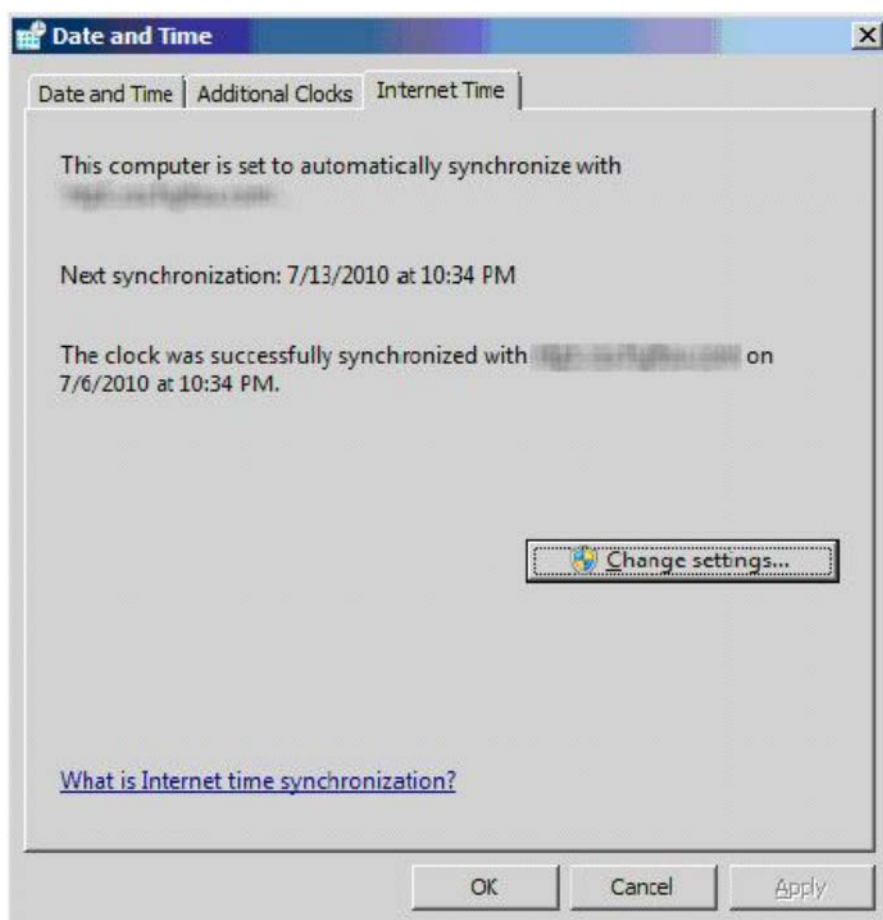

3. Set the following parameters in the [Internet Time Settings] dialog box.
 - [Synchronize with an Internet time server]: Check the check box.
 - [Server]: Enter an NTP server name.

FIGURE E.0.34 [Internet Time Settings] window

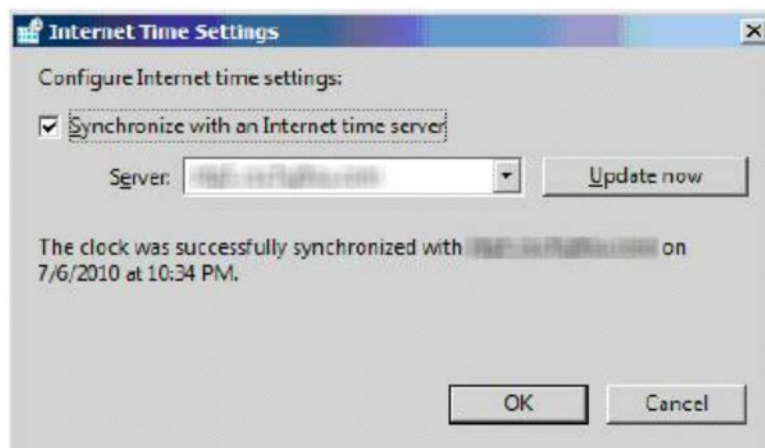


4. Click the [OK] button to close the [Internet Time Settings] dialog box.
5. Click the [OK] button to close the [Date and Time] dialog box.

E.4.2 Synchronization Interval and Startup Settings of NTP Service

1. Select [Start] - [Run]. Enter "regedit.exe" in the dialog box, and click the [OK] button.
The Registry Editor appears.

FIGURE E.0.35 [Run] window

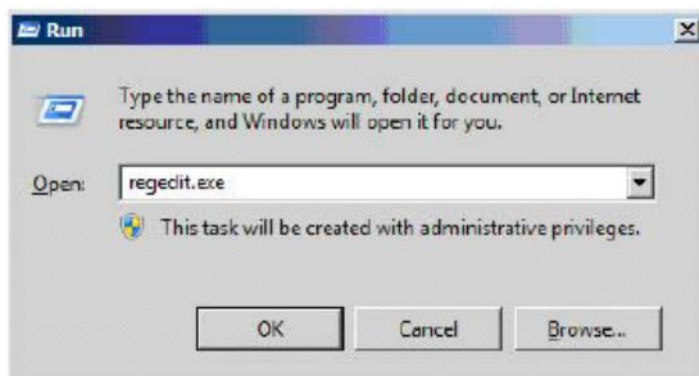


2. Open the following key, and set 900 for the SpecialPollInterval value.

HKEY_LOCAL_MACHINE\SYSTEM\CurrentControlSet\Services\W32Time
 \TimeProviders\NtpClient

"SpetcialPollInterval" Type: REG_DWORD, Data: 900 (decimal)


FIGURE E.0.36 [Registry Editor] window

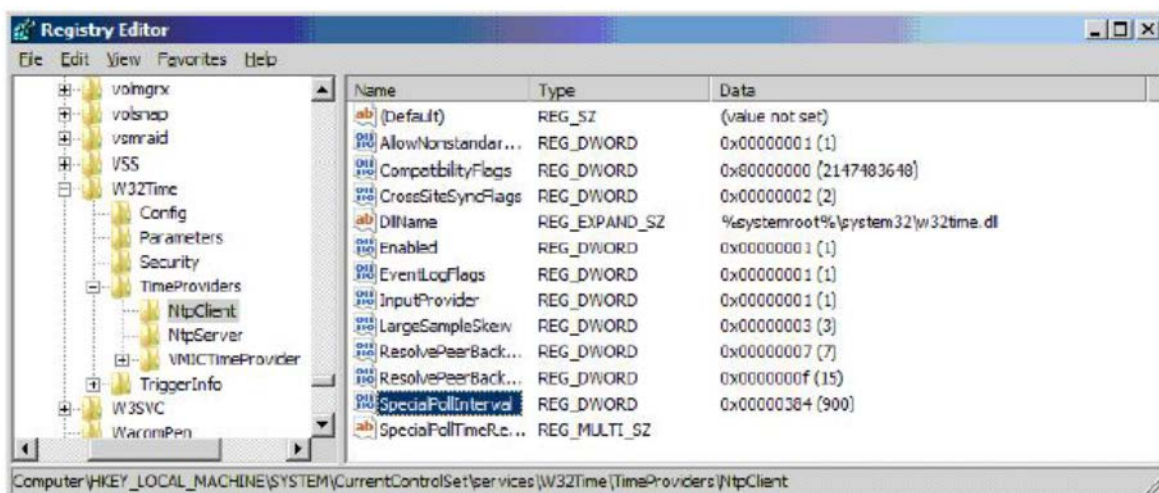

3. Close the Registry Editor.

4. Open [Start] - [Administrative Tools] - [Services].


FIGURE E.0.37 [Services] window

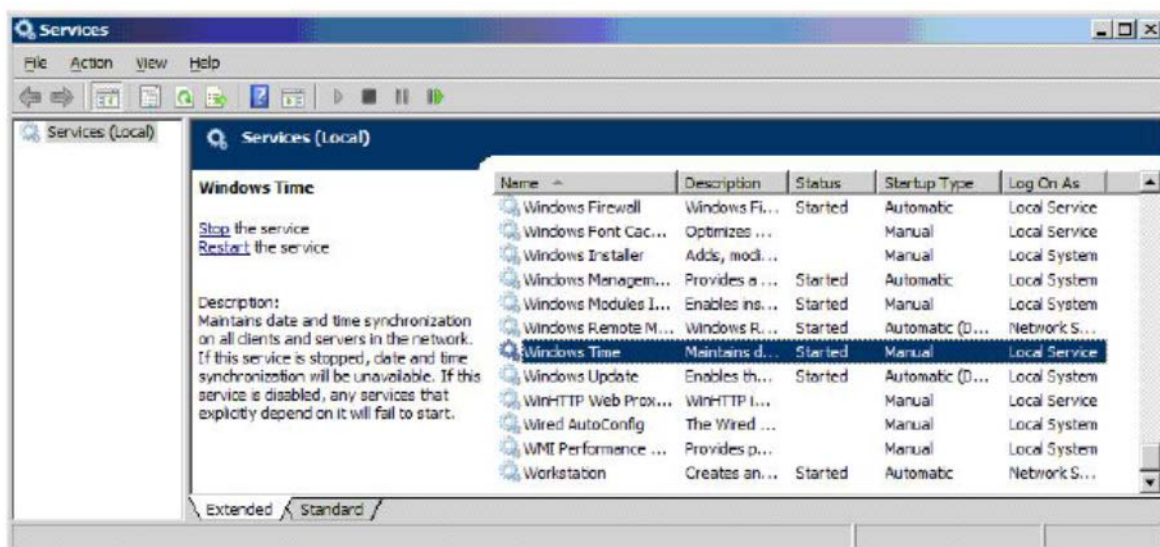

5. Right-click the Windows Time service. Select [Properties] from the context menu.

6. Set "Automatic (Delayed Start)" in [Startup Type] in the [Windows Time Properties] dialog box.

FIGURE E.0.38 [Windows Time Properties] window

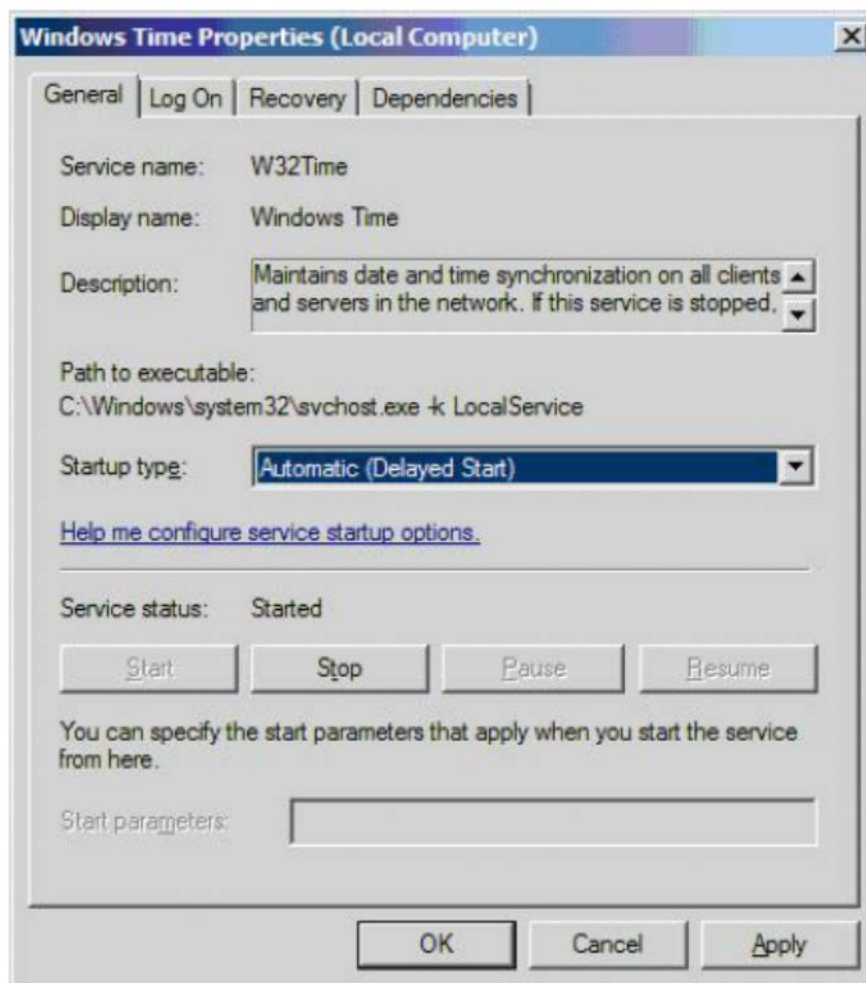


7. If the W32Time service is stopped, click the [Start] button.
If the W32Time service is running, click the [Stop] button to pause in the service, and then click the [Start] button.
8. Click the [OK] button to close the [Windows Time Properties] dialog box.

E.4.3 Event Task Settings

1. Open [Start] - [Administrative Tools] - [Task Scheduler].


FIGURE E.0.39 [Task Scheduler] window

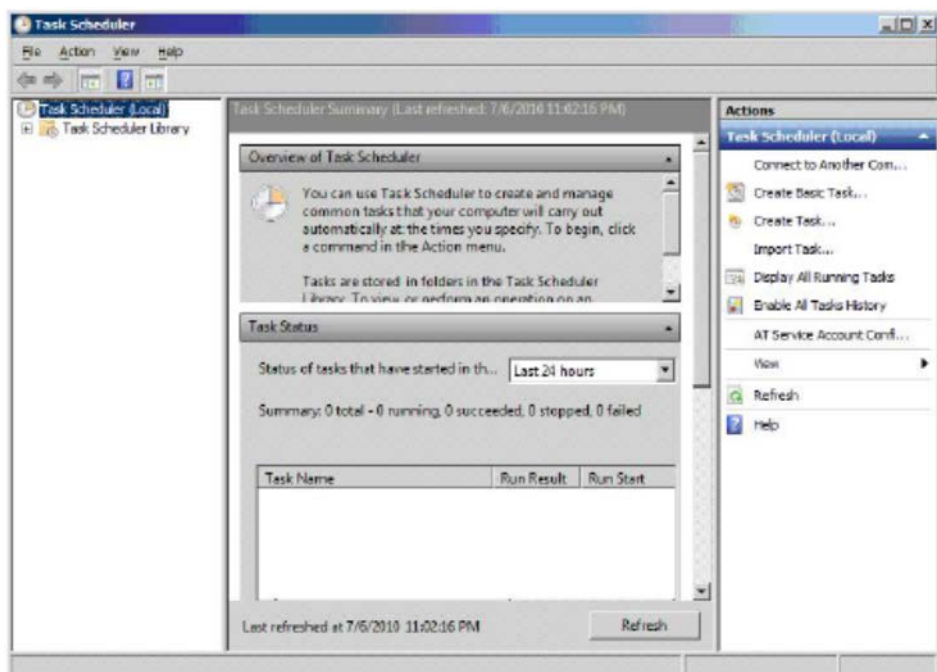

2. Select [Create Basic Task] at the right of the window. [Create Basic Task Wizard] appears.


3. Enter a chosen task name in [Name] on the [Create a Basic Task] screen, and click the [Next] button.
Example: On the screen below, "ntp-sync" is an arbitrary task name.

FIGURE E.0.40 [Create Basic Task Wizard] window (Create a Basic Task)

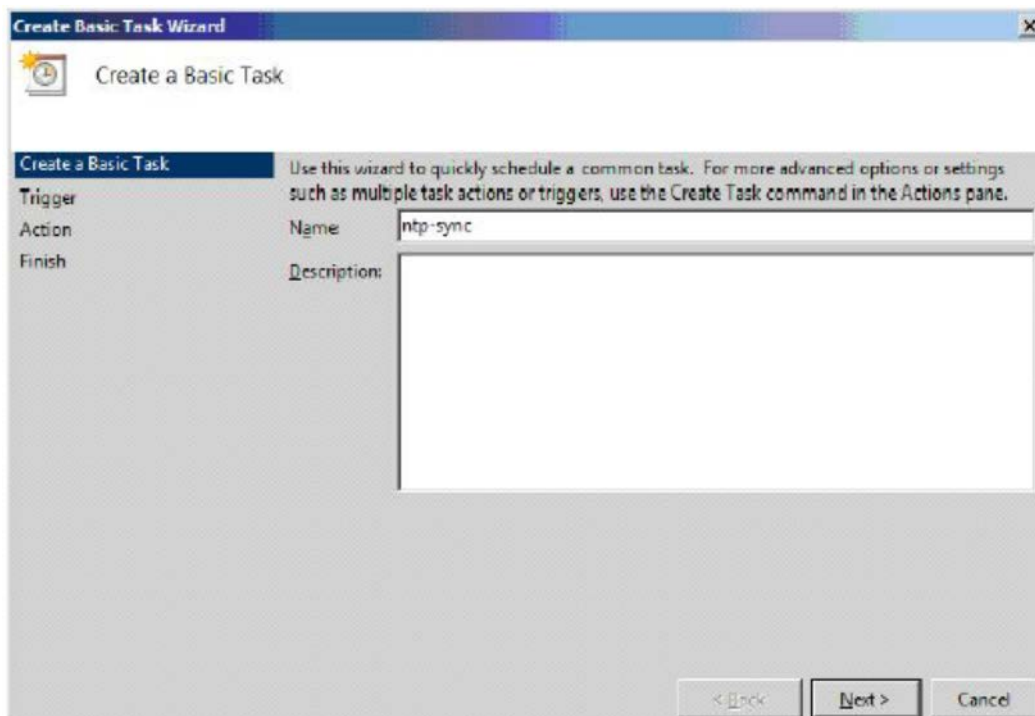

4. Select "When a specific event is logged" on the [Task Trigger] screen. Click the [Next] button


FIGURE E.0.41 [Create Basic Task Wizard] window (Task Trigger)

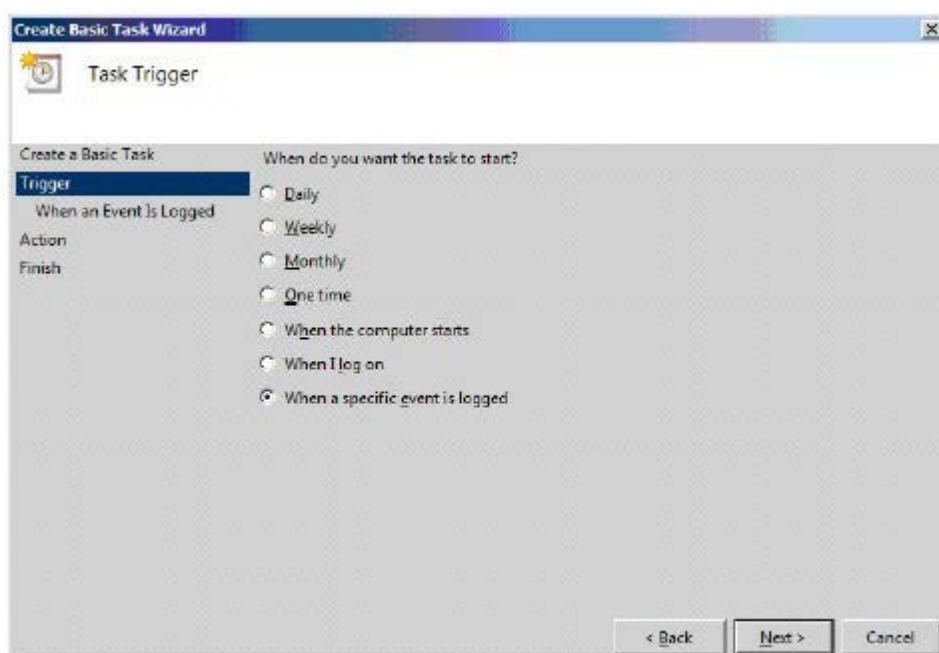

5. [When a Specific Event Is Logged] screen appears. Set the following parameters.

- [Log]: System
- [Source]: Time-Service
- [Event ID]: 37


FIGURE E.0.42 [Create Basic Task Wizard] window (When a Specific Event Is Logged)

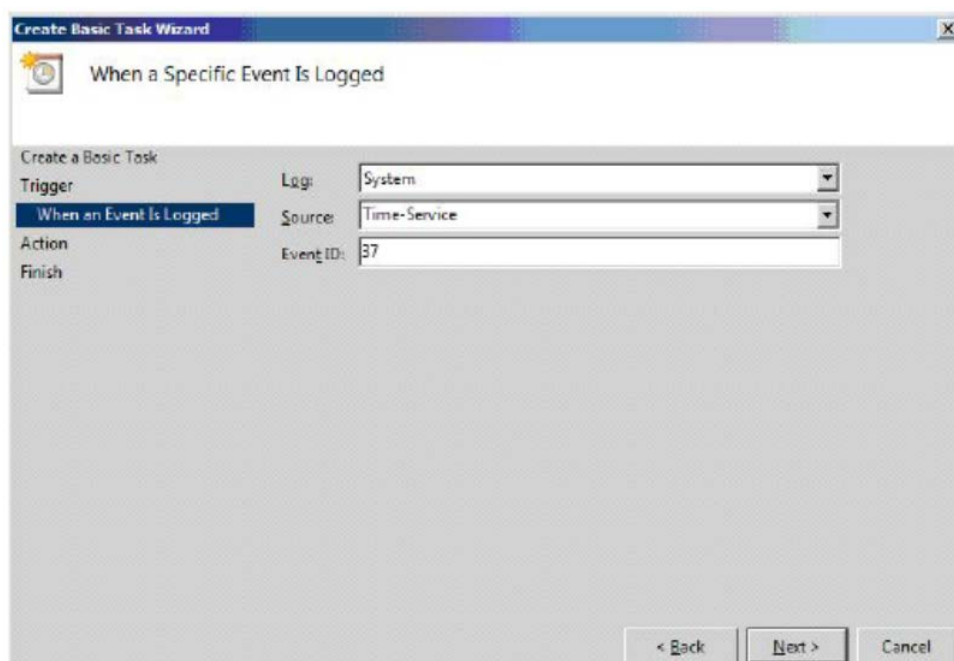

Click the [Next] button.


6. Select "Start a program" on the [Action] screen. Click the [Next] button.

FIGURE E.0.43 [Create Basic Task Wizard] window (Action)

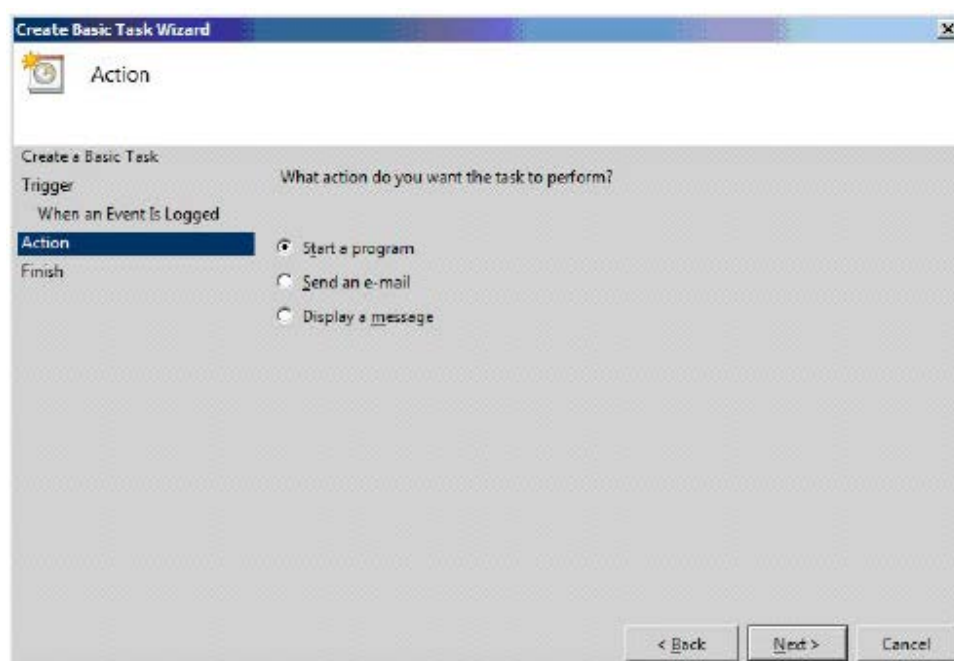

7. Set the following parameters on the [Start a Program] screen.
 - [Program/script]: %SystemRoot%\System32\w32tm.exe
 - [Add arguments] (optional): /resync


FIGURE E.0.44 [Create Basic Task Wizard] window (Start a Program)

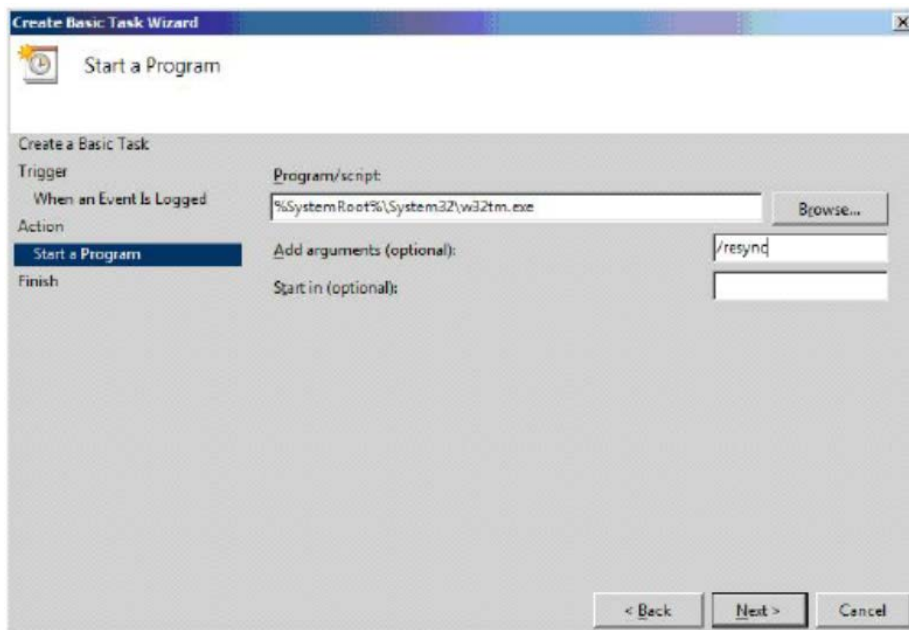

Click the [Next] button.

8. Check the [Open the Properties dialog for this task when I click Finish] check box on the [Summary] screen.


FIGURE E.0.45 [Create Basic Task Wizard] window (Summary)

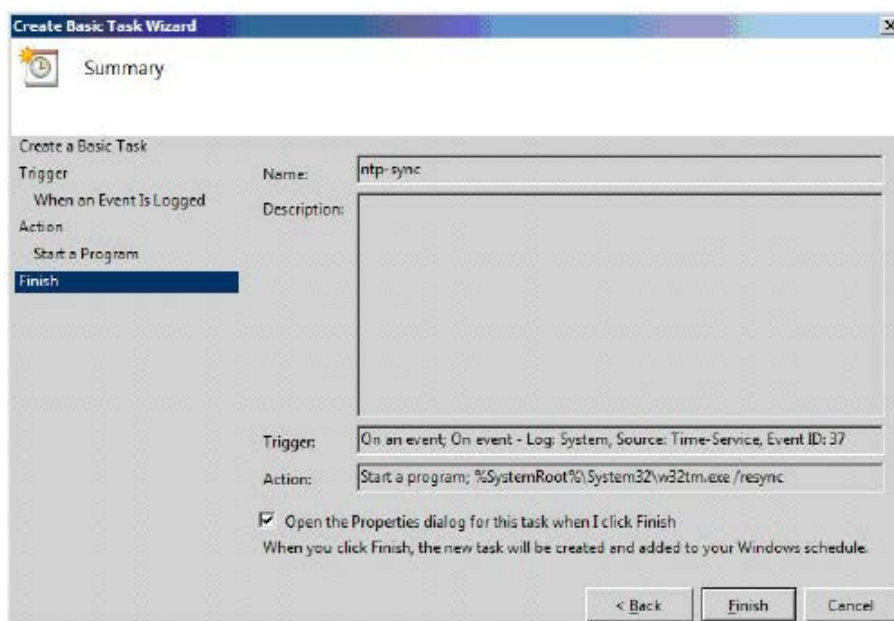

Click the [Finish] button.


9. Click the [Change User or Group] button in the [Properties] dialog box.

FIGURE E.0.46 [Properties] dialog box

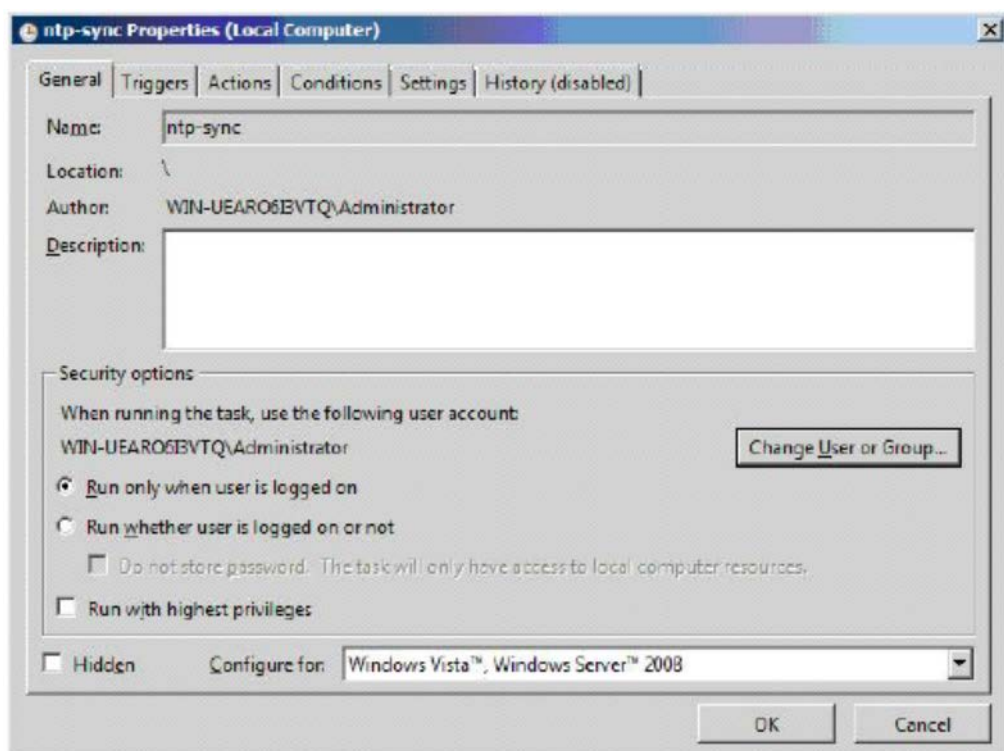

10. [Select User or Group] dialog box appears.
Set the following parameter.
- [Enter the object name to select]: System

FIGURE E.0.47 [Select User or Group] window

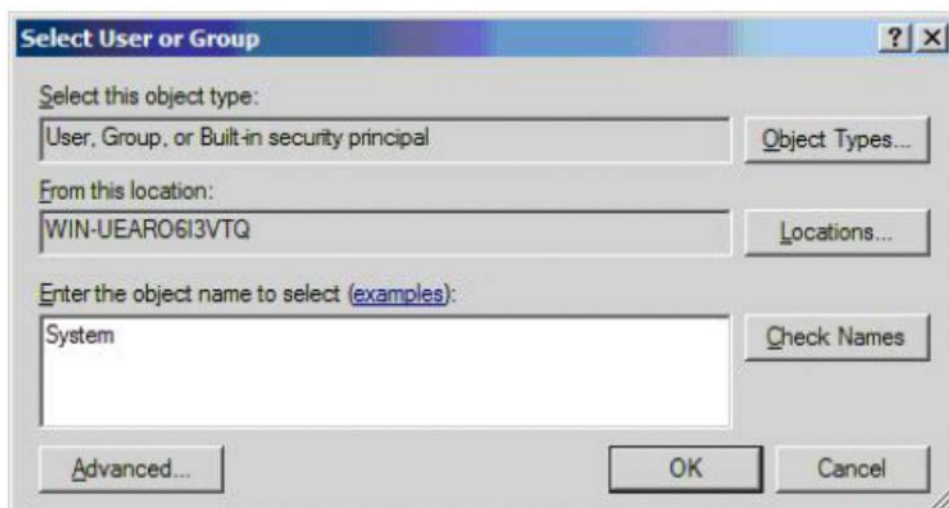

Click the [OK] button.

Appendix F Starting HII Configuration Utility

This appendix describes how to start HII Configuration Utility.

F.1 Starting HII Configuration Utility

The procedures in this chapter require Administrator privileges.

1. Select [Device Manager] and press [Enter] key in [Boot Manager] window.

FIGURE F.0.1 [Boot Manager] window



2. Select RAID Controller and Press [Enter] key in [Device Manager] window.

Then HII Configuration Utility

Remark

If there are multiple identical SAS RAID Controllers in the partition, they are displayed some identical items in [Device Manager] window. Identify target SAS RAID Controller by checking position where each SAS RAID Controller in [Device Manager] window is mounted. For method of identifying position where SAS RAID Controller is mounted, see [F.2 Method of identifying position where SAS RAID Controller](#).

FIGURE F.0.2 [Device Manager] window




F.2 Method of identifying position where SAS RAID Controller is mounted

This section describes how to identify position where SAS RAID Controller displayed in [Device Manager] window is mounted.


1. Select [Device Manager] and press [Enter] key in [Boot Manager] window.

FIGURE F.0.3 [Boot Manager] window

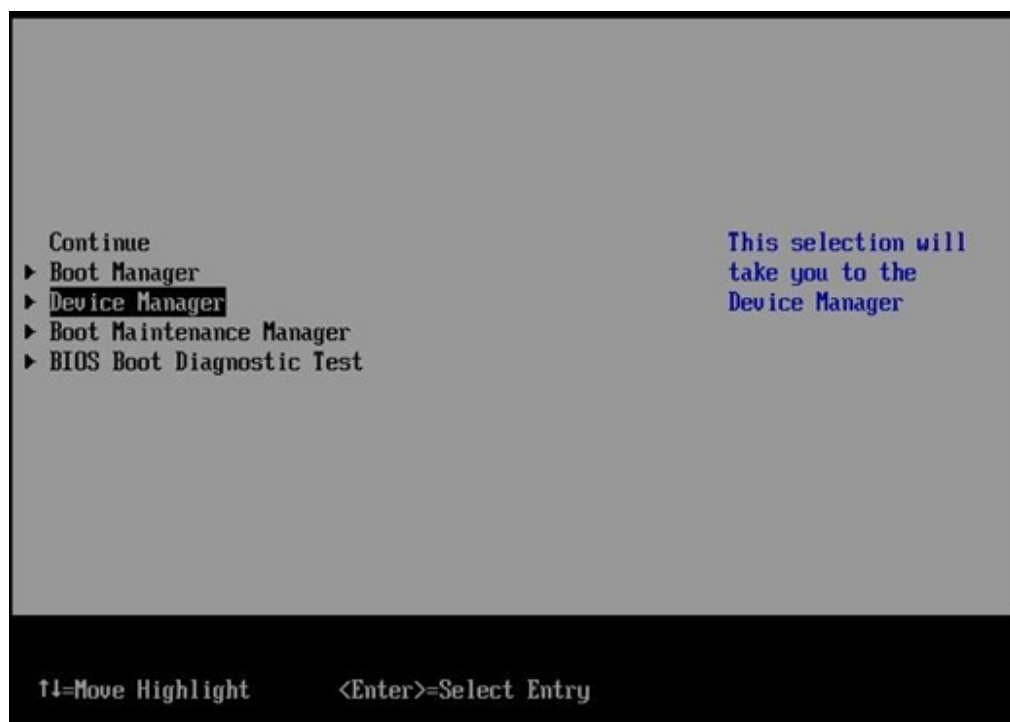


2. Select SAS RAID Controller in [Device Manager].
HII Configuration Utility [Main Menu] window is displayed.

FIGURE F.0.4 [Device Manager] window

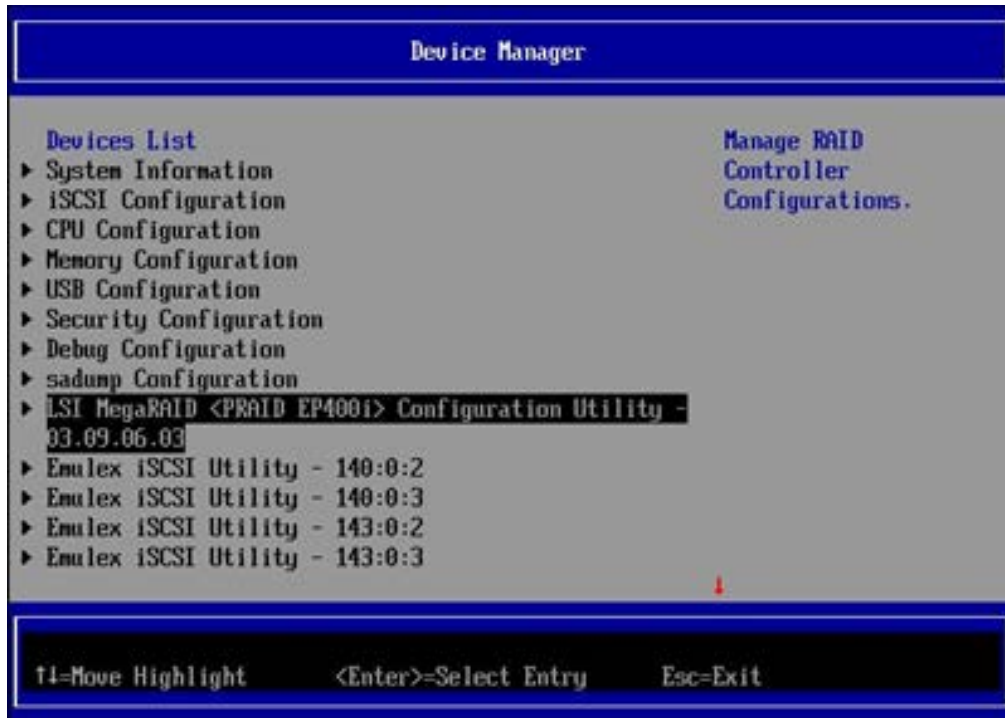

3. Select [Controller Management] in HII Configuration Utility [Main Menu] window.

FIGURE F.0.5 HII Configuration Utility [Main Menu] window

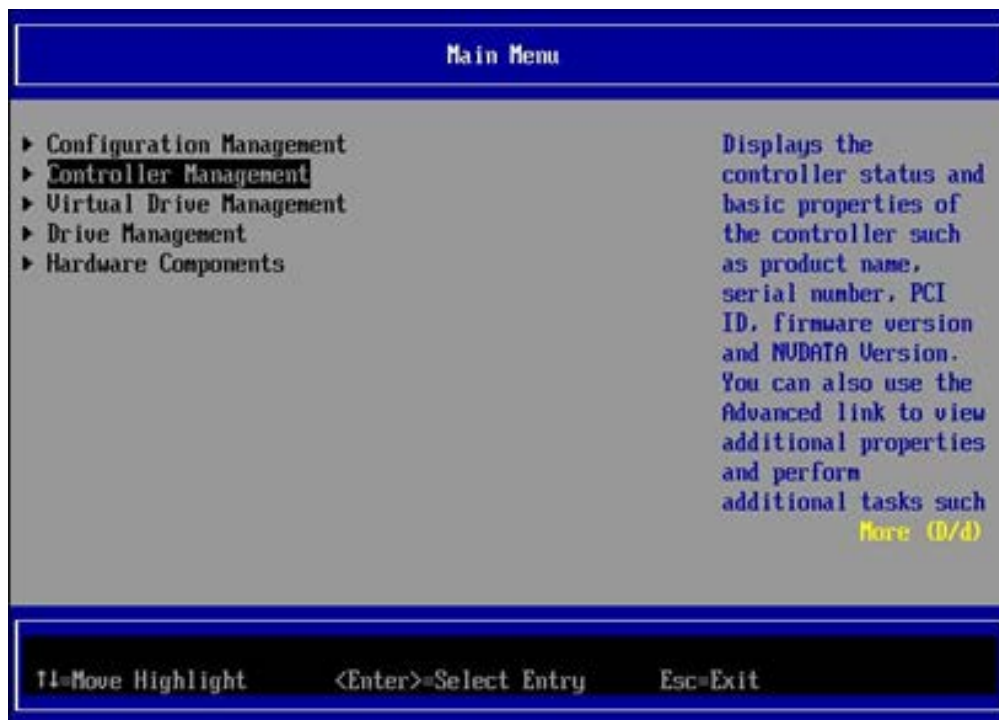


4. Check the Slot Numbers in HII Configuration Utility [Controller management] window.
Slot Numbers is displayed at the row of PCI Slot Numbers in HII Configuration Utility [Controller management] window.
In example of [FIGURE F.0.6 HII Configuration Utility \[Controller Management\]](#) , Slot Numbers is 49.

- In Case that Slot Numbers is not zero.
The position where SAS RAID Controller is mounted can identify using by Slot Numbers. For the correspondence between PCI slot mounting locations and Slot Numbers, see Appendix D.2 correspondence between PCI slot mounting locations and Slot Numbers in PRIMEQUEST 2000 series Administration Manual (CA92344-053).
- In Case that Slot Numbers is zero.
This shows that SAS RAID Controller is mounted on SB. If there is only one SB in the partition, the SAS RAID Controller is mounted on the SB. There is additional procedure if there are two SBs or more in the partition. For the additional procedure, see [F.3 Method of identifying SB where SAS RAID Controller is mounted](#).

In example of [FIGURE F.0.6 HII Configuration Utility \[Controller Management\]](#) , Slot Numbers of the SAS RAID Controller is 49 and the SAS RAID Controller is mounted to PCI Express Slot#1 on DU#1.

FIGURE F.0.6 HII Configuration Utility [Controller Management] window

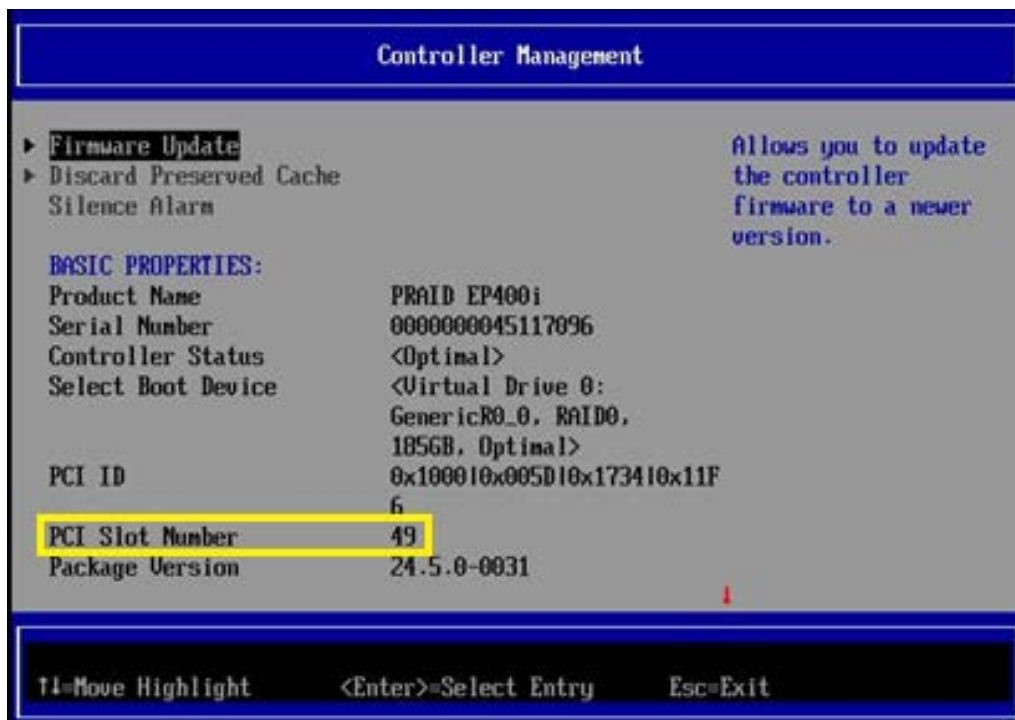


F.3 Method of identifying SB where SAS RAID Controller is mounted

This section describes how to identify SB where SAS RAID Controller displayed in [Device Manager] window is mounted.

The SB where SAS RAID Controller is mounted can be identified by procedure below.


- Turn on Alarm LED of HDD/SSD connected to the SAS RAID Controller.
 - Search the SB with HDD/SSD blinked Alarm LED in chassis.
 - It is the SB that the SAS RAID Controller is mounted.
1. Select [Device Manager] and press [Enter] key in [Boot Manager] window.

FIGURE F.0.7 [Boot Manager] window

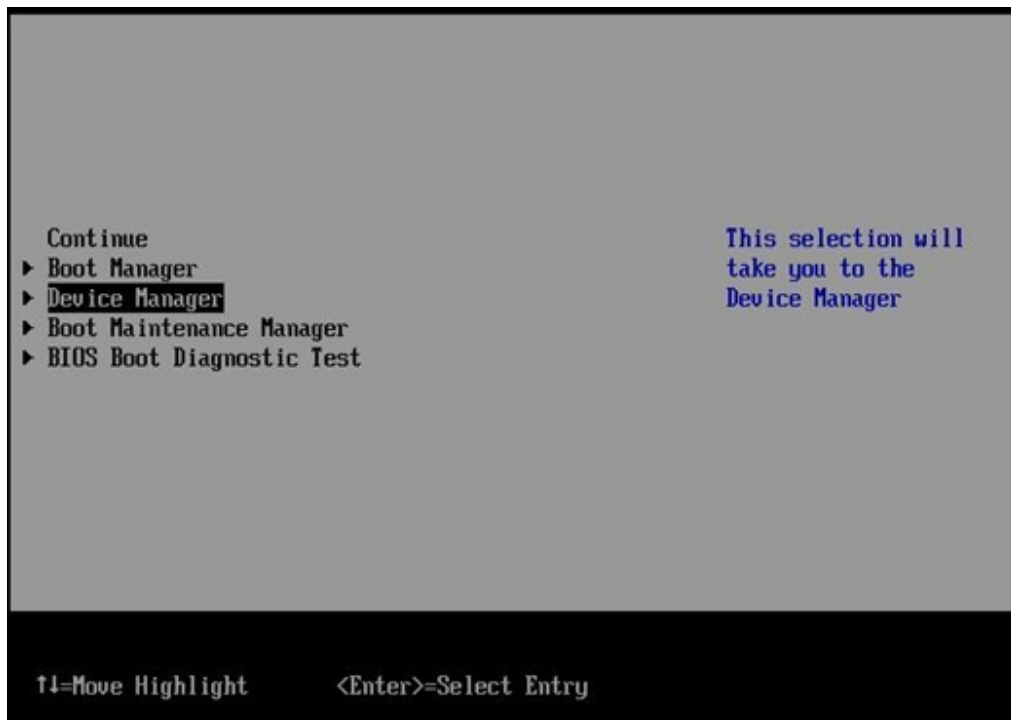


2. Select SAS RAID Controller in [Device Manager] window.
HII Configuration Utility [Mein Menu] window is displayed.

FIGURE F.0.8 [Device Manager] window

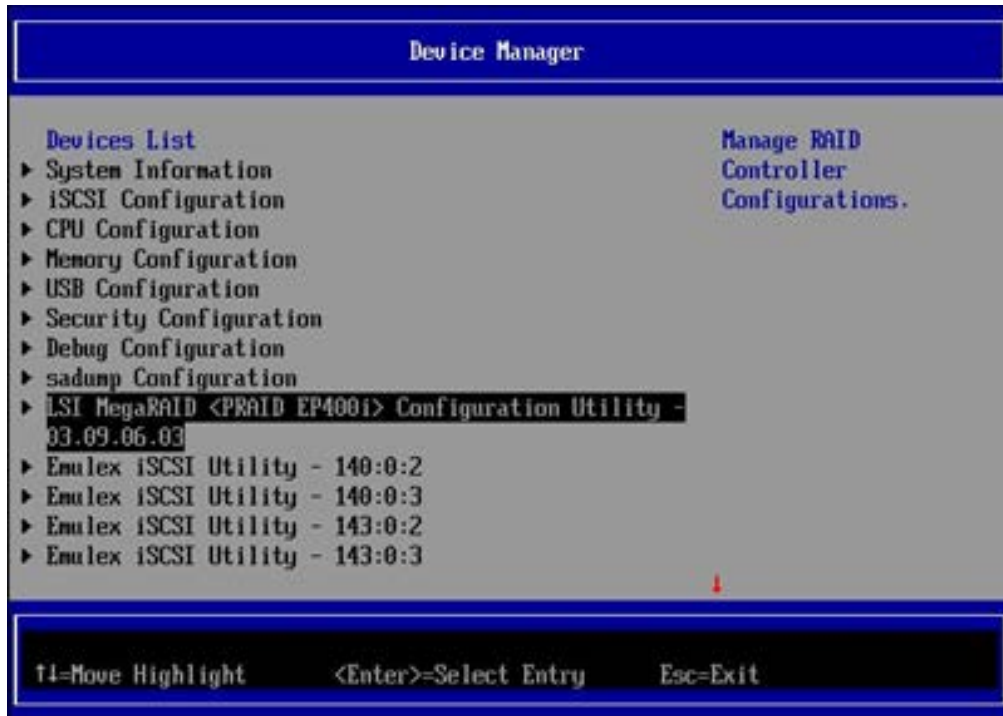

3. Select [Device Management] in HII Configuration Utility [Main Menu] window.

FIGURE F.0.9 HII Configuration Utility [Main Menu] window

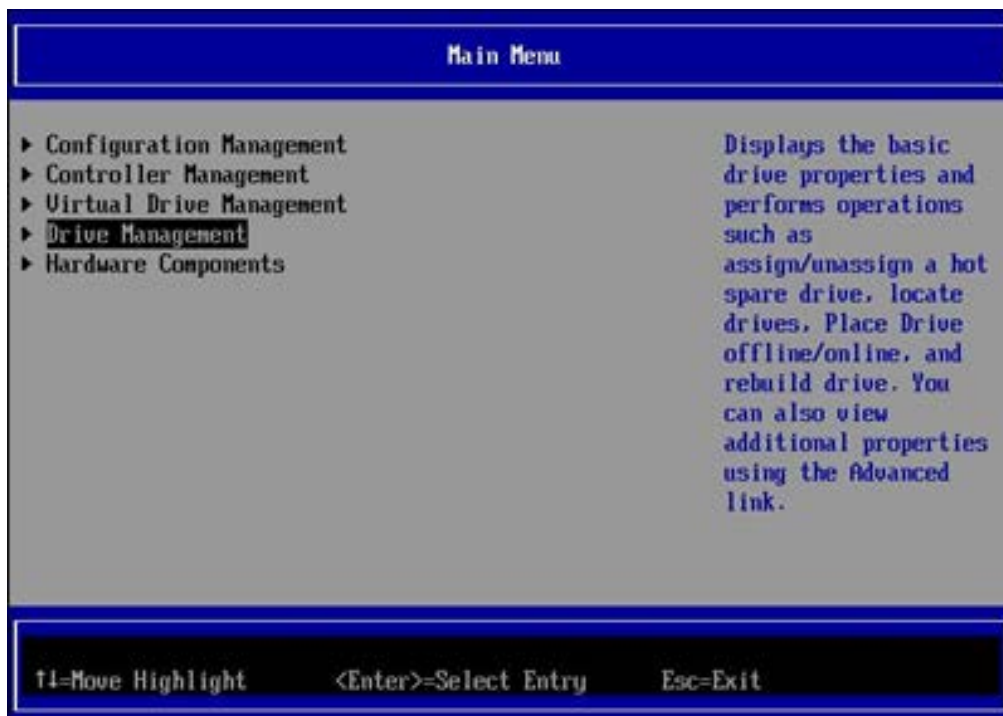

4. Select one HDD/SSD connected to the SAS RAID Controller.

FIGURE F.0.10 HII Configuration Utility [Device management] window



5. Select [Start Locate] in [Select operation] window.

FIGURE F.0.11 HII Configuration Utility [Select operation] window




6. Select [Go].

FIGURE F.0.12 HII Configuration Utility [Device Management] window



7. Select [OK].

FIGURE F.0.13 HII Configuration Utility [Success] window

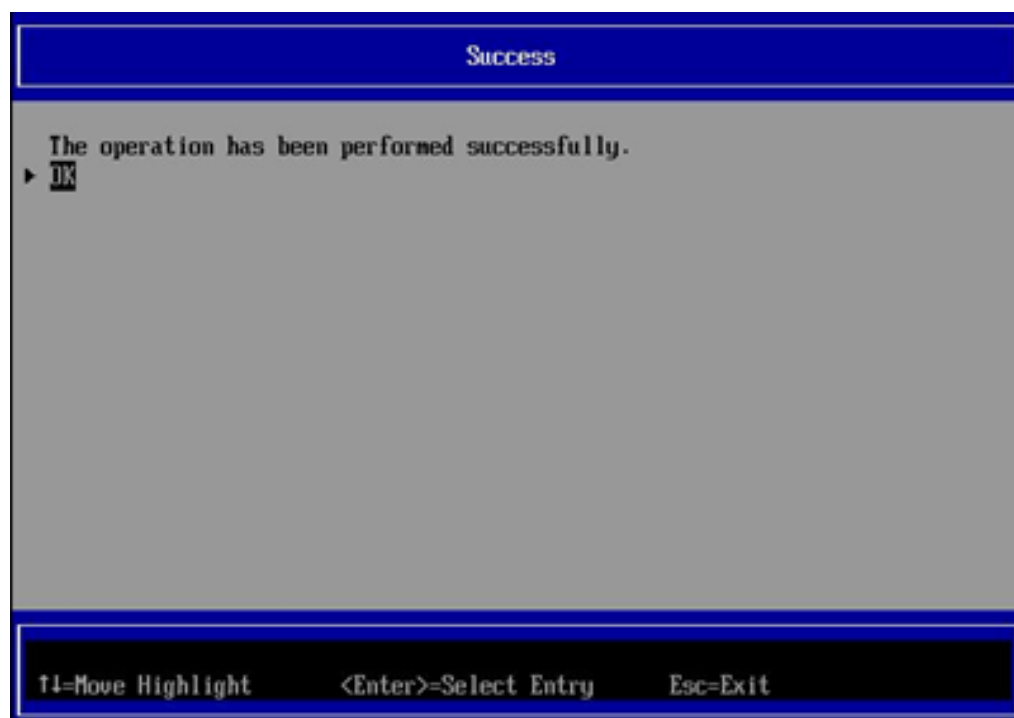

8. Search the SB with HDD/SSD blinked Alarm LED in chassis.
Alarm LED of HDD/SSD is orange LED located in HDD/SSD's upper right. The SAS RAID Controller mounted on the SB is SAS RAID Controller selected in [Device Manager] window.

FIGURE F.0.14 HII Configuration Utility [Main Menu] window



9. Turn off Alarm LED of HDD/SSD.
Select [Stop Locate] in [Select operation] window.

FIGURE F.0.15 HII Configuration Utility [Select operation] window




10. Select [Go]. Then, select [OK] in displayed window.

FIGURE F.0.16 HII Configuration Utility [Device management] window



11. Check Alarm LED of HDD/SSD has been turned off.
Then, press escape key several times until following window is displayed.
Press Y key or N key. Press N key when you execute only blinking and turning off Alarm LED.

FIGURE F.0.17 HII Configuration Utility [Main Menu] window

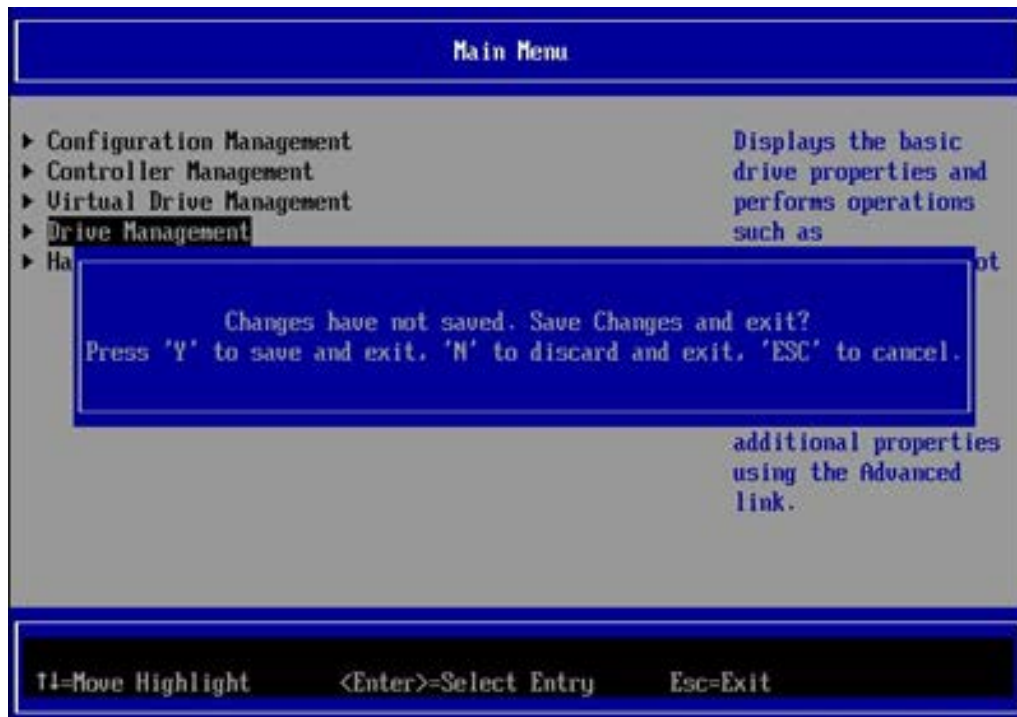

12. [Device Manager] window is displayed.

FIGURE F.0.18 [Device Manager] window




Appendix G Starting Web BIOS

This appendix describes how to start Web BIOS.

1. Select [Force boot into EFI Boot Manager] from [Boot Selector] in [Power Control] window of MMB Web-UI.


Partition is powered on and Boot Manager front page appears.

FIGURE G.1 Boot Manager front page (1)

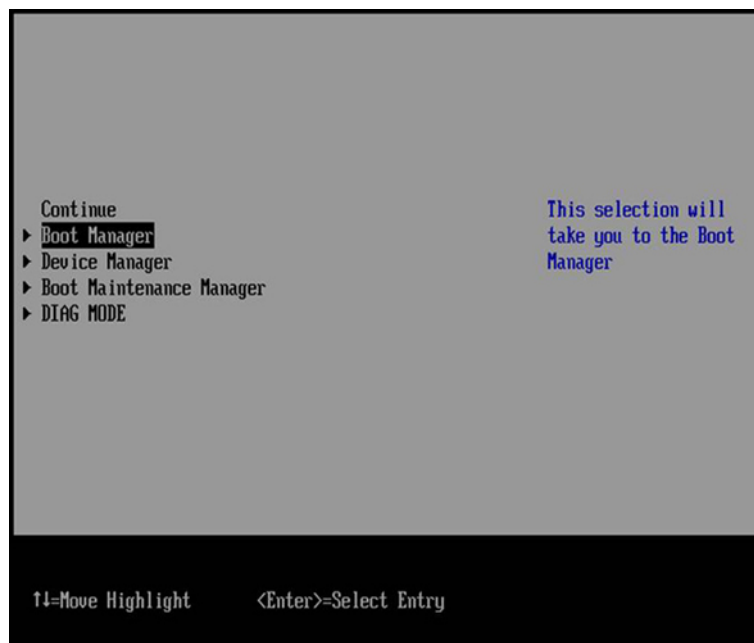

2. Select [Boot Manager] and press [Enter] key. [Boot Manager] window appears.

FIGURE G.2 Boot Manager front page (2)

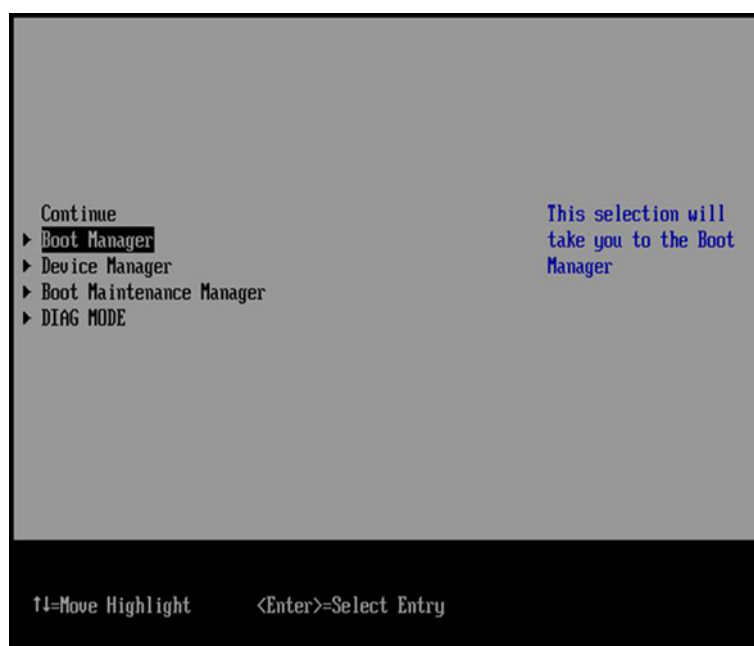

3. Select [EFI Internal Shell] and press [Enter] key. UEFI Shell starts up.

FIGURE G.3 Boot Manager menu




4. Input below command on UEFI Shell.

```
Shell> drivers
```

5. Driver list appears.

FIGURE G.4 Driver list

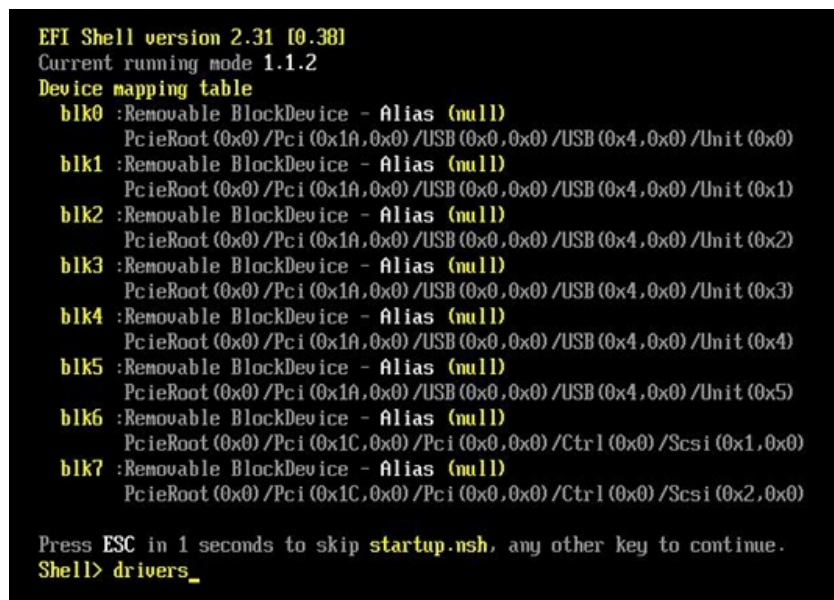

For details on UEFI operation, see “*PRIMEQUEST 2000 series User Interface Operating Instructions*” (CA92344-0538) and “*PRIMEQUEST 2000 series Tool Reference*” (CA92344-0539).

Note

If driver list does not fall within window, input ‘drivers -b’. Driver list is shown by a page.

6. Check the number of UEFI driver and the number of LSI EFI SAS Driver.
In below example, the number of UEFI driver is '126'.

FIGURE G.5 drivers command of UEFI Shell

```
Shell> drivers

          T D
          Y C I
          P F A
U  VERSION  E G G #D #C DRIVER NAME                IMAGE NAME
=====
7E FFFFFFFF ? - - - POST Watchdog Driver            PostWatchdogDriver
7F 00000000 ? - - - PCI UGA Mini Port Driver        UgaMiniPort
80 00000000 D - - 2 - Platform Console Management Driver ConPlatformDxe
81 00000000 D - - 2 - Platform Console Management Driver ConPlatformDxe
82 00000000 B - - 2 2 Console Splitter Driver        ConSplitterDxe
83 00000000 B - - 1 1 Console Splitter Driver        ConSplitterDxe
84 00000000 ? - - - Console Splitter Driver          ConSplitterDxe
85 00000000 B - - 2 2 Console Splitter Driver        ConSplitterDxe
86 00000000 B - - 1 1 Console Splitter Driver        ConSplitterDxe
8A 00000000 D - - 1 - Graphics Console Driver        GraphicsConsoleDxe
8B 00000000 ? - - - UGA Class Driver                 UgaClassDxe
8C 00000000 B - - 2 2 Serial Terminal Driver          TerminalDxe
8D 00000000 D - - 14 - Generic Disk I/O Driver        DiskIoDxe
8E 00000000 B - - 2 4 Partition Driver (MBR/GPT/El Torito) PartitionDxe
91 00000000 D - - 1 - PC-AT ISA Device Enumeration Driver IsaAcpi
92 00000000 B - - 1 6 ISA Bus Driver                  IsaBusDxe
93 00000000 B - - 2 2 ISA Serial Driver                IsaSerialDxe
126 06000300 B X X 1 2 LSI EFI SAS Driver             Offset(0xDA00.0x14)
141 06000300 B X X 1 2 LSI EFI SAS Driver             Offset(0xDA00.0x14)

Shell> _
```

7. Execute dh command and check the controller number of 'LSI MegaRaid SAS Control'

```
Shell> dh -d 126
```

In below example, the controller number is '125'.

FIGURE G.6 dh command of UEFI Shell

```
C4 00000021 B - - 1 1 G200e Matrox Graphics UEFI Driver FoFile(961578FE-B6
C5 05051900 B X X 1 1 Intel(R) PRO/1000 5.5.19 PCI-E    FoFile(EDB39419-A4
C6 03061600 B - X 2 2 Intel(R) 10GbE Driver 3.6.16 x64  FoFile(EDB39419-A4
CD FFFFFFF0 ? - - - Network Device Shadow Driver        LegacyNetworkShadow
xe
126 06000300 B X X 1 2 LSI EFI SAS Driver                Offset(0xDA00.0x14)
141 06000300 B X X 1 2 LSI EFI SAS Driver                Offset(0xDA00.0x14)

Shell> dh -d 126
126: Image(Offset(0xDA00.0x149FF)) ImageDevPath (..)Offset(0xDA00.0x149FF)
) DriverBinding Diagnostics Diagnostics2 ComponentName ComponentName2 Configurati
on Configuration2
Driver Name      : LSI EFI SAS Driver
Image Name       : Offset(0xDA00.0x149FF)
Driver Version   : 06000300
Driver Type      : BUS
Configuration    : YES
Diagnostics      : YES
Managing         :
Ctrl[125]       : LSI MegaRAID SAS 92B6CU-Be
Child[220]      : Logical Channel
Child[221]      : Physical Channel

Shell> _
```

8. Execute the `drvcfg -s XX YY` command.


Specify the following for [XX] and [YY].

- XX: UEFI driver number confirmed in step 2
- YY: Controller number confirmed in step 3

```
Shell> drvcfg -s 126 125
```

9. The window where you select either EFI WebBIOS menu or EFI CLI menu appears. Select [1 for EFI WebBIOS].

FIGURE G.7 selection of EFI WebBIOS / EFI CLI

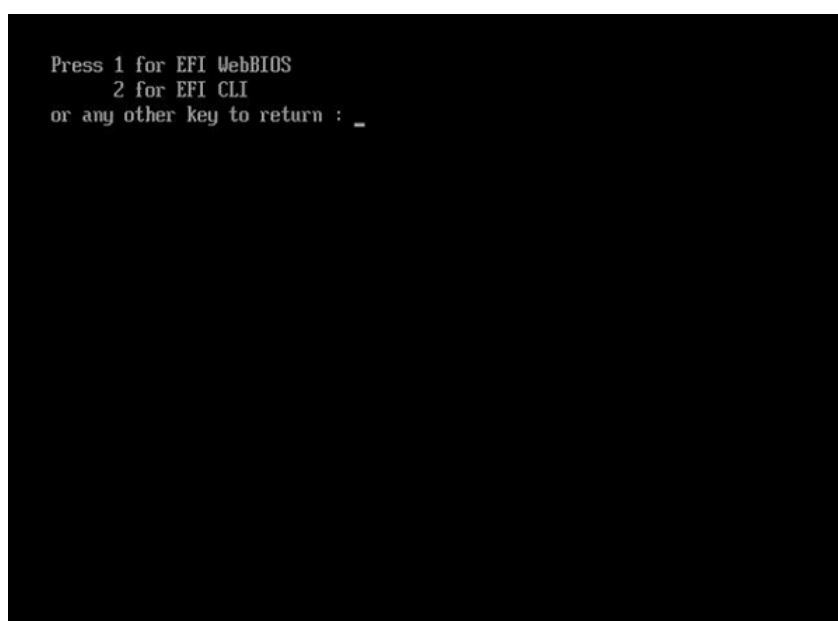

10. WebBIOS starts up.

The figure below is example of window of WebBIOS.

FIGURE G.8 [Adapter Selection] window of WebBIOS



Appendix H Allocation Order of PCI Bus Number

Allocation rule is that PCI Bus number is allocated from a PCI Express Port of CPU toward an end device in order of increasing device number. This is a standard implementation of PCI Bus.

Bus number is allocated in order of IOU#1 -> IOU#0 -> IOU#3 -> IOU#2.

When setting PCI address mode in "PCI Bus mode" and adding IOU to system which has started operation, we recommend adding IOU to low-priority slot so that it does not affect Bus number of the IOU which has been already allocated.

Allocation rule of PCI Bus number when IOU_1GbE is installed in partition

Allocation rule of PCI Bus number when IOU_1GbE is installed in partition is as follows. Numbers within [] show allocation priority of PCI Bus number.

IOU#1 (IOU_1GbE#1)

- [1] RAID Slot#1 in DU#0 (RAID Slot of side connecting with IOU_1GbE#1)
- [2] GbE -> PCIe Slot#0 -> PCIe Slot#1 -> PCIe Slot#3 in IOU_1GbE#1
- [3] PCIe Slots in PCI_Box connecting with PCI Slot#3 in IOU_1GbE#1 (*1)
- [4] PCIe Slot#2 in IOU_1GbE#1
- [5] PCIe Slots in PCI_Box connecting with PCI Slot#2 in IOU_1GbE#1 (*1)

IOU#0 (IOU_1GbE#0)

- [6] RAID Slot#0 in DU#0 (RAID Slot of side connecting with IOU_1GbE#0)
- [7] GbE -> PCIe Slot#0 -> PCIe Slot#1 -> PCIe Slot#3 in IOU_1GbE#0
- [8] PCIe Slots in PCI_Box connecting with PCI Slot#3 in IOU_1GbE#0 (*1)
- [9] PCIe Slot#2 in IOU_1GbE#0
- [10] PCIe Slots in PCI_Box connecting with PCI Slot#2 in IOU_1GbE#0 (*1)

IOU#3 (IOU_1GbE#3)

- [11] RAID Slot#1 in DU#1 (RAID Slot of side connecting with IOU_1GbE#3)
- [12] GbE -> PCIe Slot#0 -> PCIe Slot#1 -> PCIe Slot#3 in IOU_1GbE#3
- [13] PCIe Slots in PCI_Box connecting with PCI Slot#3 in IOU_1GbE#3 (*1)
- [14] PCIe Slot#2 in IOU_1GbE#3
- [15] PCIe Slots in PCI_Box connecting with PCI Slot#2 in IOU_1GbE#3 (*1)

IOU#2 (IOU_1GbE#2)

- [16] RAID Slot#0 in DU#1 (RAID Slot of side connecting with IOU_1GbE#2)
- [17] GbE -> PCIe Slot#0 -> PCIe Slot#1 -> PCIe Slot#3 in IOU_1GbE#2
- [18] PCIe Slots in PCI_Box connecting with PCI Slot#3 in IOU_1GbE#2
- [19] PCIe Slot#2 in IOU_1GbE#2
- [20] PCIe Slots in PCI_Box connecting with PCI Slot#2 in IOU_1GbE#2 (*1)

(*1) Allocation order of PCI Express slots in PCI_Box is as follows.

PCIe Slot#2 -> PCIe Slot#4 -> PCIe Slot#3 -> PCIe Slot#1 -> PCIe Slot#0 -> PCIe Slot#5
-> PCIe Slot#8 -> PCIe Slot#10 -> PCIe Slot#9 -> PCIe Slot#7 -> PCIe Slot#6 -> PCIe Slot#11

Allocation rule of PCI Bus number when IOU_10GbE is installed in partition

Allocation rule of PCI Bus number when IOU_10GbE is installed in partition is as follows. Numbers within [] show allocation priority of PCI Bus number.

IOU#1 (IOU_10GbE#1)

- [1] PCIe Slot#0 -> PCIe Slot#2 in IOU_10GbE#1
- [2] PCIe slots in PCI_Box connecting with PCIe Slot#2 in IOU_10GbE#1 (*2)
- [3] GbE in IOU_10GbE#1
- [4] RAID Slot#1 in DU#0 (a side connecting with IOU_10GbE#1)
- [5] PCIe Slot#1 in IOU_10GbE#1

IOU#0 (IOU_10GbE#0)

- [6] PCIe Slot#0 -> PCIe Slot#2 in IOU_10GbE#0
- [7] PCIe Slots in PCI_Box connecting with PCIe Slot#2 in IOU_10GbE#0 (*2)
- [8] GbE in IOU_10GbE#0
- [9] RAID Slot#0 in DU#0 (a side connecting with IOU_10GbE#0)
- [10] PCIe Slot#1 in IOU_10GbE#0

IOU#3 (IOU_10GbE#3)

- [11] PCIe Slot#0 -> PCIe Slot#2 in IOU_10GbE#3
- [12] PCI Slots in PCI_Box connecting with PCIe Slot#2 in IOU_10GbE#3 (*2)
- [13] GbE in IOU_10GbE#3
- [14] RAID Slot#1 in DU#1 (a side connecting with IOU_10GbE#3)
- [15] PCIe Slot#1 in IOU_10GbE#3

IOU#2 (IOU_10GbE#2)

- [16] PCIe Slot#0 -> PCIe Slot#2 in IOU_10GbE#2
- [17] PCIe Slots in PCI_Box connecting with PCIe Slot#2 in IOU_10GbE#2 (*2)
- [18] GbE in IOU_10GbE#2
- [19] DU#1 の RAID Slot#0 (a side connecting with IOU_10GbE#2)
- [20] PCIe Slot#1 in IOU_10GbE#2

(*2) Allocation order of PCI Express slot is same in case of IOU_1GbE.

Example

Example when IOU_1GbE and IOU_10GbE are mixed and installed in partition is shown. When IOU_10GbE#1 and IOU_10GbE#2 are included in partition, allocation order is as follows.

IOU#1 (IOU_10GbE#1)

- [1] PCIe Slot#0 -> PCIe Slot#2 in IOU_10GbE#1
- [2] PCIe Slot in PCI_Box connecting with PCIe Slot#2 in IOU_10GbE#1(*1)
- [3] GbE in IOU_10GbE#1
- [4] RAID Slot#1 in DU#0 (a side connecting with IOU_10GbE#1)
- [5] PCIe Slot#1 in IOU_10GbE#1

IOU#2 (IOU_1GbE#2)

- [6] RAID Slot#0 in DU#1 (RAID Slot of a side connecting with IOU_1GbE #2)
- [7] GbE -> PCIe Slot#0 -> PCIe Slot#1-> PCIe Slot#3 in IOU_1GbE#2
- [8] PCIe Slot in PCI_Box connecting with PCIe Slot#3 in IOU_1GbE#2 (*1)
- [9] PCIe Slot#2 in IOU_1GbE#2

[10] PCIe Slot in PCI_Box connecting PCIe Slot#2 in IOU_1GbE#2 (*1)

(*1) Allocation order of PCI Express slot in PCI_Box is as follows.

PCIe Slot#2 -> PCIe Slot#4 -> PCIe Slot#3 -> PCIe Slot#1 -> PCIe Slot#0 -> PCIe Slot#5

-> PCIe Slot#8 -> PCIe Slot#10 -> PCIe Slot#9 -> PCIe Slot#7 -> PCIe Slot#6 -> PCIe Slot#11

 **FUJITSU**